

## QUICK USER GUIDE

!!! Please refer to our website: [www.geemarc.com](http://www.geemarc.com) for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

**CAUTION:** Use only the battery provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. The battery cannot be subjected to high or low extreme temperature and low air pressure at high altitude during use, storage or transportation. Disposal of battery into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Leaving the battery in an extremely high temperature surrounding environment can result in an explosion or the leakage of flammable liquid of gas. Battery subjected to extremely low air pressure may result in an explosion or the leakage of flammable liquid or gas. Dispose of used battery according to the instructions.

Normal operating temperature for the product (e.g. 0 °C ~ 40 °C).

Use only the adapters and battery listed below.

 
Power adapter information: output: 6V DC 0.45A, 2.7W. Vtech Telecommunications Limited.

Model: VT05EEU06045 (EU), VT05EUK06045 (UK)

 
Rechargeable Battery Pack: Model: NI-MH AAA500x2. 2.4V, 500mAh. Corun.

Rechargeable Li-ion Battery: Model: GSP042535. 3.7V, 320mAh, 1.184 Wh. Guangzhou Great Power Energy & Technology CO., Ltd.

## Base

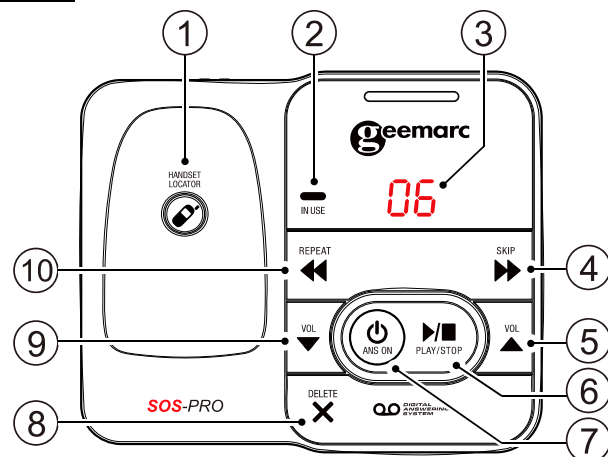 


## Handset

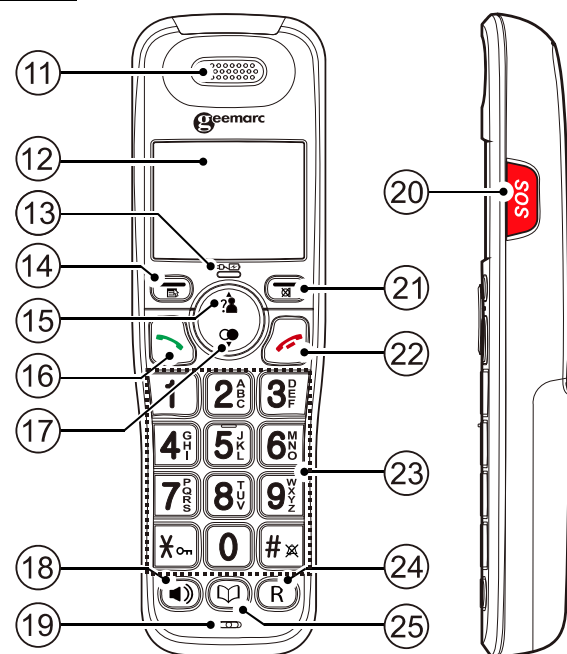 


1

## Alarm pendant (SOS-PRO295)

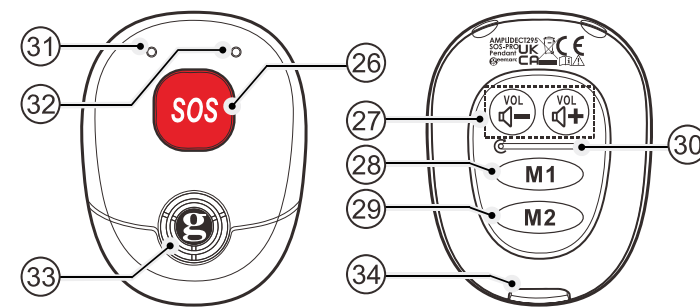

## Connection

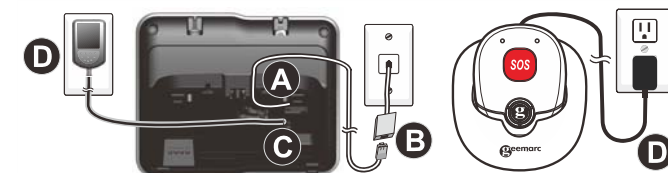

## PACKAGE CONTENTS

1 Telephone base, 1 cordless Handset, 1 power adapter, 1 Alarm pendant, 1 pendant charger, 1 lanyard with breakout clip, 1 Telephone line cord, 1 NiMH battery pack, 1 Quick user guide.

## INSTALLATION

### Connecting the telephone

Connect the telephone cable to the telephone line socket (A) and to the telephone wall socket (B).

Connect the power adapter jack to base (C) then connect the power adapter plug in mains power (D).

Note: Use only the power adapters supplied with the phone.

Charger: Connect the power adaptor of the pendant in main power (D).

### Connecting the battery

Plug the battery connector securely into the socket inside the handset battery compartment.

Insert the supplied battery as indicated. Align the cover flat against the battery compartment, and then slide it upwards until it clicks into place.

**At the first starting**, the phone will ask you **to select the language that you want**.

### Charging the batteries

Charge the batteries for at least 16 hours when charging for the first time for the handset and the alarm pendant.

## OVERVIEW

### Base

#### 1- /HANDSET LOCATOR

While the phone is idle, press to page all handsets.

#### 2- IN USE

ON when handsets are in use, or when the answering system is answering an incoming call.

ON when a handset is being registered.

Flashes when there is an incoming call or when handsets are being deregistered.

Flashes when another telephone is in use on the same line.

#### 3- MESSAGE COUNTER

Flashes when there is an incoming call.

#### 4- /SKIP : Press to skip a message.

#### 5- VOL ( )

During message playback, press to increase the listening volume. While in idle mode, press to increase the base ringer volume.

#### 6- /PLAY/STOP

Press to start or stop message playback.

#### 7- /ANS ON

Press to turn the built-in answering system on or off.

#### 8- /DELETE

Press to delete the message currently playing.

Long press to delete all old messages when the phone is not in use.

2

#### 9- VOL ( )

During message playback, press to decrease the listening volume. While in idle mode, press to decrease the base ringer volume.

#### 10- /REPEAT

Press to repeat a message.

Press twice to play the previous message.

## Handset

### 11. EARPIECE

### 12. LCD DISPLAY

### 13. CHARGE LIGHT ( )

Steadily on when the handset is charging in the charger.

### 14. MENU/OK ( )

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call list.

### 15. UP/CALL LIST ( )

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In phonebook list/redial list/call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

### 16. TALK ON ( )

In idle/pre-dial mode: Press to make a call in earpiece mode.

In phonebook/redial list/call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

### 17. DOWN/REDIAL LIST ( )

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In phonebook list/redial list/call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

### 18. SPEAKERPHONE ( )

In idle/pre-dial mode: Press to make a call in speakerphone mode. Press again to switch to earpiece mode.

In phonebook list/redial list/call list: Press to make a call to the selected entry in the list in speakerphone mode. Press again to switch to earpiece mode.

During ringing: Press to answer a call in speakerphone mode. Press again to switch to earpiece mode.

### 19. MICROPHONE

### 20. SOS

In idle mode: Press and hold for a second to enter the emergency calling sequence set in your handset.

In call mode: press and hold for 2 seconds to stop the emergency call.

### 21. CANCEL/MUTE ( )

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous menu.

In sub-menu mode: Press and hold to go back to idle screen.

In editing/pre-dial mode: Press to delete a character/digit.

In editing/pre-dial mode: Press and hold to delete all the characters/digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to intercom another handset.

### 22. TALK OFF ( )

During a call: Press to end a call and go back to idle screen In menu/editing mode: Press to go back to previous menu.

In menu/editing mode: Press and hold to go back to idle screen.

In idle mode: Press and hold to power off the handset.

Press and hold to power on when it is off.

### 23. ALPHANUMERIC KEYPAD, STAR ( ), HASH ( )

In predial or editing mode: Press to insert a digit / character / / .

key in idle mode: Press and hold to enable or disable the keypad lock.

3

key in idle mode: Press and hold to turn on/off the ringer.

key in idle/pre-dial mode/number editing mode: Press and hold to insert a pause.

### 24. R

During a call: Press to answer a new call if you subscribed to Call Waiting service from your service provider.

### 25. PHONEBOOK ( )

In idle mode: Press to access the phonebook.

## ALARM PENDANT

**26. SOS:** In idle mode, press to enter the emergency calling sequence set on your handset.

In call mode: press and hold for 2 seconds to stop the emergency call.

**27. / :** During a call: increase or increase the receiving volume level, during ringing: increase or decrease the ringer level.

Press and hold for 2 sec to do a flash to answer a second incoming call ringing.

**28. M1** dial the direct memory 1

**29. M2** dial the direct memory 2

### 30. RESET

### 31. Microphone

### 32. Led indicator

#### (Purple)

- Steady On: Un-register.

- Slow Flash: registered but the base is not available. Searching or out of range.

#### (Blue)

- Steady On: Seated in the base and fully charged.

- Steady on 3s and emit a long beep: Successfully registered.

- Double flashing: Off hook.

- Double flashing and on for 2s when just off hook: Off hook but the signal is weak. Hear 3 rapid beeps in every 10s.

- Short flashing: idle mode and off the charger, the pendant is in Standby mode.

- Long flashing: idle mode and off the charger. Continuously flashing: ringing and can be heard.

#### (Red)

- In continue on the charger: The pendant charges.

- Long flashing: The battery is low in using and we hear a short double beeps.

#### (Red/Blue)

- Pairing mode after to hold and press the leys **Vol(+)** and **Vol(-)** during 10sec.

### 33. LOUDSPEAKER

### 34. CHARGER CONTACTS

## MENU SETTING

**The phone settings are always set in the same manner:**

Press **Menu/OK** ( ) button to open the main menu. Then use the buttons to select an entry and confirm it by pressing the **Menu/OK** ( ) button.

The factory preset PIN code is 0000

### Example: Set the language on the handset

Press **MENU / OK** ( ), then select HS settings, press **MENU / OK** ( ), then select language, press **MENU / OK** ( ), then select desired language and then press **MENU / OK** ( ) to confirm.

## Handset

### PHONEBOOK

#### ► VIEW LIST

under an entry: ► ADD ► VIEW ► EDIT ► DELETE ► DELETE ALL ► PB STATUS ► FASTDIAL

### CALL LIST

#### ► VIEW LIST

under an entry: ► ADD TO PB ► DELETE ► DELETE ALL ► DETAILS ► CATEGORY

### BS SETTINGS

► BS RINGER ► RING VOLUME ► DELETE HS ► DIAL MODE ► FLASH TIME ► CHANGE PIN

4



**HS SETTINGS**

►RING SETUP ►TONE SETUP ►SELECT BASE ►LANGUAGE  
►RENAME HS ►HS DISPLAY ►AUTO ANSWER

**DIRECT MEM** ►M1-M2-M3-M4

**SOS SETTINGS** ►SOS NUMBER►SOS MESSAGE►LANGUAGE

**DATE & TIME**

►DATE FORMAT ►TIME FORMAT ►SET TIME ►SET DATE

**ALARM** ►ON ►OFF

**REGISTRATION** ►BASE 1, 2, 3 or 4

**DEFAULT** ►PIN? **0000** by default

**ANS. MACHINE**

►MSG PLAYBACK ►DELETE ALL ►MEMO ►TAM ON/OFF  
►TAM SETTINGS (ANSWER MODE, TAM LANGUAGE, OGM  
SETTINGS, ANSWER DELAY, RECORD TIME, COMPRESSION, BS  
SCREENING,REMOTE ACC, CHANGE PIN)

**HANDSET REGISTRATION**



**Note:** Handset, alarm pendant and base station are pre-registered.


Up to five handsets can be registered to a single base station.

In the case of re-registration, the PIN code is **0000**.

**Registration a handset**

**On Handset:** Press **MENU/OK**  select ▼▲ REGISTRATION

Press **MENU/OK**  select ▼▲BASE(1-4), Press **MENU/OK**  
 enter 4 digits PIN for the base PIN

At the same time on **Base:** press and hold  /**HANDSET LOCATOR**  
on the base to enter the registration mode.


 

 

After a short delay, if the registration is successful, there will be a confirmation beep, and the handset display will go back to idle mode with the new handset number shown. The base display will also go back to idle mode.

**Registration the Alarm pendant**


on **Base:** press and hold  /**HANDSET LOCATOR** on the base to  
enter the registration mode.

On Alarm pendant: Press and hold VOL+ together with Vol- until the LED on pendant toggling between red and blue. Place the pendant unit close to the charger. A long beep tone is generated and the LED is blue for a while if the registration is a success.

**De-Registration**

**On Handset:** Press **MENU/OK** , select ▼▲BS SETTINGS, press  
**MENU/OK** , select ▼▲DELETE HS, press **MENU/OK**  enter  
PIN **0000**, press **MENU/OK** , select ▼▲one of the handsets that  
you want to de-register, press **MENU/ OK**  to confirm.

**INTERCOM****Internal Call**



Press **C / MUTE** , Enter the desired handset number on keypad.

**NOTE:** If only one cordless handset is registered to the base station, internal call will not be available.

**Call All Handsets**

Press **C / MUTE** , Enter "9" on keypad.

**Transfer an External Call**

Press **MENU / OK** , select ▼▲INTERCOM, Press **MENU / OK**  


Enter the desired handset number on keypad.

After connection quit the call on handset.

**Conference Call**

Press **MENU/OK** , select ▼▲INTERCOM, Press **MENU/OK** 

Enter the desired handset number on keypad.

After connection press and hold  until CONFERENCE is shown.

**NOTE:** Any party hangs up during a conference call will leave the other party still in connection with the external call.


**PHONEBOOK**

Your phone can store up to 50 private phonebook in the cordless handset and the telephone base with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringer tones for your phonebook entries.


Phonebook entries are stored alphabetically by name.


**To add new entry**

In idle mode:

Press **MENU / OK** , select ▼▲PHONEBOOK to access the  
phonebook list (or empty),

Press **MENU / OK**  to select ADD.

Press **MENU / OK**  to select NAME, enter the name.

Press **MENU / OK**  to select NUMBER, enter number.


Press **MENU / OK**  and ▼▲ to select the desired ringtone for  
your phonebook entry.

Press **MENU / OK**  to save.

**DIRECT MEM**

Your AMPLIDECT295SOS-PRO base can also paired as additional handsets with some specific handset/device like our PhotoDECT295 or SOS-PRO295 pendant which need direct memory numbers programed in the base, and these numbers ( 4 maxi ) have to be added through the regular handset.

**On Handset:** Press **MENU / OK** , select ▼▲DIRECT MEM,


Press **MENU / OK** , select ▼▲M1-M2-M3-M4,

Press **MENU / OK** , enter number then OK.

 
**USE YOUR PENDANT****SOS Emergency calls****SOS Settings in Handset**

You need to set the SOS numbers before you can make SOS emergency calls using the pendant or handset.

**Using the handset:**

Press **LEFT SOFTKEY**  and ▲/▼ to select SOS SETTINGS.

Press **LEFT SOFTKEY**  to show SOS NUMBER.

Press **LEFT SOFTKEY**  and ▲/▼ to select the SOS number to edit  
(**SOS 1**, **SOS 2**, **SOS 3**, or **SOS 4**).

Press **LEFT SOFTKEY** and enter a new number or edit the number stored already.

Press **LEFT SOFTKEY**  to confirm or **RIGHT SOFTKEY** to delete.

**Make SOS Emergency Calls****Using the pendant:**

Press **SOS key** on the pendant to enter the emergency calling sequence from the **SOS 1** number to **SOS 4** number (cycling 3 times). A call will be first dialed to the **SOS 1** number. If the **SOS 1** number does not answer in 60 seconds, the call be will made to the **SOS 2** number, and so on.

**Using the handset:**

Press and hold **SOS key** on the handset to enter the emergency calling sequence from the **SOS 1** number to **SOS 4** number. A call will be first dialed to the **SOS 1** number. If the **SOS 1** number does not answer in 60 seconds, the call be will made to the **SOS 2** number, and so on.

**Note:** The other party receiving the SOS message must press \* and any number on their phone to open the SOS call. Thereafter by pressing any number on their phone every two minutes will keep the emergency call open.

**Record SOS Messages**

You can record your customized SOS message to be played when you dial out an SOS emergency call otherwise the default message will be played.

**Using the handset:**

Press **LEFT SOFTKEY**  and ▼/▲to select SOS SETTINGS.

Press **LEFT SOFTKEY**  and / to select SOS MESSAGE.

Press **LEFT SOFTKEY**  and ▼/▲ to select RECORD MSG.

Press **LEFT SOFTKEY** to start SOS message recording and

"RECORDING" will be displayed.

Press **LEFT SOFTKEY**  save your SOS message.

**Play SOS Messages****Using the handset:**

Press **LEFT SOFTKEY**  and / to select SOS SETTINGS.

Press **LEFT SOFTKEY**  and / to select SOS MESSAGE.

Press **LEFT SOFTKEY** to show PLAYBACK.

Press **LEFT SOFTKEY** to start SOS message playback.


Press **LEFT SOFTKEY** to stop SOS message playback.

**Direct Memory Keys**

You can store direct memory numbers (**M1** and **M2**) in the handset. Then, you can dial them directly from idle mode using the pendant.

**Set Direct Memory Keys in Handset**

Press **LEFT SOFTKEY**  and / to select DIRECT MEM.

Press **LEFT SOFTKEY**  and / to select the memory key to edit (**M1** or **M2**).

Press **LEFT SOFTKEY** and enter a new number or edit the number stored already.


Press **LEFT SOFTKEY**  to confirm.

**Make Calls using Direct Memory Keys****Using the pendant:**

Press **M1** or **M2** to dial the direct memory number stored in the handset.


**ANSWERING MACHINE**

Your telephone base includes a telephone answering machine that records unanswered calls when it is on. The answering machine can store up to 59 messages within the maximum recording time of approximately 15 minutes. As well as recording incoming messages, you can record memos for other users of your phone.

Press  /**ANS ON/OFF** to switch the answering machine ON or OFF.

**REMOTE OPERATIONS**

If you are away from your home, you can call your answering machine to switch on or off the answering machine and listen to your messages remotely using another tone-dialing phone.

- Place a call from a tone-dialing phone.
- When the answering machine answers the call and starts playing OGM, press .
- Enter the 4-digit Remote Access PIN (default PIN is **0000**).
- Press the following keys to carry out your desired function.

key	Functions	
	While message is not playing	While message is playing
<b>2</b>		Delete the current message playback
<b>4</b>		Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
<b>5</b>	Play the message	
<b>6</b>		Skip forward to play the next message
<b>7</b>	Turn on the answering machine	
<b>8</b>		Stop the current message playback
<b>9</b>	Turn off the answering machine	
*	Enter the 4-digit remote access PIN	

**NOTE:**

 
 
When your answering machine memory is full and the answer mode is in ANS & RECORD, the answer mode will change to ANSWER ONLY automatically.

It will change to ANS & RECORD mode automatically after some messages have been deleted.

You cannot delete new messages before they were listened.

**TECHNICAL SPECIFICATIONS**

Basic Information	
Handset Valid Range	Indoor: 50m / Outdoor:300m
Pendant Valid Range	Indoor: 30m / Outdoor: 200m

Handset Operating Time	Standby time: 100 hours approx. Talk time: 10 hours approx.
Pendant Operating Time	Standby time: 180 hours approx. Talk time: 6 hours approx.
RF Parameter	
Frequency	1.88 GHz to 1.9GHz
Nb Channels	10
RF power	< 250mW
Power Supply	
Base	Input 100-240V 50/60Hz; output DC 6V  0.45A, 2.7W adapter
Charger	Input 100-240V 50/60Hz; output DC 6V  0.45A, 2.7W adapter
Handset	2.4V; 500mAH rechargeable NiMH battery pack

**GUARANTEE**

From the moment your Geemarc AMPLIDECT295 SOS-PRO is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at [www.geemarc.com](http://www.geemarc.com).

The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT :** YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

**Please note: The guarantee applies to the United Kingdom only.**

**DECLARATIONS:****UKCA Directives**

Geemarc Telecom SA hereby declares that this AMPLIDECT295 SOS-PRO is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

*The UKCA declaration of conformity may be consulted at [www.geemarc.com](http://www.geemarc.com)*

**Recycling Directives**

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.

- Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at

[www.geemarc.com](http://www.geemarc.com)

E-mail : [help@geemarc.com](mailto:help@geemarc.com)

telephone **01707 387602**

lines are open 09h00 to 16h00 Mon to Fri  
2 rue Galilée, Parc de l'étoile, 59791 Grande-Synthe Cedex,  
France.

**Manufacturer:** Vtech (Dongguan) Telecommunications Limited.  
Vtech Science Park, Xia Ling Bei Management Zone, Liaobu, Dongguan,  
Guangdong.

This product is made in China To Geemarc Telecom

