

Sonic Alert

Sonic Boom Dual Alarm Clock with Bed Shaker

Model SBD375ss



OPERATION INSTRUCTIONS


IMPORTANT – Please read these instructions carefully before use and retain for future reference. See operating instructions on back.
- Use only the supplied or recommended Sonic Alert adaptor to connect the unit.

Warning: To prevent fire or shock hazard do not expose this appliance to rain or moisture. Before connecting to mains/ power make sure that the requirements specified on the apparatus corresponds to the available power supply in that country i.e. AC100-240V~, 50/60 Hz.

- The ventilation should not be impeded by covering the ventilation openings with items such as, newspaper, table cloth, curtains, etc;
- No naked flame sources, such as lighted candles should be placed on the apparatus.
- It shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- Do not place the product in closed bookcases or racks without proper ventilation.
- Where the mains/ power plug is used as the disconnect device, the disconnect device shall remain readily operable.

GENERAL DATA

UL listed Power Adaptor: AC100-240V~, 50/60Hz

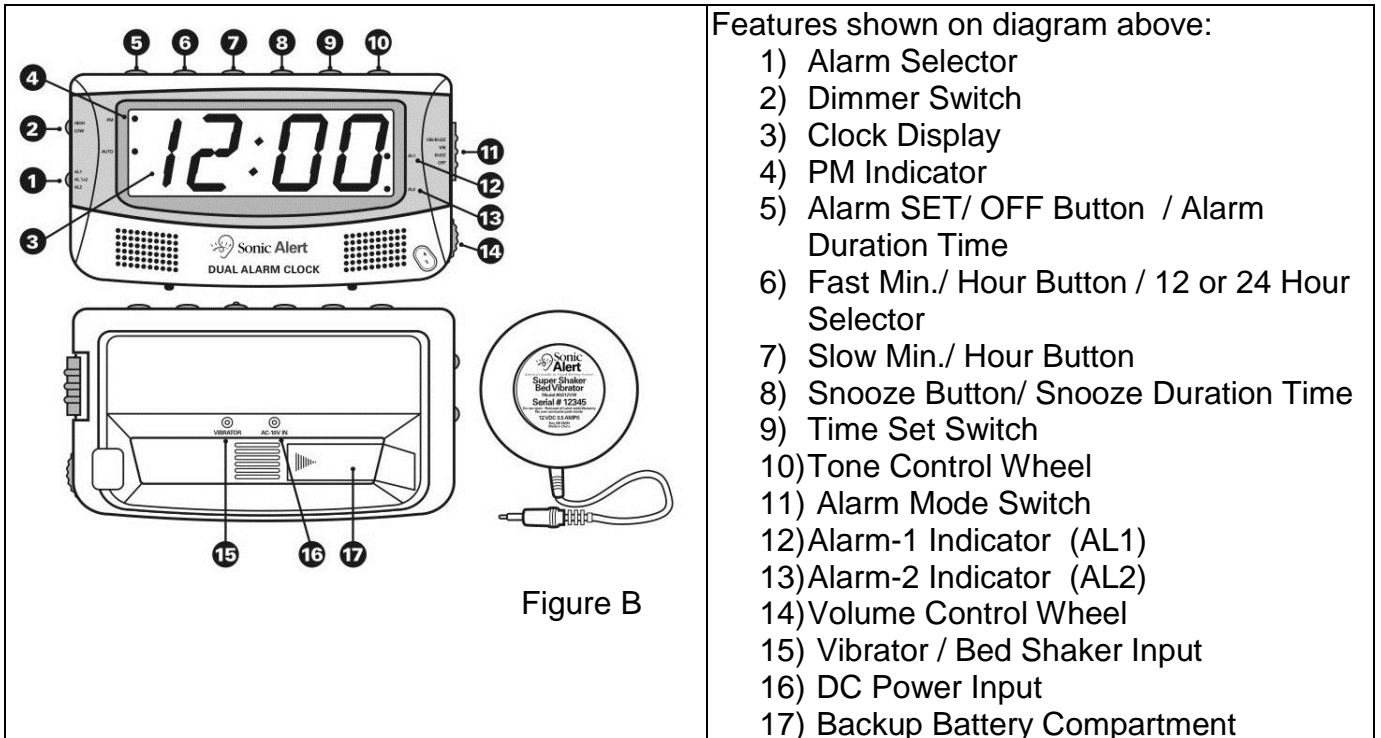
Power Consumption: Adaptor Output: DC9V , 650mA

Test Mode:

- 1) Press and hold the Snooze and Time buttons for 3 seconds to enter the Test Mode. The display will show "7ES7" to indicate it is in TEST Mode.
- 2) If within 1 minute no button is pressed, then it will exit the Test Mode and return back to the Time Mode.
- 3) Press any button within 1 minute (except the Snooze & Time buttons, which has no effect), it will exit the Test Mode immediately.
- 4) While in Test Mode, sliding the Function Switch will demonstrate the different functions of the clock:

- a) Function Switch at OFF, it will have a continuous "Vee" sound to indicate it is in the Test Mode.
- b) Function Switch at BUZZ, it will demonstrate the buzzer sound.
- c) Function Switch at VIB, it will demonstrate the vibrator.
- d) Function Switch at VIB & BUZZ, it will demonstrate the buzzer sound & the vibrator.
- 5) After finish with the Test Mode, press any button (except the Snooze & Time buttons, which has no effect) it will exit the Test Mode immediately.

OPERATION INSTRUCTIONS



Features shown on diagram above:

- 1) Alarm Selector
- 2) Dimmer Switch
- 3) Clock Display
- 4) PM Indicator
- 5) Alarm SET/ OFF Button / Alarm Duration Time
- 6) Fast Min./ Hour Button / 12 or 24 Hour Selector
- 7) Slow Min./ Hour Button
- 8) Snooze Button/ Snooze Duration Time
- 9) Time Set Switch
- 10) Tone Control Wheel
- 11) Alarm Mode Switch
- 12) Alarm-1 Indicator (AL1)
- 13) Alarm-2 Indicator (AL2)
- 14) Volume Control Wheel
- 15) Vibrator / Bed Shaker Input
- 16) DC Power Input
- 17) Backup Battery Compartment

Setting the Correct Time –

- 1) Press and hold the **“TIME“ Button (9)** and at the same time press the **“FAST“ Button (6)** or the **“SLOW“ button (7)** to advance clock display until you have desired time.
- 2) The **lighted dot (4)** located in upper left corner of the clock display indicates the time is PM. For AM time, this dot will not light up.

Setting the Alarm Time–

Setting Alarm 1

- 1) Slide the **“ALARM SELECTOR“ (1)** to AL1 position, the alarm indicator **“AL1“ (12)** will light up.
- 2) Press and hold the **“ALARM SET /OFF“ (5)** button and at the same time press the **“FAST“ Button (6)** or the **“SLOW“ button (7)** to advance clock display until you reach desired alarm setting.
- 3) Make sure alarm time is correctly set for AM or PM (4).

Setting Alarm 2

- 4) Once alarm AL1 has been set, slide **“ALARM SELECTOR“ (1)** to AL2 position. , the alarm indicator **“AL2“ (13)** will light up.
- 5) Slide the **“ALARM SELECTOR“ (1)** to AL2 position, the alarm indicator **“AL2“ (13)** will light up.
- 6) Press and hold the **“ALARM SET /OFF“ (5)** button and at the same time press the **“FAST“ Button (6)** or the **“SLOW“ button (7)** to advance clock display until you reach desired alarm setting.

Selecting 12 or 24 hours format

– Clock is set to 12 hour for UK, and Clock is set to 24 hour for Europe

Press and hold the **Fast Button (9)** for 6 seconds to enter the hour selection mode, release the **Fast Button (9)** when the display shows "12 H" or "24 H". Press and release the hour button to toggle between 12 or 24 hours. If no selection is made within 4 seconds, then the last displayed hour format will be chosen and the display will return to the normal Time mode.

Alarm –

Enable Alarms:

- 1) To enable Alarm 1, slide the "**ALARM SELECTOR**" (1) to AL1 position. the alarm indicator "**AL1**" (12) will light up.
- 2) To enable Alarm 2, slide the "**ALARM SELECTOR**" (1) to AL2 position, the alarm indicator "**AL2**" (13) will light up.
- 3) To enable both alarms, slide the "**ALARM SELECTOR**" (1) to AL2 position, the alarm indicators "**AL1**" (12) and "**AL2**" (13) will light up.

To Select Wake up mode

To select the wake up mode, slide the "**Alarm Mode Switch**" (11) to your desired position:-

a) "BUZZ" for sound b) "VIB" for bed shaker c) "VIB/ BUZZ" for both sound and bed shaker

NOTE: once the wake up mode is chosen, this will apply to both alarms.

Alarm Patterns –

When the alarm is activated, alarm pattern of the buzzer / flashing display will be out of sync with the vibrator. This means that when the buzzer / flashing display is ON, the vibrator will be OFF and while the buzzer/ flashing display is OFF, the vibrator will be ON.

ALARM 1 - When Alarm 1 is activate, it will have 3 beeps for buzzer, then the vibrator. This pattern is repeated until the alarm is stopped.

ALARM 2 - When Alarm 2 is activate, it will have 4 beeps for buzzer, then the vibrator. This pattern is repeated until the alarm is stopped.

Adjusting The Alarm Duration Time

The default alarm duration time setting is 30 minutes; you may adjust the alarm duration between 1 minute and 59 minutes as desired. To adjust the alarm duration:

- Press and hold the **AL. SET button (5)** for six seconds. The clock display will show the default alarm duration as '30'. Release the AL set button
- Press the "**SLOW**" **button (7)** to adjust the alarm duration to the desired setting, from 1 minute to 59 minutes.
- When the display is showing the desired alarm duration time, it will return to the normal clock mode after 3 seconds. The new alarm duration time setting becomes the new default and remains in the memory until you change it again.

Snooze Operation –

1. When the alarm turns on in the morning you may press the **SNOOZE Button (8)** to stop the alarm temporarily. The alarm will shut off for 9 minutes or for the predetermined time you select from 1-30 minutes, and then turn on again. The snooze operation may be repeated indefinitely until the alarm is turned off.
2. The SNOOZE function of Alarm 1 and Alarm 2 is independent of each other.

Adjusting The Snooze Time

The default snooze time setting is 9 minutes but you may adjust the snooze time between 1 minute and 30 minutes as desired. To adjust the snooze time:

- Press and hold the **SNOOZE Button (8)** for four seconds. The clock display will show the default snooze time '9'. Release the snooze button
- Press the "**SLOW**" **Button (7)** to adjust the snooze time to the desired setting, from 1 minute to 30 minutes.
- When the display is showing the desired snooze time, it will return to the normal clock mode after 3 seconds. The new snooze time setting becomes the new default and remains in the memory until you change it again.

Shutting Off the Alarm –

Alarm can be shut off temporary for the day or permanently shut off.

- 1) When alarm goes off, press the “**ALARM SET/OFF**” (5) button to turn off for the day and come back on at the same time the next day, if alarm settings have not changed.
- 2) To shut the alarm off permanently, slide the “**Alarm Mode Switch**” (11) down to the OFF position. The alarm will not come on until the “**Alarm Mode Switch**” (11) is set to “VIB/BUZZ”, “VIB”, or “BUZZ” position.

NOTE: The Alarm Off function of Alarm 1 and Alarm 2 is independent of each other.

Volume Control –

- 1) To adjust the volume, rotate **VOLUME wheel** (12) located on the lower right corner of the clock.

Tone Control –

- 1) To adjust the TONE, turn the **TONE wheel** (10) located on the top right corner of the clock.

Bed Shaker / Vibrator –

- 1) Attach the bed shaker jack to the back of clock at “**VIBRATOR INPUT**” (15).
- 2) To turn on vibrator slide “**Alarm Mode Switch**” (11) to “VIB/BUZZ” or “VIB” position.
- 3) Place vibrator between mattress and box spring.

Battery Backup –

To use the battery backup, you can install a 9-volt alkaline battery in the back of the clock located under the **Battery Compartment Cover** (17). The battery needs to be purchased separately.

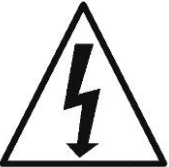

Note the LED display will not show during power failure but the clock will still be running and keeping proper time until the power comes back. During a power failure, the alkaline battery can only keep the clock IC running for up to 30 days. **(During a Power failure, the LED display will not show the time.)**

NOTE: For the best results it is recommended that the battery be changed every 6 months. If the clock is not used for a while, it is recommended to remove the battery to avoid damage to the clock from battery leakage.

DC 9V Power Input –


Attach the “**DC POWER INPUT**” (16) to the back of DC9V IN next to “**VIBRATOR INPUT**” (15); it is the smaller input of the two.

NOTE: IMPORTANT: do not confuse “**DC POWER INPUT**” (16) with the “**VIBRATOR INPUT**” (15)

 <p>The Lightning flash and arrowhead within the triangle is a warning sign alerting you of dangerous voltage inside the product.</p>	<p>CAUTION: TO REDUCE THE RISK OF ELECTRICAL SHOCK, DO NOT REMOVE THE COVER (OR BACK) FROM THE PRODUCT. NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO YOUR SONIC ALERT DEALER.</p>	 <p>The exclamation mark within the triangle is a warning sign alerting you of important instructions accompanying the product.</p>
--	--	--

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the instruction manual. In case the function could not resume, please use the product in other location.



- Attention should be drawn to the environmental aspects of battery disposal.
-  this indicating separate collection for electrical and electronic equipment.

SONIC ALERT'S 1 YEAR LIMITED WARRANTY

The Sonic Boom Alarm Clock Model SBD375ss is warranted against manufacturing defects in materials and workmanship for one (1) year from the date of purchase. Within this period Sonic Alert will repair or replace at our option the SBD375ss without charge for parts and labor. Simply contact our customer service department to obtain an RA (return authorization number) and instructions on how to process your product for return. You'll need a copy of your receipt to process the return authorization.

5 Swallow Court, Swallowfields, Welwyn Garden City,
Hertfordshire, AL7 1SB.

Recycling & the WEEE directive

<p>At the end of their useful life, the packaging, product and batteries should be disposed of via a suitable recycling centre. Do not dispose of with your normal household waste. Do not burn.</p>	
<p>Recycling All plastic and metal parts are recyclable. The printed circuit board may be sent to any PCB recovery contractor to recover some of the components for any metals such as gold and silver. Local recycling: your local library or district council will also have information about recycling in your area.</p>	
<p>WEEE stands for Waste Electrical and Electronic Equipment The Directive aims to reduce the waste arising from electrical and electronic equipment; and improve the environmental performance of all those involved in the life cycle of electrical and electronic products.</p>	

Distributed by :  **United Kingdom**

5 Swallow Court, Swallowfields, Welwyn Garden City,
Hertfordshire, AL7 1SB,
For product support: 01707 384438
www.geemarc.com

