

Amplified cordless telephone



English

AMPLIDECT™285

CONTENTS

Contents	1
Introduction	3
Unpacking	4
Description	5
General Description	5
Key Description	10
LCD Window Icons Description	13
Connecting Lines	15
Installing Batteries.....	15
Charging Handset	17
Using Handset Carrying Clip.....	18
Using Headset (optional)	19
Wall Mounting	19
Turning Handset On/Off	20
Basic Functions	22
Making a call	22
Receiving a call	23
Muting the Microphone	24
Amplification & Tone function	24
Ringer Setting	25
Last Number Redial	26
CID Book.....	28
Torch	32
key lock	32
Auto Answer.....	33
Selecting a Language	34
HS Name.....	34
Range Alarm	35

CONTENTS

Paging	36
Dial Mode	37
Handsfree.....	37
Flash Signal	38
Advanced Functions.....	39
Menu Navigation	39
Menu Map	40
Phone Book	41
One-Touch Memories	45
BS Settings	47
HS Settings	50
Registration.....	56
Calling with more than one Handset.....	57
Caller ID on call waiting	60
TAM Functions(AMPLIDECT™285only).....	61
Announcement	61
Message	65
TAM Setting	68
Remote Control	72
Feature List.....	74
Troubleshooting.....	77
Answering System Solutions(AMPLIDECT™285only) .	78
Technical Specifications	79
Safety Information	81
Guarantee	83
Recycling Directives.....	85

INTRODUCTION

Congratulations on purchasing your Geemarc AD280-285 telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications-DECT standard) together with an easy to see big button keypad, ideal for those who suffer with poor sight. This telephone is also hearing aid compatible.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:
AD280-285



AMPLIDECT™ 285

INTRODUCTION

Unpacking

When unpacking the telephone, you should find the following in the box:

- AD280-285 handset
- AD280-285 base
- Mains power adaptor
- AAA Ni-MH Batteries
- Telephone line cord
- Carrying clip
- User Guide

* The shape of the plugs can vary according to each country's specification.



For product support and help visit our website at

www.geemarc.com


Telephone 01707 384438

Or fax 01707 832529

DESCRIPTION


General Description

Handset Description (front)

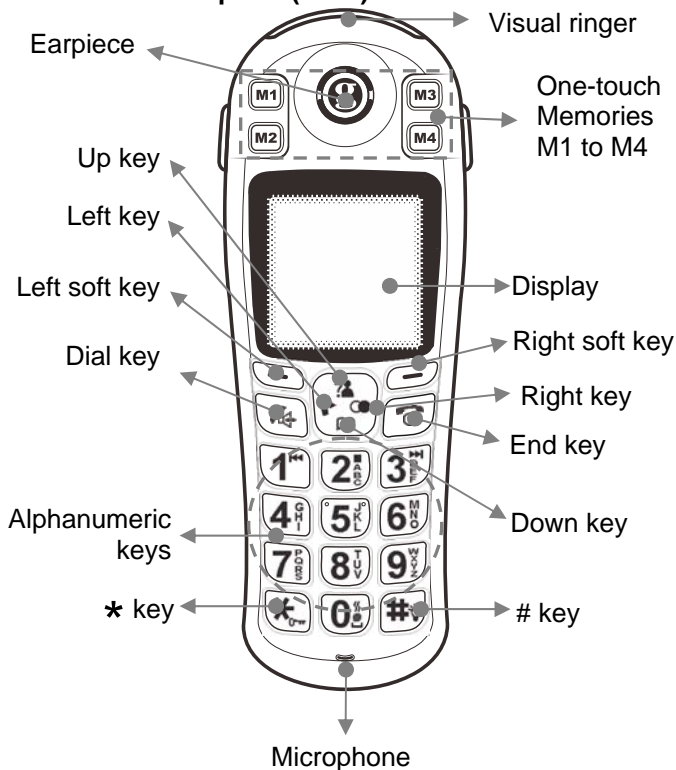


DESCRIPTION

Handset Description (Rear)

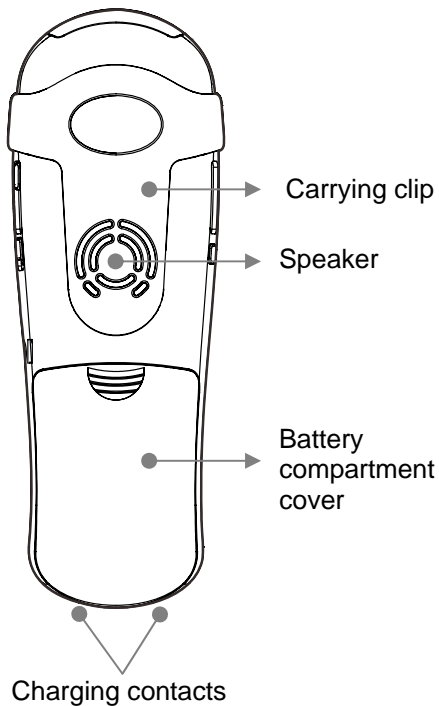

DESCRIPTION

Handset Description (Side)

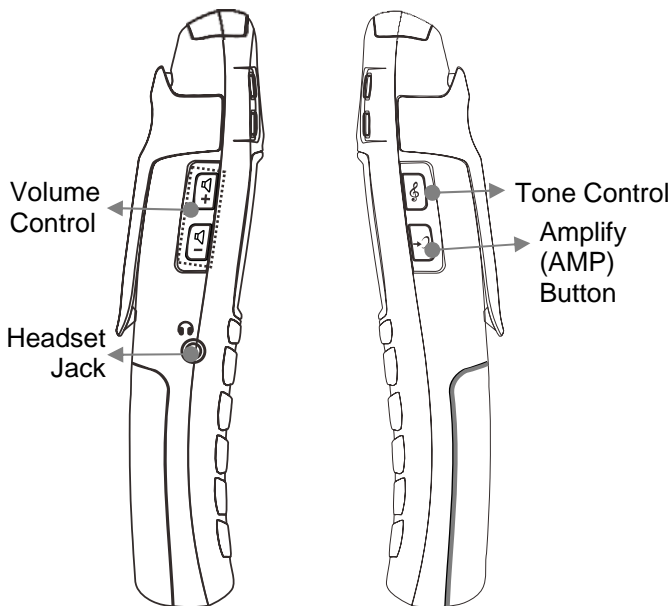


AMP : Extra amplification on handset up to 15dB

Vol +/- : Adjustable volume control with the headset or on handsfree mode


Tone : Adjustable tone control (Hi/Normal/Low)

DESCRIPTION

Base Description (Top) : AMPLIDECT™ 285

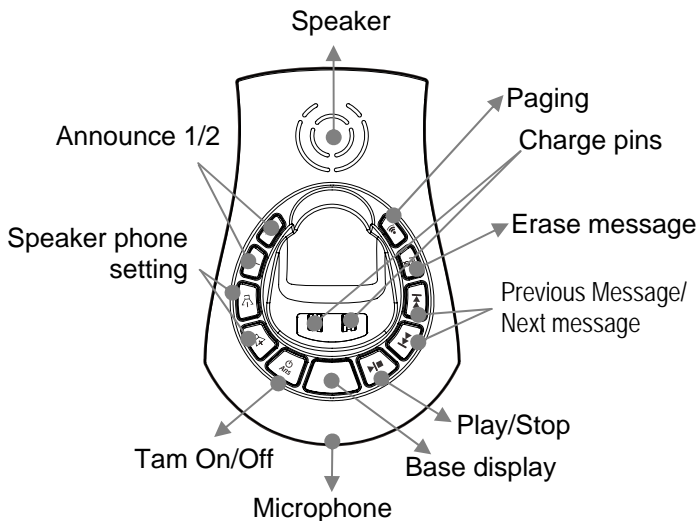


Base Description (Base)

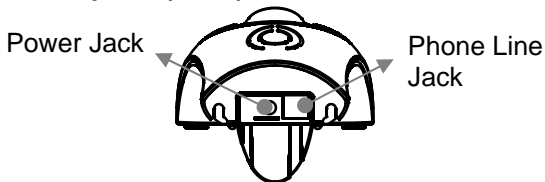

DESCRIPTION



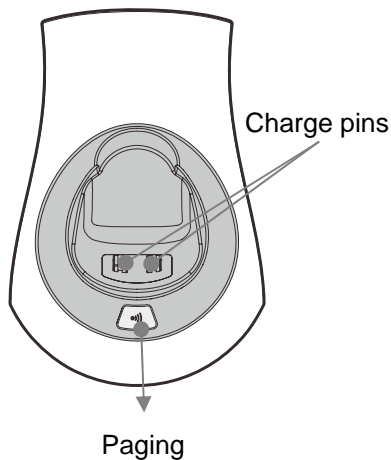


Base Description (Top) : AMPLIDECT280™











DESCRIPTION

Keys Description




Handset

	Dial key Make/Answer a call.
	End key End a call. Long press to activate power on/off, as described in page 20.
	Navigation key:  Up key Scroll up through lists and menu options. Increase the earpiece/speakerphone volume during a call. Enter the CID book, as described in page 29.  Down key Scroll down through lists and menu options. Decrease the earpiece/speakerphone volume during a call. Enter the Phone book, as described in page 43.






DESCRIPTION

	 Left key Set up an internal call to another handset. Transfer an incoming call to another handset. Set up a conference call with an external line and an internal handset.
	 Right key Enter the redial book, as described in page 27. Insert a pause when pre-dialing a number.
 	Left/Right soft key Perform the functions indicated by the text immediately above the key (on the bottom line of the display) which changes dependant on the context.
	 key Press and hold to turn on/off keypad lock function. Set up a conference call, as described in page 61.
 	One-touch memories Press and hold to turn on/off keypad



DESCRIPTION

	lock function. Set up a conference call, as described in page 61.
	 key In Standby mode press and hold this key until the  icon appears to activate the shaker and visual ringer function. Press and hold this key again until the icon disappear to deactivate it.






Base (AMPLIDECT™285 only)

	Answer on/off key Press to turn on or off the answer-record feature and the phone announces " Answer on " or " Answer off ".
 	Annc1/Annc2 key Press to start playing the Announce1 or Announce2. Press and hold to record the Announce1 or Announce2.
	Play/Stop key Press to start or stop the message or Memo playing.
	Del key When playing an ICM (incoming message),






DESCRIPTION

	press and hold to delete the current message. In the active mode (all lights on) press and hold this key to delete all the messages.
	Repeat/Skip key Press to play the current or next message. (Press the Repeat key twice to play the previous message.)
	Volume up/down key When playing announcement or messages, press to increase or decrease the relevant volume.

LCD Window Icons Description

	New Call Indicates you have missed one or more calls.
	MSG Waiting Indicates you have one or more voice messages.
	Off Hook Indicates the line is engaged.
	Hands-free Indicates the handsfree function is enabled.
	Battery Icon Indicates battery charge level.


DESCRIPTION

	Shaker Icon Indicates the shaker and visual ringer is enabled.
	Signal Icon Indicates the current signal strength. If the handset is too far from the base, this icon will blink on the LCD.
	Alarm Icon This icon appears when you set an alarm to ring at a specified time.
	Keypad Lock This icon appears when the keypad is locked.
	ICM Icon (AMPLIDECT285™ only) This icon appears when you have new message(s) in your answering machine.

INSTALLATION

Connecting Lines

1. Connect one end of the phone line cord to the phone line jack of the base, and the other end to a standard phone wall outlet.
2. Connect the modular end of the AC power adapter to the power jack of the base, then plug the AC adapter into a standard AC wall outlet.

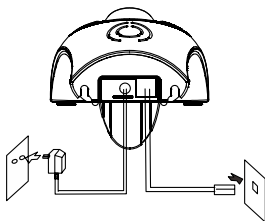

To AC wall outlet


To phone wall outlet

Installing Batteries

The rechargeable Ni-MH batteries (AAA size) come with your phone. Install the battery before using your phone.

1. Slide the battery cover in the direction of the arrow and pull it out.
2. Insert new batteries as indicated, matching correct polarity (+,-).

INSTALLATION

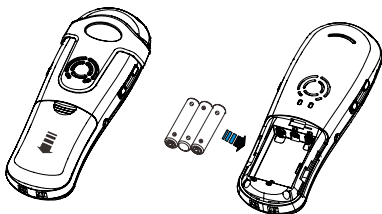

3. To replace the battery cover, slide the cover up until it snaps in place.



Notes:

The batteries need to be replaced if they do not recover their full storage capacities after recharging.

When replacing the batteries, always use good quality Ni-MH re-chargeable batteries. Never use other batteries or conventional alkaline batteries.


INSTALLATION

Charging Handset

! Important Note: Before initial operation, **YOU SHOULD FULLY CHARGE THE HANDSET** for about **15** hours.

To charge the handset, you should place it on the base.

Result: When you place the handset on the base, the handset automatically turns on.

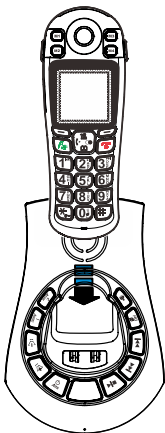


INSTALLATION

Using Handset Carrying Clip

The supplied handset carrying clip allows you to conveniently carry the handset with you. It clips easily to your belt, waist band, or shirt pocket.

If you want to remove the carrying clip:


Insert a screw driver along the edge of one of its arms and release the clip. Then lift it off.

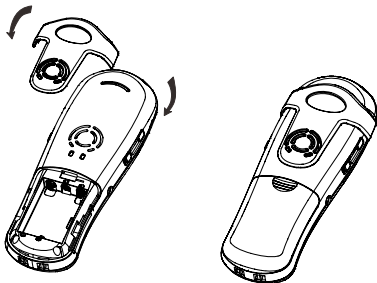

INSTALLATION

Using Headset (optional)

The headset jack is located in the left side of the handset and is a 2.5mm standard plug. Simply plug the headset into this jack and the headset will be activated.

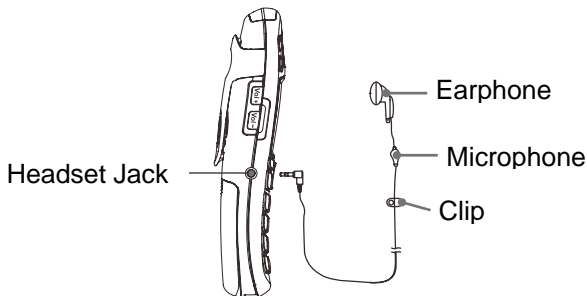


Note: When the headset is plugged into the headset jack the microphone on the handset will be deactivated.

Wall mounting

Place the plate for wall mounting under the telephone. Drill 2 holes in the wall 60 mm apart, insert the wall plugs and the wall mounting screw. The screws should protrude 6-7 mm. Fit the base onto the screw-heads and slide down to secure.

HANDSET SETTINGS

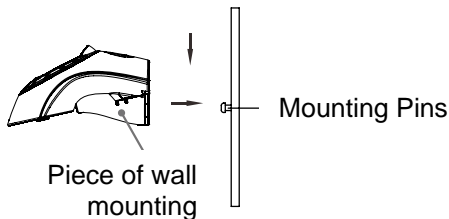


Turning Handset On/Off

If the handset is in power off mode, when you place the handset on the base, it automatically turns on. To turn the handset on or off in standby mode, follow these steps:

1. To turn on the handset when it's off, press and hold the



 
key until you switch the display on. On power up, the handset will enter subscription mode and search for a registered base. A message as shown below will be displayed to the user, and the signal icon will flash.



Note: If the handset is successful in finding a base, the handset will enter the standby mode, the display will

HANDSET SETTINGS

show handset number and the handset name (if you have one saved as described on page 51), signal icon, battery icon and current time. If the handset is unsuccessful in finding a base, the handset will behave according to the **Out of Range** condition.

2. To turn the handset off, keep the  key pressed until the display turns off.


Note:

Nothing will appear on the LCD when battery power is very low. **YOU SHOULD FULLY CHARGE THE HANDSET BEFORE USING.**





Charging...

BASIC FUNCTIONS

All descriptions in this manual assume that the handset is in standby mode. Set the telephone to standby mode by pressing the  key.


Making a Call

1. Pick up the handset and press the  key.

Result: The  icon appears on the LCD.

2. Dial a telephone number.


Note: You can store up to 10 telephone numbers in 4 direct memory for automatic dialing.

3. To end the call, either press the  key or replace the handset on the base.


Note: To make a call to the last number you dialed, use the **Redial** feature. For details, see page 26.

You can enter the desired phone number in standby mode, which allows you to make corrections before dialing. Follow these steps:

1. Enter a telephone number (up to 32 digits). Check it.


You can also use the **Right**  key to insert a pause.


Note: If you make a mistake while entering a number, press the **Erase** soft key to clear the last digit.


2. When the number appears correctly, press the  key.

BASIC FUNCTIONS





Receiving a Call

When a call is received, the **Call** information will appear. If the caller can be identified, the caller's phone number is displayed. If the caller cannot be identified, only the **Call** information displays. If you have a voice message, the  icon and "**MSG WTG ON**" will be shown on the LCD.

1. To answer the call, press the  key. If you have activated the Auto Answer function, when the handset is on the base, simply lift it up to answer.

2. You can speak. To end the call, either press the  key or replace the handset on the base.
Result: After you hang up the call, the LCD displays the call duration.

Notes:

- You can select the ringer volume by using the Vol +/- key when the phone rings with an incoming call.
- If you want to delete the  icon, press the  key in standby mode, then press and hold the  key for several seconds. After that press the  key to return to standby mode. (The handset must be registered to the base.)

BASIC FUNCTIONS

- If the polyphonic ring tone is set, the ring tone may continue for 4 seconds after the caller's hang-up or after the parallel phone had answered the call.

Muting the Microphone

During a conversation, you can temporarily switch your phone's microphone off, so that the other party cannot hear you.



Example: You want to say something to another person in the room but do not want the other party to hear you.


To mute your microphone, press the **Mute** soft key during the conversation. The "**Call Muted**" appears on the LCD.


To unmute the microphone, press the **Mute** soft key again. You will restore the normal condition.

Amplification Function

Your phone is equipped with a specialized amplification function designed to fit your needs. During a



conversation you can adjust the  or  control

on the left side of the handset and use the  key on

the right side. You can also adjust the  control to fit

BASIC FUNCTIONS

the levels to your hearing requirements. The selected volume will be displayed on the LCD.

When you press the  key in receiver mode during a conversation, the Amplify indicator on the handset lights up. If you press the  key again, the indicator will go out.

Ringer Setting

You can select your own external (from the telephone Network) or internal (from other handsets registered to the same base) ring tone and adjust the volume.

1. Press the **Menu** soft key.

2. Press the  or  key repeatedly to choose **HS Settings** menu, then press the **Select** soft key.

3. Press the  or  key to choose **Ring Setup**, press the **Select** soft key.

4. Press the **Select** soft key to choose **INT Ring** or press the **Down** key to choose **EXT Ring**, press the **Select** soft key.

BASIC FUNCTIONS

Result: You can select the ring tone from Melody 1 to 10. When you adjust the ring tone, the phone plays the selected melody.

5. Press the **Select** soft key to confirm.

At step 4, if you select **Volume**, and press the **Select** soft key, you can adjust the ringer volume from **Volume 1** to **Volume 5**, or **Volume Off** to turn off the ringer. Press the **Select** soft key to confirm.


Notes:

- If you set the volume to "Off", when a call comes in, only the New Call information appears on the LCD.
- You can also use the **Vol+** or **Vol-** control in standby mode to adjust the ringer volume. This is not true.. Using the volume button in standby adjusts the handset's earpiece volume

Last Number Redial

1. Press the  key in Standby mode.





Result: The LCD displays the last number you dialed.

2. Press the  key to dial out the number.

BASIC FUNCTIONS

Your phone allows you to retrieve the last 10 numbers you have dialed and recall them quickly.

Search for and dial a number in Redial Book

1. Press the  key in Standby mode.
2. If you want to scroll through the memory, press the  or  key repeatedly until you find out the number you want to dial.
3. Press the  key to dial out the number.

Notes:

- If no numbers are found, "**Empty**" is displayed.
- When the redial book is full, each time you dial a new number, the oldest number stored in the redial book is automatically erased, and it is updated.

Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number in the redial book.

1. Press the  key.

BASIC FUNCTIONS

2. Scroll to the desired number by using the



or



key.

3. When the number appears on the display, press the **More** soft key to choose the desired option:

- **Add to PB:** allows you to add the number to the phone book. Complete storing the entry by starting from step 4 described in part. "Adding the Phone Book Entries" (obviously, you will find the number already entered in the appropriate field).
- **Delete:** allows you to delete the selected number.
- **Delete All:** allows you to delete the whole redial book.

4. To return to Standby mode, press the



key.



Note:

- At step 3, when you select **Delete** or **Delete All** options, a message "**Confirm ?**" will further ask you to confirm the deletion. To confirm press the **Del** or **Del All** soft key, to escape press the **Cancel** soft key.

CID Book

When you receive a call, if the caller's information is transmitted from the network on which the call was made (and the caller doesn't hide it), the caller's phone number

BASIC FUNCTIONS




is displayed. Moreover, when there is a received call which you missed, the  icon will appear on the LCD. If the CID memory is full, the  icon will blink on the LCD.

Out of area - This message will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.

Private - If the caller has exercised the option to prevent his name and number from being sent, the message will show on the LCD.



View and dial any of the CID numbers

1. Press the **Menu** soft key.
2. Use the **Select** soft key to choose the **CID Book**, and if available, the numbers are displayed. (You can also access the CID book directly by pressing the **Up** key in standby mode.)

3. Use the  or  key to view the numbers, you can make a call by a press of the  key. You can also add the entry to the phonebook.



Note:

BASIC FUNCTIONS

At step 3, each item of the incoming list is marked with the  icon if the call has been reviewed or with the  icon if the call hasn't been reviewed yet.

Add CID Number to Phone Book

1. Perform steps 1 and 2 of previous paragraph.

2. Use the   key to view the numbers. When the desired number displays on the LCD, press the **More** soft key to enter **Add to PB** menu.

3. Press the **Select** soft key, you are prompted to enter the name.

4. Enter the name and press the **Save** soft key, then you can modify the number you want to store.

5. Press the **Save** soft key, you are now able to select the ring tone from Melody 1 to Melody 10, press the **Select** soft key to confirm and exit, you will hear a confirm beep.

Delete a number in the CID Book

1. Perform steps 1 and 2 of paragraph "View and dial any of the CID numbers"p28.

BASIC FUNCTIONS



2. Scroll to the number you want to delete by using the



or





key.

3. Press the **More** soft key and use the  or  key to choose **Delete** menu, then press the **Select** soft key.

4. The display shows " **Confirm?** ", press the **Del** soft key to confirm. Then you will hear a beep and the LCD will show the next number.

Delete all numbers in the CID Book

1. Perform steps 1 and 2 of paragraph "View and dial any of the CID numbers".

2. Press the **More** soft key and use the  or  key to choose **Delete All** menu, then press the **Select** soft key.

3. The display shows " **Confirm?** ", press the **Del All** soft key to confirm.

Result: You hear a beep and the phone returns to the Standby mode after clearing all the CID numbers.

BASIC FUNCTIONS

Torch

If you turn this feature on, the visual ringer will light steadily. You can use the phone as a torch.

To turn on this feature, in the Standby mode just keep the



key pressed till the visual ringer lights.

To turn off this function, keep the



key pressed again till the visual ringer go out.

Key Lock

If you turn this feature on, all keys will be locked. You can answer calls by using the



key on the phone. But when you hang up, the phone returns to the locked mode. This feature is useful to avoid pressing keys by mistake.

To lock the keys, in the Standby mode just keep the



key pressed till the display shows "HS Locked", then the icon appears.



To unlock the keys, keep the



key pressed again

till the key lock icon disappears from the display.



BASIC FUNCTIONS

Note:



- In locked mode, if you press any key, the phone will generate an error tone, and the "**HS Locked**" message will be redisplayed.



Auto Answer

With this feature, you can answer a call by just picking up the handset from the base without pressing any key.

1. Press the **Menu** soft key.

2. Press the  or  key repeatedly to choose **HS Settings**, press the **Select** key.

3. Use the  or  key to choose **Auto Answer**, then press the **Select** soft key.

4. Use the  or  key to choose **On/Off** to enable/ disable the function, then press the **Select** soft key, you will hear a confirm beep.







Note:

When the answering machine starts working, this feature will be deactivated.

BASIC FUNCTIONS

Selecting a Language

The Handset supports 8 languages. You can change the language used to display the menu messages.





1. Press the **Menu** soft key.
2. Press the  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Use  or  key to choose **Language**, then press the **Select** soft key.
4. The languages will be displayed. Use the  or  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press **Select** soft key to select the required language and you will hear a confirm beep.

HS Name

Using this feature you can define a name of the handset. This allows you to easily recognize your handset if you



BASIC FUNCTIONS

have more than one registered on the same base. To set the handset name:







1. Press the **Menu** soft key.
2. Press the  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.
3. Use the  or  key to choose **HS Name**, then press the **Select** soft key.
4. You can enter the handset name (up to 12 characters) by using the alphanumeric keys (use the **Erase** soft key to delete the incorrect characters), then press the **Save** soft key to confirm and exit. The handset name will be displayed above your handset number in standby mode.

Range Alarm

A beep will sound when the handset is out of range of the Base. You are able to select to enable/disable this audible warning.


1. Press the **Menu** soft key.
2. Press the  or  key repeatedly to choose **HS Settings**, press the **Select** soft key.


BASIC FUNCTIONS

3. Use the  or  key to choose **Tone Setup**, then press the **Select** soft key.
4. Use the  or  key to choose **Range Alarm**, then press the **Select** soft key.
5. Use the  or  key to choose **On/Off** to enable/disable this audible warning, then press the **Save** soft key, you will hear a confirm beep.


Paging

You can page the handset from the base unit. The handset will ring with a special tone. This is useful to locate a lost handset.

Press the  key on the base unit (less than 5 seconds), all the handsets registered to the base will ring for about 60 seconds.

To stop paging, press the  key on the base again.

Note:

- On a long  key press, more than or equal to 5 seconds, the base will enter subscription mode. For details, see page 55.

BASIC FUNCTIONS



Dial Mode

You can change the dial mode using the following steps:

1. Press the **Menu** soft key.

2. Press the  or  key repeatedly to choose **BS Settings**, and press the **Select** soft key.

3. Use the  or  key to choose **Dial Mode**, then press the **Select** soft key.

4. You can press the  or  key to select the required dial mode options (**Tone/Pulse**) and press the **Select** soft key. A confirm beep will be heard.


 
Note:


 
If you are not sure which dialing mode to select, please contact your local service provider.

Handsfree

During a call, you may turn on the speakerphone built in the handset. In this mode you can simply put your handset on a surface (e.g. a desk) and enjoy the comfort of the handsfree conversation.

BASIC FUNCTIONS

To turn the feature on, press the  key during a call (line engaged). The  icon appears on the LCD.

To turn the feature off, and keep on talking in normal mode, press the  key again. The  icon will disappear.

Notes:

- Before putting the handset near your ears, be sure you have turned the speakerphone off.
- To adjust the speakerphone volume, see page 26.

Flash Signal



When the line is engaged, pressing the **Flash** soft key sends the Flash signal. This key is used in conjunction with special services (e.g. call waiting) which can be available in your phone network. For further details please contact your network telephone company.

To use the said special services, just press the **Flash** soft key while the line is engaged: the display will show **R**.

ADVANCED FUNCTIONS

Menu Navigation

To access a menu option:

1. To display menu items, press the **Menu** soft key.
2. To scroll through menu options, press the  or  key repeatedly.
3. To select a menu, press the **Select** soft key when the desired menu appears on the LCD.
4. Repeat if necessary.

To return to Standby mode from any menu:


If you press the **Back** soft key from any menu, the phone returns to the previous screen.

To return to Standby mode from any menu, press the



key.

Also, the phone will automatically return to Standby mode from any menu if no key is pressed for about 40 seconds.

Note: In standby mode, you can press  key to switch the backlight on/off.

ADVANCED FUNCTIONS

Menu Map

1. CID Book (see page 28)

2. Phone book

New (see page 41)

Edit (see page 43)

Delete (see page 44)

PB Status (see page 45)

3. BS Settings

Terminate HS (see page 47)

Dial Mode (see page 37)

Flash Time (see page 47)

Modify PIN (see page 48)

BS Reset (see page 49)

4. HS Settings

Alarm (see page 50)

Audio Setup (see page 51)

Ring Setup (see page 25)

Key tone (see page 53)

Language (see page 34)

HS Name (see page 34)

Auto Answer (see page 33)

LCD Contrast (see page 52)

Date & Time (see page 53)

Selected BS (see page 54)

HS Reset (see page 55)

5. Registration (see page 56)

6. TAM (AMPLIDECT™285 only) (see page 61)

ADVANCED FUNCTIONS

Message (see page 65)

Announce (see page 61)

TAM Setting (see page 68)

Phone Book

The phonebook built in your cordless phone allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number.





Character Map

To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order									
0	(spc)	0	?	&	/	.	,	!		
1	1	_	+	-	"	()	%		
2	A	B	C	a	b	c	2			
3	D	E	F	d	e	f	3			
4	G	H	I	g	h	i	4			
5	J	K	L	j	k	l	5			
6	M	N	O	m	n	o	6			
7	P	Q	R	S	p	q	r	s	7	
8	T	U	V	t	u	v	8			
9	W	X	Y	Z	w	x	y	z	9	

ADVANCED FUNCTIONS

Adding the Phone book Entries

1. Press the **Menu** soft key.
2. Press the  or  repeatedly to choose **Phonebook**, press the **Select** soft key.
3. Press **Select** soft key again to choose **New**.
4. The display shows "**Name ?**". Enter the name you want to use, then press the **Next** soft key to confirm. The display shows "**Number ?**". Enter the desired number (up to 20 digits), press the **Next** soft key.
5. Use  or  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.
6. Repeat if necessary.


Note:

- If you make a mistake while entering a name or a number, use the **Erase** soft key to correct it. Each time you press the key, the last digit is deleted. To clear all digits, press and hold the **Erase** key.




Using a Pause

A pause is useful when you access an interactive voice response system, such as an automated banking system. A pause provides a delay of 3 seconds. If you want to insert a pause when you dial a number in standby mode


ADVANCED FUNCTIONS

or store a number in memory, press the  key. The letter **P** will appear at the pause entry.



Viewing the Phone book Entries

1. In the standby mode, press the  key.
2. Press  or  key repeatedly until the desired entry is displayed.



Dialing a Number from Phone book

Find out the number you want to dial. Refer to "Viewing the Phone book Entries". Then press the  key or **Dial** soft key.



Editing the Phone book Entries

1. Perform steps 1 and 2 of paragraph "Adding the Phone book Entries".
2. The display shows **New**, use Up  key or Down  key to move on to **Edit**, press **Select** soft key to choose it.

ADVANCED FUNCTIONS



3. Press Up  key or Down  key repeatedly until the entry you want to edit displays, press the **Select** soft key to confirm.



4. If necessary, press the **Erase** soft key to clear the digit(s) then enter the desired name and number, press the **Next** soft key to save.

5. Use the  or  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.

Deleting the Phone book Entries

1. Perform steps 1 and 2 of paragraph "Adding the Phone book Entries" p42.

2. Press Up  key or Down  key to choose **Delete**, press the **Select** soft key to confirm.

3. Press Up  key or Down  key repeatedly until the name you want to delete displays, then press the **Select** soft key. Press **DEL** function key to confirm.




4. At step 2, if you choose **Delete All** menu and press the **Select** soft key, the display will show "**Confirm**". You can

ADVANCED FUNCTIONS

press the **Del** soft key to delete all the entries or press the **Cancel** soft key to exit.

PB Status

The PB Status shows the number of phone book entries already stored.

1. Press the **Menu** soft key.
2. Press Down  key to choose **Phonebook**, press the **Select** soft key.
3. Press the **Select** soft key, the display shows **New**, press Up  key or Down  key to choose **PB Status**, press the **Select** soft key to confirm.
4. The display shows the current phonebook status, for example, **07/50 Used**. It means the phonebook entries can be up to 50, and 7 have been stored.



One-Touch Memories

You can store up to 4 numbers in direct memories. All the numbers will be stored in the phone book.




Storing Memory Numbers

1. Press the memory key (**M1** to **M4**) in standby mode.
2. The display shows "**Number ?**". Enter the desired number (up to 20 digits), press the **Next** soft key.

ADVANCED FUNCTIONS

3. Use  or  key to select the ring you like to associate with the number, press the **Save** soft key to confirm.

Viewing Memory Numbers

1. In the standby mode, press the  key.
2. Press  or  key repeatedly until the desired number is displayed.

Dialing from One-touch Memories

In the standby mode, press **M1** to **M4** button to dial out the corresponding number.

Editing Memory Numbers

Perform the steps of the “Editing the Phone book Entries” paragraph.

Note:

The memory default names are M1: to M4:, you can add something behind them but cannot delete the default name. e.g. you can modify M1 to M1: home.

Deleting Memory Numbers

Perform the steps of the “Deleting the Phone book Entries” paragraph.

ADVANCED FUNCTIONS

BS Settings



Terminate HS

This function allows you to delete a handset registered to the base.

1. Press the **Menu** soft key.

2. Press the  or  key to choose **BS Settings**, then press the **Select** soft key.





3. Press the **Select** soft key to choose the **Terminate HS** menu. The display shows "**PIN?**" to prompt you to enter the PIN Code (The default PIN Code is "0000"). Then press the **OK** soft key.

4. Use Up  key or Down  key to select a handset, press the **Select** soft key to confirm. After that, the deleted handset cannot be used with the base, it can be re-registered to the base if needed. If you select the current handset, a warning tone will be heard.

Flash Time



You can select to change the Flash time by the following steps:

ADVANCED FUNCTIONS

1. Perform steps 1 and 2 of previous paragraph.
2. Use the  or  key to choose **Flash Time** menu. Press the **Select** soft key.
3. The display shows the current setting. Use the  or  key to select **Flash-1 (100ms) /Flash-2 (300ms)**, press the **Save** soft key.

Modify PIN

This function allows you to change the PIN number of the currently active Base. The default PIN is 0000.



1. Perform steps 1 and 2 of paragraph "Terminate HS".
2. Use the  or  key to choose **Modify PIN** menu, press the **Select** soft key.
3. The display shows "**PIN?**". Enter the current PIN, then press the **Next** key. If the old PIN code is validated, you will be prompted to enter a new PIN code. If the old PIN is not validated, a warning beep will sound and you will be returned to the **Modify PIN** menu.
4. Enter the new PIN, press the **Next** key. You will be requested to confirm the PIN code. Enter the new PIN again then press the **Save** soft key to confirm and exit.



ADVANCED FUNCTIONS

BS Reset

If you reset the base, all the features under **BS Settings** menu will be restored to the factory initial setting: Dial Mode and Flash Time.

1. Press the **Menu** soft key.

2. Press  or  key to choose **BS Settings**, then press the **Select** soft key.

3. Press  or  key to choose **BS Reset** menu, press the **Select** soft key. You will be prompted to enter the PIN code.

4. Enter the PIN code (the default PIN is 0000), then press the **Reset** soft key. If the PIN code is validated all Base settings will be reset to the factory default, otherwise the settings will remain.







Result: After resetting, the handset will return to standby mode.

ADVANCED FUNCTIONS

HS Settings

Setting Alarm

You are able to set the alarm on the handset and adjust the alarm settings.

1. Press the **Menu** soft key.
2. Press the  or  key to choose **HS Settings**, then press the **Select** soft key.
3. Press the **Select** soft key to choose **Alarm** menu.
4. The display shows the current set. Use the  or  key to select **On/Off**, press the **Select** soft key.
5. If you select **On**, the display indicates you to enter the time in **HH:MM** format. Use the numeric keypad to enter.
6. Press the **Next** soft key, the display shows **Snooze**, press **Select** again. Then you can press Up  key or Down  key to choose **On** or **Off** and press the **Save** soft key.

ADVANCED FUNCTIONS

7. When the alarm sounds, press any key to stop the alarm sound.



Notes:


- At step 5 you need to enter the time in 24-Hour format.
- To stop the alarm please press any key.
- If you choose **Snooze On**, the alarm will ring at regular intervals of 4 minutes. If you press any key on the handset when the alarm sounds, the alarm won't sound again until the next day.



Audio Setup



You can also use the menu to adjust the audio volume.

1. Press the **Menu** soft key.

2. Press  or  key to choose **HS Settings**, then press the **Select** soft key.

3. Press the  key to choose **Audio Setup** menu, press the **Select** soft key.





4. Use  or  key to choose **Speaker V.** or **Earpiece V.**, press **Select** soft key.

5. The display shows the current setting. Use the  or  key to choose the volume level (Volume 1 -Volume 5), press the **Save** soft key.

ADVANCED FUNCTIONS

Key Tone

Every time you press a key, your handset acknowledges it with a key tone. You can disable the key tones for silent use. In certain error conditions, a warning tone will sound when an incorrect key is pressed.

1. Perform steps 1 and 2 of paragraph "Setting Alarm".
2. Press  or  key to choose **Tone Setup** menu, press the **Select** soft key.
3. Press the **Select** soft key again to choose **Key Tone**.
4. You can use the  or  key to choose **On** or **Off** to enable or disable the function.
5. Press the **Save** soft key.

Note:



- For normal use, we recommend you leave the key tone enabled. This makes the phone easier to use.



LCD Contrast Setting


The adjustment allows you to optimize the visibility of the display by changing its contrast according to the environment conditions.

ADVANCED FUNCTIONS

1. Perform steps 1 and 2 of paragraph "Setting Alarm" p51.

2. Press the  or  key repeatedly to choose **LCD Contrast**, then press the **Select** soft key.

3. Use the  or  key repeatedly to choose among the 17 available contrast levels, then press the **Save** soft key.

4. Press the  key to return to standby mode.

Setting Date & Time



1. Date & Time Format

1. Perform steps 1 and 2 of paragraph "Setting Alarm".

2. Press the  or  key to choose **Date & Time** menu, press the **Select** soft key.

3. Use the  or  key to choose **Date Format** or **Time Format**, press the **Select** soft key.

ADVANCED FUNCTIONS

4. You can use the  or  key to choose the Date format (**DD-MM/MM-DD**) or the Time format (**12 - Hour/24 - Hour**), press the **Save** soft key to save.

2. Setting date & time

1. Perform steps 1 and 2 of previous paragraph.

2. Press the  or  key to choose **Set Date** or **Set Time** menu, press the **Select** soft key.

3. Enter the current date/time by numeric keypad and press the **Save** soft key to save and exit.

Notes:

- If you select **12-Hour**, **AM/PM** will appear on the right of the time in standby mode.
- At step 3 you need to enter the time in 24-Hour format.



Selecting a Base

This function allows you to select a base from those already registered to the handset. You can access the options by scrolling the menu.

1. Perform steps 1 and 2 of paragraph "Setting Alarm"p49.

ADVANCED FUNCTIONS

2. Press the  or  key to choose **Select Base** menu, press the **Select** soft key.

3. You can use Up  key or Down  key to select the base you want to use, then press the **Select** soft key.

4. “**Selected BS**” appears after “**Searching**”.

HS reset

If you reset the handset, all the features will be restored to the factory initial settings.

1. Press the **Menu** soft key.

2. Press the  or  key to choose **HS Reset**, then press the **Select** soft key.


3. Enter the PIN code (the default one is 0000), then press the **Reset** soft key. If the PIN code is correct the display will show **Reset**, otherwise the phone will return to the previous menu. Press the **Cancel** soft key to exit.

Result: After the resetting, all the settings will be restored to the factory default.

ADVANCED FUNCTIONS



Registration

The supplied handset is already registered with the number 1. You can register up to 5 handsets to your base unit in order to share the same line with other people.

Before registering a handset to the base, you should press and hold base unit  key for about 7 seconds then release it.

1. Press the **Menu** soft key.

2. Press the  or  key repeatedly to choose the **Registration** menu, press the **Select** soft key.

3. Use the  or  key to scroll through the Base names list, press the soft key to choose a base. The handset will search for the requested base and the relevant information will flash on the LCD.

4. If the base is found, and the handset is successfully registered, you will be prompted to enter the PIN code (the default one is 0000). On validation of the PIN code, the Registration tone will sound and the Base assigns a number to the handset. If the PIN code entered is invalid,

ADVANCED FUNCTIONS




a warning tone will sound, and the handset will return to the previous registration state.

5. If the base is not found, the handset will behave according to the Out of Range condition.

Calling with more than one Handset

If you have more than one handset registered to the same base, you can make internal calls and transfer an external call between the registered handsets.

Making an internal call

1. Press the Left  key, then enter the handset number you want to call. Enter "9" to call all other handsets registered to the same base.
2. If the handset entered is valid, the called handset will ring. The called party can press the  key to answer the internal call.
3. At the end of your conversation, press the  key.

Note:

During the internal call, if an external comes in, the LCD will show the caller's number. You should press the

ADVANCED FUNCTIONS






key to end the internal call first then press the



key to answer the call.

Call transfer between handsets





You can transfer an external call between the handsets that are registered to the same base.

1. During an external call, press the  key and then the number of the handset you want to transfer the call to.
2. If the called party can answer your call, he/she can press the  key to talk with you. At this time you can inform him/her of the incoming call.
3. When the called handset answers, press the  key or replace the handset to the base to complete the transfer.

Setting up a 3-way conference call

When you have both an external call and an intercom call in progress, you can set up a three-way conference call, like this:

ADVANCED FUNCTIONS

1. During an external call, press the  key and then the number of the handset you want to join the 3-way call.
2. The called party press  key to answer.
3. The calling party can press the  key to start the 3-way call.
4. Either of the two internal handsets can press the  key to leave the conference call at any time.

 
Note: If one of the handsets drops the conference call, the remaining handsets will continue the conference.

ADVANCED FUNCTIONS


Caller ID on call waiting

When you subscribe to Call Waiting service from your local telephone company, the telephone will display the name and number of the second caller while you are having a conversation.

Caller ID info displayed



Caller two's information is displayed

 

1. When you are on the line, the telephone will automatically display the name and number of the second caller.
2. Press the **Flash** soft key to answer the second caller.
3. When you have finished, press the **Flash** soft key to continue with your conversation with the first caller.

Note:

- If you have transferred an external call to another handset, you cannot use the call waiting function via the second handset.

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

Announcement (AMPLIDECT285™ only)

It is necessary to record the announcement which requests the caller to leave a message when nobody is at home. The answer and record message (Announce1) and the answer only message (Announce2) can be up to 3 minutes respectively.

Record Announce1

Auto-answer Announce1 is a conventional message requesting you to leave a message. If you have not recorded a personal Announce1, the unit will play the default one **"Hello, your call cannot be taken at the moment, to record your message, please speak after the tone"**.

If you want to change Announce1, do the following steps to update it:

1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Announce**.
3. Press **Select** key again to choose **ANS & REC**.

4. Press the  or  key repeatedly to choose **Record MESS**, press the **Select** soft key.

5. You can record your announcement after a tone.




Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows " **Recording** ".

TAM FUNCTIONS(AMPLIDECT285™ ONLY)



Record Announce2

Announce-only Announce2 is an answer-only message. If you have not recorded a personal Announce2, the unit will play the default one **"Hello, your call cannot be taken at the moment, please call back later"**.

If you want to change Announce2, do the following steps to update it:

1. Press the **TAM** soft key in Standby mode.
2. Press the Down  key to choose **Announce**, press the **Select** soft key.
3. Press Down  key repeatedly to choose **Answer Only**, then press the **Select** key to confirm.
4. Press the Down  key to choose **Record MESS**, press the **Select** soft key.
5. You can record your message after a tone. Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows **"Recording"**.

Use the base to record Announce1 /Announce2

Press and hold the  or  key on the base unit until the system announce. Begin speaking after you

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

hear the beep. Use the  key to finish after the recording.


Notes:

- When recording the announcement, speak towards the microphone on the base. In order to achieve the best recording results please make sure you are about 20cm from the microphone.
- If you record/playback/restore Announce1 or Announce2, the answer mode (refer to part. **Answer mode Select**) will be switched to the corresponding mode automatically.

Play Announce1/Announce2




You can play the current Announce1/2.

Way 1: Using the menu

1. Press the **TAM** soft key in Standby mode.
2. Press the Down  key to choose **Announce**, press the **Select** soft key.
3. Press **Select** soft key to choose **Announce1** or press the **Down** key to choose **Announce2**, then press the **Select** key to confirm.
4. Press the **Select** soft key to choose **Playback**.
5. The current Announce1/2 will be played. During the process you can use the **Back** soft key to stop and exit.



TAM FUNCTIONS(AMPLIDECT285™ ONLY)

Way 2: Using the base unit




Press the  or  key on the base unit to playback the current Announce1/Announce2. Use the  key to end it during the playing.

Restore Announce1/Announce2

Way 1: Using the menu

1. Press the **TAM** soft key in Standby mode.
2. Press the Down  key to choose **Announce**, press the **Select** soft key.
3. Press **Select** soft key to choose **ANS & REC** or press the Down  key to choose **Answer Only**, then press the **Select** key to confirm.
4. Press the **Select** soft key to choose **Playback**.
5. The current Announce1/2 will be played. During the process press the **Cancel** soft key to restore the default Announce1/Announce2.

Way 2: Using the base unit

Press the  or  key to play Announce1/2, then press and hold the  key to restore it to the default

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

one, and then you will hear a confirm tone. The default Announce1 or Announce2 will be played back after that.

Message (AMPLIDECT285™ only)

The feature allows you to leave a message to the owner who is not at home. When a call is received in answer-record mode, the machine will play Announce1, and then performs message recording. The process is as follows:


After N times ringing, the phone enters answer-record mode automatically and starts to play Announce1. The caller can start to record after a tone.

Play New/Saved Messages

Way 1: Using the menu







1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Message**.
3. Press the **Select** soft key to choose **MSG Playback**.
4. The phone will announce "**You have N new message(s)**" or "**You have N saved message(s)**". The relevant messages will be played one by one. You can





use the  key to delete the current message or the **Back** soft key to stop the playing and exit.

Way 2: Using the base unit

TAM FUNCTIONS (AMPLIDECT285™ ONLY)



When you have one or several new messages, press the  key to play it/them. Use the  or  key to play the desired one. Press the  key once to re-play the current message or press it twice to play the previous one. If there are no new messages, press the  key to play the saved messages. Press the  key again to finish.

Note:

During the playing, you can use the  or  key to adjust the volume.


Delete all the messages

Way 1: Using the menu

1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Message**.
3. Press the  or  key repeatedly to choose **Delete All**, press the **Select** key to confirm.
4. The LCD will show **Confirm**. Press the **OK** key to delete all the messages or press the **Back** key to exit.

Way 2: Using the base unit

TAM FUNCTIONS (AMPLIDECT285™ ONLY)



In the active mode (all lights on) press and hold the  key to delete all the messages. The relevant voice prompting will be heard, too. If you press and hold this key during the playing, the current message will be deleted.


Note:

- Up to 15 minutes messages can be recorded.

Record the memo

You can use your phone to record memo messages (each can be up to 3 minutes) for another user of your phone. The memo can be played back as a message.

1. Press the **TAM** soft key in Standby mode.
2. Press the **Select** soft key to choose **Message**.
3. Press the  or  key repeatedly to choose **Memo**, press the **Select** key to confirm.
4. You can record your message after a tone. Recording will stop automatically after 3 minutes. You can also confirm and end the recording by pressing the **OK** key. During recording the LCD shows "**Recording**".

Note: If someone leaves you a memo, the  icon will appear in the standby mode on the LCD.





TAM FUNCTIONS(AMPLIDECT285™ ONLY)

TAM Setting (AMPLIDECT™285 only)


TAM On/Off

You are able to switch the answering machine on or off.

Way 1: Using the menu


 
1. Press the **TAM** soft key in Standby mode.
2. Press the  or  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press Select key again to choose **TAM On/Off**.
4. Use the  or  key to choose **On** or **Off**, press the **Select** key.

Way 2: Using the base unit





In the active mode (all lights on) press  key on the base unit to enable or disable this function, the current state will be announced.

Record Time

You are able to select the record time. If you select Unlimited, the messages can be recorded until the memory is full.







1. Press the **TAM** soft key in Standby mode.
2. Press the  or  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

3. Press Up  key or Down  key repeatedly to choose **Record Time**, press the **Select** key.
4. Use Up  key or Down  key to select between **60S**, **120S**, **180S** and **Unlimited**.
5. Press the **Select** key to confirm.

Set the ring delay







The ring delay is the number of rings after the answering machine takes an incoming call and plays your announcement. You can select from 2 to 8 rings or **Toll Saver** mode. If you select Toll Saver, when there are new messages waiting to be played back, the answering machine will respond after 3 rings, otherwise it will respond after 6 rings.

1. Press the **TAM** soft key in Standby mode.
2. Press the  or  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  or  key repeatedly to choose **Set Ring**, press the **Select** key.
4. Use the  or  key to choose the answer rings (**2 Rings ~ 8 Rings** or **Toll Saver**), press the **Select** key.

TAM FUNCTIONS (AMPLIDECT285™ ONLY)


 
Voice Prompt Language

You are able to select the language used to play the voice prompt messages.



1. Press the **TAM** soft key in Standby mode.
2. Press the  or  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.
3. Press the  or  key repeatedly to choose **TAM Language**, press the **Select** key.
4. The languages will be displayed. Use the  or  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press the **Select** key to choose the required language and you will hear a confirm beep.

Remote PIN Code

To operate your answering machine remotely from another phone you need to enter the remote PIN code. For security reasons you had better change this code (the default one is 0000). For more details please refer to part. **Remote Control**.


1. Press the **TAM** soft key in Standby mode.
2. Press the  or  key repeatedly to choose **TAM Setting**, use the **Select** key to confirm.




TAM FUNCTIONS (AMPLIDECT285™ ONLY)

3. Press the  or  key repeatedly to choose **Change PIN**, press the **Select** key.
4. Enter the current remote code, press the **OK** key.
5. Enter the new code you want to set, press the **OK** key.
Enter the new code again to confirm, press the **OK** key.

Week Date Setting

Before each message is played, the week and time it was received will be announced. You are able to use the base to set the week date.

In the active mode (all lights on) press and hold the  key on the base until the current setting is announced.

Press the  key repeatedly to set, use the  key to confirm. Every time you press the  key, the system will announce the corresponding week date.

Note:

- If you remove the battery or pull out the adapter, you need to set the week date again.

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

Remote Control (AMPLIDECT™285 only)


You can access many features of your answering machine remotely from any touch tone telephone. A four-digit security code (remote code) is required to access the system and the factory default one is 0000. To enter remote access:

1. Dial your telephone number from any touch tone telephone.
2. When the Announce1/Announce2 starts to play, you may enter the remote access mode by inputting the remote code.
3. After you enter the remote code, the system will play the menu of commands. You can then follow the commands to operate.

Note:

- If you enter the remote code incorrectly the answering machine will ask you to enter the code again. You are then given two more attempts to enter the correct remote code before the line is disconnected.

Remote access commands

<i>Button</i>	<i>Function</i>
	Play the main menu

TAM FUNCTIONS(AMPLIDECT285™ ONLY)

2

Play the new messages

3

Play the saved messages

0

Delete all the messages

5

Switch the answering machine on/off

6

Record Announce1/2 (Depends on your setting). After you record the Announce1/

Announce2, press the # key or the * key to finish. The system will play the announcement you have recorded.

During new or all saved messages playing after remote access, press 3 to play the next messages, press 1 to replay the current message, press 2 to stop, press 0 to delete current message.

Note:

- You had better stop playing message before hanging up.

FEATURE LIST

- 1.8GHz DECT technology with GAP
- Large 2.0" LCD (128 x 64 dots matrix display)
- Up to 5 handsets for optional for one base
- Up to 4 bases for optional for one handset
- LCD contrast adjustable
- Phonebook with up to 50 groups
- 10 VIP numbers setting from phonebook
- Redial book with up to 10 entries
- 10 ring tones and volume selectable
- (5 levels+off)
- Shaker and visual ringer
- 4 one-touch memory speed dial buttons
- Key tone ON/OFF selectable
- Full handsfree speakerphone
- Internal call
- Call transfer
- 3-way conference call
- Receiver/Speaker volume adjustable
- Mute
- PIN protection
- Predialing
- Redial, Flash, Pause
- DTMF/PULSE dialing mode selectable
- FLASH time selectable
- Call duration display
- Real time clock (set time)
- Keypad lock

FEATURE LIST

- Multiple languages selectable
- Auto answer ON/OFF selectable
- Alarm clock include snooze option
- Handset Name setting
- Backlight on LCD and keypad

Caller ID

- FSK and DTMF dual system Caller ID
- Caller ID / Call Waiting
- Caller ID list with up to 40 entries
- Incoming calls can be called back/added to phonebook/deleted
- New call indicator
- Message waiting

Note:

The caller ID feature is only available if you subscribe to a Caller Display service from your network provider.

TAM Functions (AMPLIDECT™285only)

- Digital Answering System
- Natural Sound Voice Prompting, for Week /Time Stamp and Voice Instructions
- Maximum 15 Minutes of Recording Time which includes Incoming Messages
- Digital Volume Control
- Toll Saver Function

FEATURE LIST

- Multiple Languages
- Remote control
- Answer on/off selection and announcement
- Week date setting

TROUBLESHOOTING

Symptom	Check & Remedy
No operation	<ul style="list-style-type: none">• Check that the power adapter is properly connected.• Check that the telephone line cord is properly connected.• Check that the handset batteries have full power.• Check that the handset batteries are installed properly.
No dial tone	<ul style="list-style-type: none">• Check that the telephone line cord is properly connected.• Check that the power adapter is properly connected.
Nothing appears on the display	<ul style="list-style-type: none">• Check that the handset batteries are installed properly.• Check that the handset batteries have full power.• Check that the handset is on.
Handset seems to have very short battery life	<ul style="list-style-type: none">• Check the charge contacts.• Consistently short battery life may indicate that replacement of the batteries is necessary.• Make sure the correct batteries are used.
Caller's number is not displayed	<ul style="list-style-type: none">• Make sure you have subscribed to a Caller ID service via your network provider.• The caller may have withheld their details.• Let the phone ring a couple of times as there may be a delay in receiving the Caller ID information.

ANSWERING SYSTEM SOLUTIONS (AMPLIDECT™285 ONLY)

Cannot hear messages, beep, etc.

- **Adjust announce volume.**

The system always plays Announce2.

- **Answering system memory may be full. Erase some messages.**

Incoming messages are incomplete.

- **Answering system memory is full. Erase some messages.**

**On the display of the base, you have the message TT
You must go in the Menu, Handset setting and Date &
Hour to set the correct hour.**

TECHNICAL SPECIFICATIONS

Frequency Range	1.88~1.90GHz
Channels	120 Duplex channels
Carrier Power	<250mW
Modulation	GFSK
Frequency Stability	< ± 50 KHz
Charging time	15 hours
Ambient temperature	Normal: 15°C ~ 35°C, Extreme: 0°C ~ 40°C
Humidity	0%~90%
Weight (grams)	Base: 197; Handset: 117.4
Dimensions (mm)	Base: 124.4 x 114 x 78; Handset: 133 x 46 x 19.5
Power Supply	Base input: 7.5V, 500mA; Handset input: Ni-MH: 1.2V x 3, 600mAh

Design and specifications are subject to change without notice.


TECHNICAL SPECIFICATIONS



If you subscribe to a DSL service

Please attach a noise filter (contact your DSL provider) to the telephone line between the base unit and the telephone line jack in the event of the following:

- Noise is heard during conversations.
- Caller ID features do not function properly.

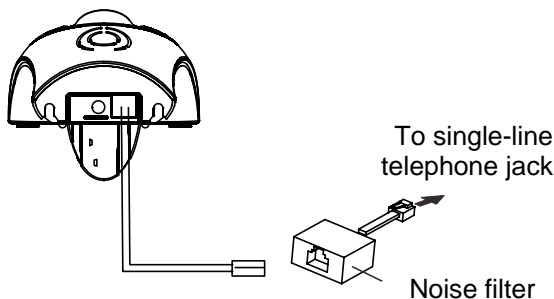

SAFETY INFORMATION

General

Only use the power supply included with the product.

Only use the approved rechargeable batteries supplied.

Do not open the handset (except to replace the handset batteries) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals.

Do not place objects on the line cord or power cable that may cause damage.

If you are sure you are not going to use the telephone for over a month, remove the batteries.

Cleaning

Unplug the telephone. Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

SAFETY INFORMATION

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

Unplug your phone from the telephone socket during thunderstorms because it could damage your telephone. Your guarantee does not cover thunderstorm damage.

The telephone is designed for working within a temperature range of 5°C to 45°C.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 2. The telephone does not operate if the line current is lower than 18 mA.

The declaration of conformity may be consulted at www.geemarc.com



GUARANTEE

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection: Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN60950 standard.

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at

www.geemarc.com

Telephone 01707 384438

Or fax 01707 832529



UGAMPLIDECT280-285_V3_En _V2.4

geemarc™ UNITED KINGDOM
Telecom SA

5 Swallow Court
Swallowfields
Welwyn Garden City
Hertfordshire, AL7 1SB
For product support:
01707 384438

www.geemarc.com