

# oCean400

**Amplified Telephone with  
Voice Prompt and  
Emergency Call**



**English**

# CONTENTS

!!! Please refer to our website: [www.geemarc.com](http://www.geemarc.com)  
for an up to date user guide, as there may be  
important updates and changes you need to be  
aware of !!!

<b>CONTENTS .....</b>	<b>1</b>
<b>INTRODUCTION.....</b>	<b>3</b>
Unpacking the Telephone.....	3
<b>DESCRIPTION.....</b>	<b>4</b>
General Description .....	4
Location Of Controls .....	5
Keys Description .....	6
LCD Description .....	8
<b>USING THE TELEPHONE.....</b>	<b>10</b>
Making a Call .....	10
Receiving a Call .....	11
Muting the Microphone.....	12
Using the Amplification Function .....	12
Using your Phone with hearing aids.....	12
Headset Function .....	13
Hands-free .....	13
Hold Function .....	13
Ringer Setting .....	14
Speed Dial Setting .....	15
Flash Signal .....	18

# CONTENTS

<b>CALLER ID .....</b>	<b>19</b>
<b>PHONE BOOK.....</b>	<b>20</b>
<b>MENU FUNCTIONS.....</b>	<b>23</b>
Menu Navigation .....	23
Menu Map .....	23
<b>SETTINGS .....</b>	<b>25</b>
Set Display .....	25
Set Phone .....	27
Setting Date & Time .....	30
Set Talk .....	30
SOS Setting .....	32
<b>CALLER ID ON CALL WAITING.....</b>	<b>36</b>
<b>FEATURE LIST.....</b>	<b>37</b>
<b>TROUBLESHOOTING.....</b>	<b>38</b>
<b>SAFETY INFORMATION.....</b>	<b>39</b>
<b>GUARANTEE .....</b>	<b>40</b>
<b>RECYCLING DIRECTIVES .....</b>	<b>42</b>

# INTRODUCTION

Congratulations on purchasing your Geemarc oCean400 telephone. This is a multifunction telephone which offers features such as hands free use, caller ID\*, caller announce, dialling talking, a phone book and quick dial. It offers amplification, helpful for those with hearing difficulties. It has large buttons allowing easy use of the keypad and to help stop any misdialling. This telephone is compatible with hearing aids.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:

## **oCean400**

\*To use the caller display facility, you must subscribe to your network provider's caller display service.

## **Unpacking the Telephone**

---

When unpacking the telephone, you should find the followings in the box:

- 1 oCean400 unit
- 1 oCean400 handset with curly cord
- 1 Telephone line cord
- 1 Mains power adaptor
- 1 User Guide




For product support and help visit our website at  
**[www.geemarc.com](http://www.geemarc.com)**

Telephone **01707 387602** Or fax **01707 832529**

# DESCRIPTION



## General Description

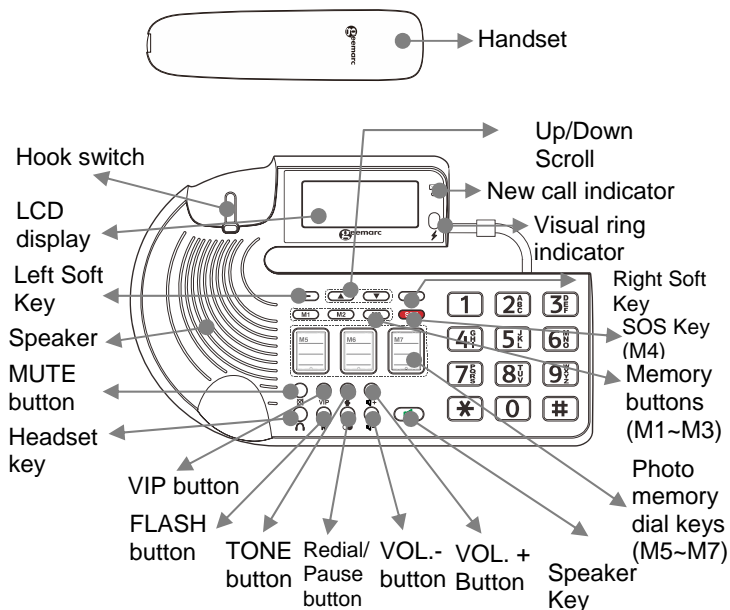

# DESCRIPTION



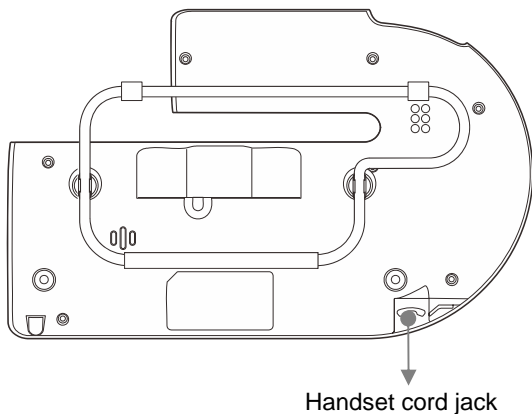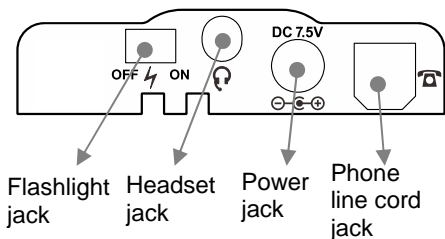


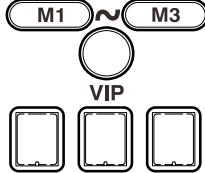
## Location Of Controls

---









# DESCRIPTION

## Keys Description

	<p><b>Make/Answer/End a call.</b> Activates the speakerphone during a call, as described in page <b>13</b>.</p>
	<p>Last number redial, as described in page <b>10</b>. Insert a pause when pre-dialing a number.</p>
	<p>Highlight or scroll through the menu options. Enter the CID list, as described in page <b>19</b>.</p>
	<p>Perform the functions indicated by the text immediately over it (on the bottom line of the display) which changes time by time dependant on the screen being displayed.</p>
	<p>Press this key during a call to mute the microphone temporarily.</p>
	<p>The seven keys are used as one-touch speed dial keys.</p>

# DESCRIPTION


	This key is used to adjust the tone level.
	This key is used to disconnect a call and re-establish dial tone or to switch over to another caller if you use custom calling services such as call waiting.
	This key is used for emergency speed dialling.
	Press this key to activate the headset function.
	This key is used to increase the volume level.
	This key is used to decrease the volume level.



# DESCRIPTION



## LCD Description

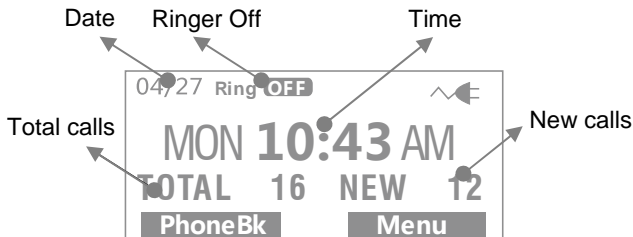In standby mode, the large LCD display will be displayed as below:



If you forget to connect the phone line cord, "No line" will show on the screen.



When you press the **Menu** soft key, the display will show the main menu. Use  or  key to scroll through the menu and select the desired option, then press **Select** soft key to confirm.



When a new call comes in, the screen will display the caller's phone number and/or name.



# DESCRIPTION

This shows you the total and new calls to be reviewed. In this example, you have 16 calls in total which includes 12 new calls.



If the caller has exercised the option to prevent his name and number from being sent, "Private" will be shown on the display.



"Out of Area" will display when someone calls from an area where the telephone company is not offering the caller identification services or is not yet providing number delivery to your area.




# USING THE TELEPHONE

## Making a Call


---


1. To make a call, lift the handset, listen for a dial tone. Adjust your volume & tone settings if required (see page 12).
2. You can dial a number using the keypad or press one of the memory dial buttons. Please refer to page 15 for memory calling.
3. To end the call, replace the handset on the base.

You can also enter the desired phone number in standby mode, which allows you to make corrections before dialling. Follow these steps:


1. Enter a telephone number (up to 32 digits). Check it. If you make a mistake while entering a number, press the **Clear** soft key to edit it.
2. When the number appears correctly, lift the handset or press the  key, the number will be dialled automatically.

## Last Number Redial




The  key is used to quickly redial the last number you dialled.

1. Lift the handset to get a dial tone.
2. Press the  key. The phone will redial up to 17 digits automatically.

## Dialing a Number from the Redial List




1. Press the  key in standby mode.

# USING THE TELEPHONE

2. Press  or  key repeatedly until you find the number you want to dial.
3. Pick up the handset or press the  key to dial the number.

## Use Redial Book options

Using the redial book options, you can add a number to phone book or delete a number from the redial book.

1. Press the  key in standby mode.
2. Scroll to the desired number by using the  or  key.
3. When the number appears, press the **Options** soft key to choose the desired option:
  - **Erase**: allows you to delete the selected number.
  - **Erase all**: allows you to delete the whole redial book.
  - **Store**: allows you to add the number to the phone book. Enter a name you want to use with this number, then press the Save soft key (See page 21)
4. To exit, press the **Back** soft key.

## Receiving a Call

---

When a new call is received the phone will ring and the Visual ring indicator will flash.


1. To answer a call, lift the handset and speak.
2. Adjust your volume & tone settings if required (see page 12).
3. To end the call, replace the handset on the base.


# USING THE TELEPHONE

## Muting the Microphone

---

During a conversation, you can temporarily switch your phone's microphone off so that the other party cannot hear you speak.




To mute your microphone, press the  key during the conversation. "Mute" appears on the LCD.

To unmute your microphone, press the  key. The other party will be able to hear you once again.

## Using the Amplification Function

---

Your phone is equipped with a specialized amplification function. During a conversation you can adjust the

Volume Controls  or  and Tone control  to satisfy your hearing requirements.

The handset receiver volume adjustment is 0-30dB. The **TONE** control allows you to either boost low or high frequency range.

**CAUTION:** This telephone can produce very high (loud) sound levels. Repeated incremental exposure to amplification levels greater than 18 dB may be harmful to people without hearing loss. Always adjust the volume control to the minimum setting after using the phone.

## Using your Phone with hearing aids


---

Your phone can be used with hearing aids equipped with a telecoil (T-coil). Adjust your hearing aid "T-switch" to the "T" position. Make sure to hold the handset close to your hearing aid.

# USING THE TELEPHONE

## Headset Function




---

Press  to activate the headset function. Plug the headset into the headset jack. The headset jack can be found at the rear of the phone. If you use this jack you can listen and speak through your headset.



## Hands-free

---

During a call, you may turn on the speakerphone. Whilst in this mode you can enjoy the comfort of a hands free conversation.

To turn the feature on during a call, press  until  icon appears, then replace the handset on the base. To turn the feature off, and keep on talking in normal mode(handset mode), simply pick up the handset. The  icon will disappear.

## Adjusting Speaker Volume

In speaker mode you can adjust the speaker volume by using the Volume Controls  or  located on the front panel of the phone.

## Hold Function

---









During a call, you can press the **Hold** soft key to put a call on hold and the LCD will display "**Call on hold**". Hanging up the handset will not disconnect the call. To continue the conversation, simply pick up the handset or press the **Unhold** soft key.



# USING THE TELEPHONE

## Ringer Setting

---

You can select your own ringer tone and adjust the ringer volume. You can also adjust the ringer volume to "**Ringer OFF**" in order to turn off the ringer.

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to Set Phone and then press **Select** soft key.
3. Press **Select** soft key to choose **Set Ring**. Press **Select** soft key again to choose **Ringer volume**. You can choose among **volume 1~volume 5**. Every time you press the  or  key, the phone rings with the selected volume level.
4. Press the **Select** soft key to confirm.
5. Press the  key to set the Ringer tone, press the **Select** soft key.
6. Press the  or  key repeatedly to select the desired ringer tone. Each time you press the  or  key, the phone rings with the selected ringer tone.
7. Press **Select** soft key to confirm and return to the previous menu.

In standby mode You can also adjust the ringer volume by using the Volume Controls  or  on the front panel of the phone. The display will show the current level. For example: **volume 1**.

**WARNING:** RING VOLUME IS VERY LOUD AND CAN DAMAGE YOUR HEARING. NEVER PUT YOUR EAR CLOSE TO THE RINGER.

# USING THE TELEPHONE



## Speed Dial Setting

---

### One-touch Memory


Your phone allows you to program 7 frequently used one-touch memory numbers [M1~M3 or 3 photo memory dial keys (M5~M7) or SOS (M4) Key]. Each memory key can store up to 24 digits.

### Storing Memory Numbers

1. Use the keypad to enter the number you want to store. You can use the **Clear** soft key to edit the number.
2. Press and hold one of the Memory dial keys [M1~M3 or 3 photo memory dial keys(M5~M7) or SOS (M4) Key], the display shows **Number:.** Edit it if necessary. Press **Save** soft key.
3. The display shows **Name:.**, enter the name you want to use for this number. Use the **Clear** soft key to edit it if required. Press the **Save** soft key (see page 21).
4. Press  or  key to select the ring you would like to associate with the number, press the **Select** key to confirm.

**Note:** Entering a new number in the same location will automatically erase the previous number.

### Viewing and Dialling Memory Numbers


In standby mode press one of the Memory dial keys [M1~M3 or 3 photo memory dial keys(M5~M7) or SOS (M4) Key], the display will show the corresponding number. Lift the handset or press the  key to dial it out.



# USING THE TELEPHONE

## Using the Options


1. In standby mode press one of the Memory dial keys [M1~M3 or 3 photo memory dial keys (M5~M7) or **SOS (M4) Key**].
2. Press **Options** soft key to choose the desired option:
  - **Play Voice**: allows you to play the voice prompt of this entry. If you have recorded the name for this entry, the system will announce the name, otherwise it can only announce the number.
  - **Record Voice**: allows you to record the name for the selected entry.
  - **Erase Voice**: allows you to delete the name you have recorded for the selected entry.
  - **Edit**: allows you to edit the selected entry.
  - **Erase**: allows you to delete the selected entry.

**Note:** If you record a voice prompt for an entry, an icon  will appear before the name of this entry.



## Two-touch Memory

Your phone allows you to program 10 frequently two-touch memory numbers (0~9). Each memory key can store up to 24 digits.

## Storing Memory Numbers

1. Use the keypad to enter the number you want to store. You can use the **Clear** soft key to edit the number.
2. Press the  key.
3. Press one of the numeric keys (0~9), the display shows **Number:**. Edit it if necessary. Press **Save** soft key.


# USING THE TELEPHONE

4. The display shows **Name**: enter the name you want to use with the number. Use the **Clear** soft key to edit it if necessary. Press the **Save** soft key. (See page 21).
5. Press  or  key to select the ring you like to associate with the number, press the **Select** key to confirm.

**Note:** Entering a new number in the same location will automatically erase the previous number.


## Viewing and Dialling Memory Numbers

In standby mode press and hold one of the numeric keys (0~9), the display will show the corresponding number.

Lift the handset or press the  key to dial it out.

## Using the Options


1. In standby mode press and hold one of the numeric keys (0~9).
2. Press **Options** soft key to choose the desired option:
  - **Play Voice:** allows you to play the voice prompt of this entry. If you have recorded the name for this entry, the system will announce the name, otherwise it can only announce the number.
  - **Record Voice:** allows you to record the name for the selected entry.
  - **Erase Voice:** allows you to delete the name you have recorded for the selected entry.
  - **Edit:** allows you to edit the selected entry.
  - **Erase:** allows you to delete the selected entry.


**Note:** If you record a voice prompt for an entry, an icon  will appear before the name of this entry.

# USING THE TELEPHONE

## Flash Signal

---

When the line is engaged, pressing the  key sends the flash signal. This key is used in conjunction with special services (e.g. call waiting) which might be available for your phone network. For further details please contact your telephone network company.

To use the said special services, just press the  key while the line is engaged.



**Note:** This key only operates when your telephone has been installed for Tone mode (**Dialing Mode** menu must be set to **Tone** option).

# CALLER ID




This telephone automatically displays an incoming caller's number/name along with the date and time of the call. It will record up to 20 calls of up to 16 digits and store the data into memory.

**IMPORTANT:** You must subscribe to the Caller ID Service from your local telephone company to utilize this feature.



## Viewing the Caller List

Use  or  key to scroll through entries. Records will be listed in the order they were received.

## Dialing a Number from the Caller List

Use  or  key to scroll to the desired number. Then pick up the handset or press the  key to dial it out.

## Using the Caller List Options

1. Use  or  key to locate the desired record.
2. Press **Options** soft key to choose the desired option:
  - **Erase:** allows you to delete the selected entry.
  - **Erase all:** allows you to delete all the entries.
  - **Store:** allows you to add the entry to the phonebook.

**Note:** If you select Erase all, a message "**Erase all?**" will ask you to confirm or not. Press **Yes** to confirm or **No** to cancel.

# PHONE BOOK

The phonebook built in to your phone allows you to store frequently used numbers so that you can easily make a call without having to remember or manually enter the phone number.

## Character Map

To enter a specific alphanumeric character, press the relevant key one or more times key for the required character according to the following table. Press once for the first character, twice for the second and so on. E.g. Press number 2 three times to enter "C".



Key	Characters in the displayed order				
0	0				
1	(spc)	_	*	,	1
2	Aa	Bb	Cc	(	2
3	Dd	Ee	Ff	)	3
4	Gg	Hh	li	#	4
5	Jj	Kk	Ll	/	5
6	Mm	Nn	Oo	'	6
7	Pp	Qq	Rr	Ss	7
8	Tt	Uu	Vv	?	8
9	Ww	Xx	Yy	Zz	9

### Notes:

- If you want to shift the case between upper and lower, while entering letters, press the \* key.
- When entering the same letter twice or a different letter with the same key, wait for a few seconds for the cursor to move automatically and then select the next letter.




# PHONE BOOK



## Adding the Phonebook Entries

1. Enter a phone number (up to 24 digits) while in standby mode and then press **Save** soft key.
2. The display shows **Number:**. Edit it if necessary. Press **Save** soft key.
3. The display shows **Name:**, enter the name you want to use, then press **Save** soft key.
4. Press  or  key to select the ring you would like to associate with the number, press the **Select** key to confirm.

**Notes:** If you make a mistake while entering a name or a number, use the **Clear** soft key to correct it. Each time you press this key, the last digit is deleted.



## Viewing the Phonebook Entries


1. Press the **PhoneBk** soft key in standby mode to enter the phonebook.
2. Press  or  key repeatedly until the desired entry is displayed.
3. Lift the handset or press the  key to dial out this number.

**Note:** If you have activated the Review Talking feature in advance, every time you press  or  key, the system will announce the number of the entry that appears on the display.

# PHONE BOOK

## Using the Phonebook Options

1. Press **PhoneBk** soft key to enter the phonebook.
2. Press  or  key repeatedly until the desired entry appears.
3. Press **Options** soft key to choose the desired option:
  - **Play Voice:** allows you to play the voice prompt of this entry. If you have recorded the name for this entry, the system will announce the name, otherwise it can only announce the number.
  - **Record Voice:** allows you to record the name for the selected entry.
  - **Erase Voice:** allows you to delete the name you have recorded for the selected entry.
  - **Edit:** allows you to edit the selected entry.
  - **Erase:** allows you to delete the selected entry.

**Note:** If you record a voice prompt for an entry, an icon  will appear before the name of this entry.



# MENU FUNCTIONS

## Menu Navigation

---

### To access a menu option:

To display menu list, press the **Menu** soft key.

To scroll through menu options, press  or  key repeatedly.

To select a menu, press the **Select** soft key when the desired menu appears on the display.

Repeat if necessary.

### To exit from any menu:

If you press the **Back** soft key or the **Exit** soft key, the phone returns to the previous screen.

## Menu Map

---

### Set Display

Set Language (see page **25**)

Set Contrast (see page **25**)

Dim: X--->x (see page **26**)

Hour Format (see page **26**)

Date Format (see page **26**)

### Set Phone

Set Ring (see page **27**)

Set Keypad Tones (see page **27**)

Call Waiting (see page **27**)

Set Flash (see page **27**)

Dialing Mode (see page **28**)



# MENU FUNCTIONS

AUTO ON HOOK (see page **28**)

New call LED (see page **29**)

Date and Time (see page **30**)

## **Set Talk**

DIALING TALKING (see page **30**)

CID TALKING (see page **31**)

REVIEW TALKING (see page **31**)

Voice Prompt (see page **32**)

## **Set SOS**

Storing SOS Numbers (see page **32**)

Recording SOS Message (see page **33**)

Playing SOS Message (see page **34**)

SOS Emergency Dialling (see page **34**)

Auto turn on (see page **34**)

Security ID (see page **35**)

# SETTINGS



## Set Display

---





Using this feature, you can customize the display settings, according to your taste and needs (language, contrast, hour format and date format).

### Language Setting

The phone supports up to 3 predefined languages: English, French, German. You can change the language used to display the menu messages.





1. Press **Menu** soft key to display the main menu list.
2. Press **Select** soft key to access **Set Display**.
3. Press **Select** soft key to select **Set Language**.
4. Press  or  key repeatedly to scroll through the options. Each language will be displayed in its own native translation.
5. Press **Select** soft key to select the required language.

### LCD Contrast Setting

1. Press **Menu** soft key to display the main menu list.
2. Press **Select** soft key to access **Set Display**.
3. Press the  or  key to move to **Set Contrast**, press **Select** soft key.
4. Press  or  key repeatedly to choose among the 8 available contrast levels and then press **Select** soft key.





# SETTINGS

## Switch to smaller font

1. Press **Menu** soft key to display the main menu list.
2. Press **Select** soft key to access **Set Display**.
3. Press  or  key repeatedly to move to **Dim:X--->x**, press **Select** soft key.
4. Press  or  key repeatedly to choose **ON** or **OFF** and then press **Select** soft key.





**Note:** If you select **ON**, when you pre-dial a number, if the number exceeds 8 digits, the font will be switched to smaller size automatically.

## Hour Format Setting

1. Press **Menu** soft key to display the main menu list.
2. Press **Select** soft key to access **Set Display**.
3. Press  or  key repeatedly to move to **Hour Format**, press **Select** soft key.
4. Press  or  key repeatedly to choose **12 hour clock** or **24 hour clock** and then press **Select** soft key.

**Note:** If you select **12 hour clock**, AM/PM will appear on the right of the time in standby mode.

## Date Format Setting






1. Press **Menu** soft key to display the main menu list.
2. Press **Select** soft key to access **Set Display**.
3. Press  or  key repeatedly to move to **Date Format**, press **Select** soft key.
4. Press  or  key repeatedly to choose **DD/MM** or **MM/DD** and then press **Select** soft key.

# SETTINGS





## Set Phone

---


### Keypad Tones Setting

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.
3. Press **Select** soft key to access **Set Ring**.
4. Press the  or  key to choose **Keypad Tones**, then press **Select** soft key.
5. You can use  or  key to choose **ON** or **OFF** to enable or disable the function.
6. Press the **Select** soft key.





### Call Waiting

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.
3. Press the  key to move to **Call Waiting** and then press **Select** soft key. The display shows the current setting.
4. Use  or  key to select **ON/OFF** to activate/deactivate the call waiting function, press **Select** soft key to confirm.






### Flash Time Setting

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.

# SETTINGS

3. Press  or  key repeatedly to move to **Set Flash** and then press **Select** soft key. The display shows the current setting.
4. Press  or  key repeatedly to choose among **100ms**, **300ms** and **600ms**, press **Select** soft key to confirm.


## Dialing Mode Setting

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.
3. Press  or  key repeatedly to move to **Dialing Mode** and then press **Select** soft key. The display shows the current setting.
4. Press  or  key repeatedly to choose between **Tone** and **Pulse**, press **Select** soft key to confirm.





### Notes:

- This menu is not used in countries where only Tone dialing is available.
- If you are not sure which dialing mode to select, please contact your local service provider.

## Auto On Hook

1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.






# SETTINGS

3. Press  or  key repeatedly to move to **AUTO ON HOOK** and then press **Select** soft key. The display shows the current setting.
4. Use  or  key to choose **ON** or **OFF** to activate or deactivate the auto on hook feature.
5. Press the **Select** soft key to confirm.

**NOTE:** The Auto On Hook Feature as detailed on page 31 will in most cases not work in the UK. For this function to operate the telephone Network that you are connected with has to give a busy tone when the call is ended by the other party. (tone signal: 425 Hz at 0.5s/0.5s)

## New call LED

If you activate this feature, the new call LED will flash to indicate that you have new call to be reviewed.



1. Press **Menu** soft key to display the main menu list.
2. Press the  key to move to **Set Phone** and then press **Select** soft key.
3. Press  or  key repeatedly to move to **New call LED**. and then press **Select** soft key.
4. Use  or  key to choose **ON**, **OFF** to activate or deactivate this feature.
5. Press the **Select** soft key to confirm.

# SETTINGS

## Setting Date & Time

---

In standby mode, the phone displays the current date and time to help you keep track of your appointments. You need to set the date and time so that when you receive calls they will appear with the correct date and time.

1. Press **Menu** soft key to display the main menu list.
2. Press  or  key repeatedly to move to **Date and Time**, press **Select** soft key. The current settings are displayed.
3. Enter the current time using the numeric keypad, press **Save** soft key.
4. Enter the current date using the numeric keypad, press **Save** soft key.
5. Enter the current year using the numeric keypad, press **Save** soft key.





**Note:** You can select the hour format and date format. Please refer to **Hour Format Setting** and **Date Format Setting** on Pages 26.

## Set Talk

---

### Dialing Talking





This feature allows you to check the number you have entered in standby mode without looking at the display.

1. Press **Menu** soft key to display the main menu list.
2. Press  or  key repeatedly to move to **Set Talk**, press **Select** soft key.
3. Press **Select** soft key to access **DIALING TALKING**.
4. Use  or  key to select **ON/OFF** to activate / deactivate the dialing talking function, press **Select** soft key to confirm.



# SETTINGS





## CID Talking

The talking CID can announce the number that comes in unless the caller blocks the number. Note that if you have stored a number in phone book and recorded the corresponding name, when an incoming call with this number comes in, the system will announce the name associated with this number.

1. Press **Menu** soft key to display the main menu list.
2. Press  or  key repeatedly to move to **Set Talk**, press **Select** soft key.
3. Press the t key to move to **CID TALKING**, press **Select** soft key.
4. Use  or  key to select **ON/OFF** to activate/deactivate the CID talking function, press **Select** soft key to confirm.

## Review Talking

The system can announce the number that is stored in phone book when you are reviewing the phone book. This feature allows you to check these numbers when you use  or  key to scroll through the phone book entries. Note that if you have recorded the corresponding name, the system will announce the name associated with this number instead of the number. To activate this feature, take the following steps:

1. Press **Menu** soft key to display the main menu list.
2. Press  or  key repeatedly to move to **Set Talk**, press **Select** soft key.
3. Press  or  key repeatedly to move to **REVIEW TALKING**, press **Select** soft key.









# SETTINGS

4. Use  or  key to select **ON/OFF** to activate/deactivate the CID talking function, press **Select** soft key to confirm.

## Voice Prompt

You are able to select the language used to play the voice prompt messages.

1. Press **Menu** soft key to display the main menu list.
2. Press  or  key repeatedly to move to **Set Talk**, press **Select** soft key.
3. Press  or  key repeatedly to move to **Voice Prompt**, press **Select** soft key.
4. Use  or  key to scroll through the options. Each language will be displayed in its own native translation.
5. Press the **Select** soft key to choose the required language.

## SOS Setting

---

The SOS function allows you to ask for help with a one-touch operation if you are in an emergency.

**Note:** You need to connect the adaptor for the SOS function.





### To ask for help by one-touch operation

To use the SOS function you need to record a message that you want to tell the helper.

### Storing SOS Numbers





1. Press **Menu** soft key.

# SETTINGS

2. Press  or  key repeatedly to move to **SET SOS**, press **Select** soft key.
3. Press **Select** soft key to choose **SOS NUMBER**.
4. You can store 5 SOS numbers(1~5). Press  or  key to select the number, press the **Select** soft key.
5. Enter the telephone number by numeric keypad (24 digits maximum for each memory). If you make a mistake you can press the **Clear** soft key to delete the previous digit if necessary.
6. Press the **Save** soft key to store the number.

## Recording SOS Message

You can use your phone to record SOS messages (up to 30 seconds).




1. Press **Menu** soft key.
2. Press  or  key repeatedly to move to **SET SOS**, press **Select** soft key.
3. Press  key to choose **SOS SOUND**, press **Select** soft key.
4. Press the  key to select **RECORD SOUND** and press **Select** soft key to confirm. You can record a message within 30 seconds.

### Notes:

- In the message, you should tell the helper to press one of the special buttons (0~9,\*,#) to confirm that your SOS message has been received.
- If you want to record a message for less than 30 seconds, you can press the **End** soft key to confirm and exit.

# SETTINGS

## Playing SOS Message



1. Press **Menu** soft key.
2. Press  or  key repeatedly to move to **SET SOS**, press **Select** soft key.
3. Press  key to choose **SOS SOUND**, press **Select** soft key..
4. Press **Select** soft key to choose **PLAY SOUND**. You can press the **End** soft key to stop during the playing.

## SOS Emergency Dialing





After setting the SOS numbers and message, you can use the SOS function. Press the **SOS** key on the base phone to dial 5 SOS numbers one by one until someone responds. The telephone will dial the first SOS number. If there is no response in 30 seconds or the line is busy, the telephone will dial the second SOS number. If there is still no response in 30 seconds or the line is still busy, the telephone will dial the next number in turn until all the numbers you set are dialled three times. To cancel the SOS calling, press and hold the **SOS** key on the base for about 5 seconds.

After 5 minutes, you will hear a beeping tone, at this point the helper must press one of the special buttons (0~9, \*, #) to continue the SOS call otherwise the conversation will stop after one minute.





## Auto Turn On

1. Press **Menu** soft key.
2. Press  or  key repeatedly to move to **SET SOS**, press **Select** soft key.

# SETTINGS


3. Press the  or  key to choose **Auto turn on**, press **Select** soft key.
4. Press  or  key to choose **ON** or **OFF**, press **Select** soft key.

## Security ID

1. Press **Menu** soft key.
2. Press  or  key repeatedly to move to **SET SOS**, press **Select** soft key.
3. Press  or  key to choose **Security ID**, press **Select** soft key.
4. The display shows the current security ID. Enter the new one you want to use, press **Save** soft key.

After you have turned on " Auto turn on " and set the Pin code, the following will happen:


If your phone rings 10 times without being answered, the phone will set to auto off-hook (In this state, you can hear the caller but cannot answer the call. Two "**bip-bip**" tones will be generated to remind the caller to enter Pin code (the default one is \***0000**) to enter full speaker state. The caller enters the Pin code, and then starts the conversation. Every 2 minutes later, the caller will hear a prompt tone. The caller needs to press any button to continue the conversation. Otherwise, the line will be disconnected automatically.

**NOTE:** When the phone is auto off-hook, you can press the  key to enter full speaker state. In this way, there is no need for caller to enter Pin code.


# CALLER ID ON CALL WAITING



When you subscribe to Call Waiting service from your local telephone company and activate the Call Waiting function via menu, the telephone will display the name and number of the second caller while you are having a conversation.

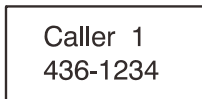Caller ID info displayed

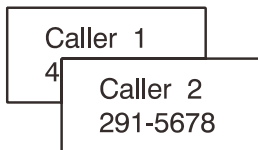

Caller two's information is displayed



1. When you are on the line, the telephone will automatically display the name and number of the second caller.
2. Press the  key to answer the second caller.
3. When you have finished, press the  key to continue your conversation with the first caller.

# FEATURE LIST

- FSK and DTMF dual system Caller ID
- Extra Large Caller ID Screen
- Caller ID list with up to 20 entries
- Caller ID/Call Waiting
- Phonebook with up to 30 entries
- Amplification function
- Amplified Headset jack
- Hearing Aid compatible
- Adjustable volume control
- Adjustable extra-loud ringer
- Big Keypad buttons
- Multiple languages selectable
- Real time clock with date & time
- Flash, Mute, Hold
- 7 one-touch speed dial keys
- 10 two-touch speed dial keys
- LCD contrast setting
- Hour & Date format setting
- Hands-free speakerphone
- Dialing mode selection
- Dialing talking & CID talking
- SOS numbers auto-dialing
- SOS message recording

# TROUBLESHOOTING

## **No dial tone**

- Check that all phone cord connections are securely plugged into the telephone & wall jack.
- Check that the phone is in the correct dialing mode, tone or pulse.
- Plug another phone into the wall jack to make sure your phone service is working properly.

## **No audible ringer**

- Make sure the ringer is not turned off.
- Check the volume level of the ringer.
- You may have too many extensions on your line. Try unplugging a few devices.

## **Noise, Static, Interference while using the handset**

- A filter may be required for homes with a DSL line or near Radio towers.

## **Caller ID information does not show**

- Make sure you are subscribed to Caller ID through your local company.

# SAFETY INFORMATION

## General

Only use the power supply included with the product.

Do not open the unit. Contact the helpline for all repairs.

The phone is capable of amplifying sounds to a loud volume. It is important to instruct all potential users of its proper operation. It is advised to adjust the volume control to its minimum level (Low) when not in use and alert other users that hearing damage can potentially result from misuse

## Cleaning

Clean the telephone with a soft cloth. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

## Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

Unplug your phone from the telephone socket during thunderstorms because it could damage your telephone. Your guarantee does not cover thunderstorm damage.

The telephone is designed for working within a temperature range of 5°C to 45°C.



# GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at **www.geemarc.com**. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.**

**Please note: The guarantee applies to the United Kingdom only**

**DECLARATION:** Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 2014/53/UE and in particular article 3 section 1a, 1b and section 2. The telephone does not operate if the line current is lower than 18 mA.

*The declaration of conformity may be consulted at [www.geemarc.com](http://www.geemarc.com)*



# GUARANTEE

**Electrical connection:** The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

**Telephone connection:** Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN60950 standard.

# RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at  
**[www.geemarc.com](http://www.geemarc.com)**

Telephone **01707 387602**  
Or fax **01707 832529**



UGoCean400\_En\_v1.3

**geemarc™ UNITED KINGDOM**  
Telecom SA

5B Swallow Court  
Swallowfields  
Welwyn Garden City  
Hertfordshire, AL7 1SB  
For product support:  
01707 387602

[www.geemarc.com](http://www.geemarc.com)