

GEEMARC

CLEAR SOUND™

HEAR THE DIFFERENCE

CL8400BT

GSM Telephone with Amplification



geemarc™
Telecom SA

English

CONTENTS

CONTENTS	1
INTRODUCTION	4
Unpacking the Telephone	5
DESCRIPTION	6
General Description	6
LCD Screen Description	11
Menu Navigation	12
Menu Map	13
SETTING UP	14
Network Services	14
Passwords	14
Install SIM Card and Battery	14
Charging the battery	16
Switching On/Off	17
Battery Use	18
USING THE TELEPHONE	19
Standby Mode	19
Making a Call	19
Making a Call from the Call Record	20
Making a Call from the Phone Book	20
Making a Call using Quick Dial	21
Making a Call from the Dialed Numbers List	21
Receiving a Call	21
Rejecting a Call	22
Amplification Function	22
Options During a Call	24
SMS	25
Writing/Sending/Storing a new message	25
Inbox	26
Outbox	27

CONTENTS

Template	28
Message Settings	28
PHONE BOOK	30
Adding Phonebook Entries	30
Character Map	31
Searching an Entry in Phonebook	32
Using Phonebook Options	33
Copying all the Phonebook Entries	33
Deleting the Phonebook Entries	33
Caller Group	34
Extra Number	35
Settings	35
CALL RECORD	37
Received Calls	37
Dialed Calls	37
Missed Calls	38
Delete Call Log	39
HANDSET SETTINGS	41
Clock Settings	41
Set Time/Date	41
Set Format	41
Schedule Power	41
Language	42
Dedicated Key	43
LCD Backlight	43
Wallpaper	44
Show Date and Time	44
Show Owner Number	44
Call Setup	45
Auto Redial	46

CONTENTS

Other Settings	47
SOS Setting	47
SOS Number Setting	48
SOS Message Setting	48
Use SOS Function	49
Speed Dial	49
Network Setup	50
Security Settings	51
Restore Factory	52
PROFILES	54
Profiles	54
TOOLS	55
Calendar	55
Alarm	55
Bluetooth	56
Calculator	57
FM RADIO	58
GAME	59
FEATURE LIST	60
TROUBLESHOOTING	62
SAFETY INFORMATION	65
HEARING AID INFORMATION	67
NETWORK SERVICES	68
GUARANTEE	69
RECYCLING DIRECTIVES	71

INTRODUCTION

Congratulations on purchasing your Geemarc GSM CL8400BT telephone. This telephone is also hearing aid compatible. It offers many functions such as an alarm, a calendar, SMS text messaging, a phone book, a call record, a speakerphone and speed dial buttons. It has an emergency function in which six numbers can be programmed as emergency contacts. In case of emergency these contacts will be called and SMS messages sent with the flick of just one switch.

The font size on the colour LCD display is large and the buttons on the keypad are easy to see and use. This mobile telephone has a loud ringer and strong vibrating setting. All these features add up to make this a highly suitable telephone for the elderly, hard of hearing or sight people and anyone who simply wants to keep in touch with a great degree of ease.

It is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:
GSMCL8400BT

INTRODUCTION

Unpacking the Telephone

When unpacking the telephone, you should find the following in the box:

- 1 GSMCL8400BT mobile telephone handset
- 1 Desktop charging unit
- 1 Mains power adaptor
- 1 Li-Polymer rechargeable battery
- 1 User Guide



For product support and help visit our website at

www.geemarc.com


Telephone 01707 384438

Or fax 01707 832529

DESCRIPTION


General Description

Handset Description (Front & Rear)

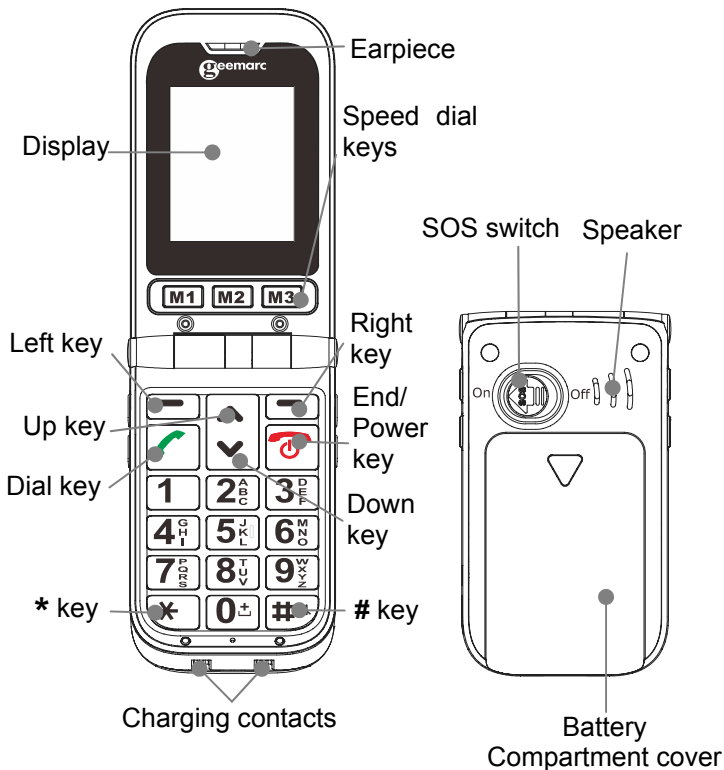


DESCRIPTION

Handset Description (Left & Right)

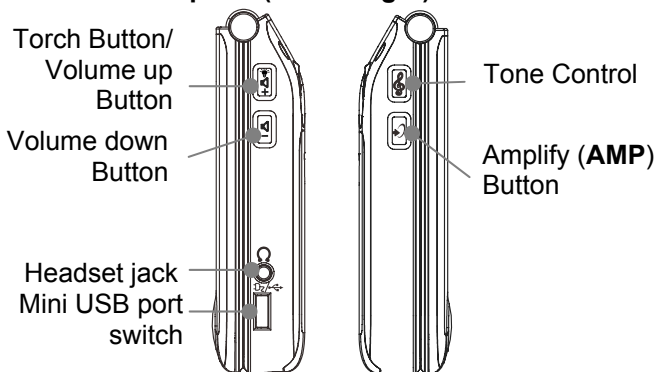


Charger

 Charge pins

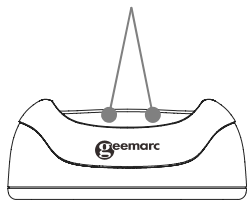





Rear view












Mini USB port



DESCRIPTION

	<p>One touch dialling keys A telephone number can be assigned to each of these buttons. To dial the number all you have to do is press the button once and the number will be dialled automatically.</p>
	<p>Power key/On-hook key Long press to power the telephone on and off.</p> <p>End a call Cancel current process and return to standby.</p>
	<p>Navigation Button</p> <p>Up key Scroll up through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up.</p> <p>Down key Scroll down through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up.</p>
	<p>Call Key Make a call after dialling the number. Receive a call.</p>

DESCRIPTION

	<p>Left/Right key Perform the functions indicated by the text immediately over it (on the bottom line of the display) which changes time by time.</p>
	<p>Asterisk key Press this key to insert one or more symbols while composing a message or editing a phonebook entry name. Then use , ,  and  buttons as navigation keys to select the symbols you want to insert.</p>
	<p>Hash Key Press to switch between different input modes while composing a text message or editing a contacts name.</p>
	<p>Amplify Key Press this key on the left side of the phone during a conversation to amplify the volume.</p>
	<p>Tone Key Press this key on the left side of the phone during a conversation to alter the tone.</p>

DESCRIPTION

	<p>Torch/Volume Up Key Press this key on the right side of the phone, the light will be on steadily. Press it again to turn it off. This key can also be used to increase the earpiece/speakerphone volume during a call or increase the ringer volume when you access Profiles menu.</p>
	<p>Volume Down Key This key can be used to decrease the earpiece/speakerphone volume during a call or decrease the ringer volume when you access Profiles menu</p>

DESCRIPTION

LCD Screen Description



Signal Strength icon

This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength.



Alarm icon

The alarm has been set to ring at a specified time.



Battery Status icon

This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.



Call Diverting icon

This icon appears when you have activated the call diverting function.



SMS icon

One or more new SMS (text message) has been received.



Mute icon

The microphone is temporarily muted during the conversation.



Bluetooth on

This icon appears when bluetooth is switched on.





Headset icon

The headset is plugged in.

DESCRIPTION


Menu Navigation

To access a menu option

1. To display menu items, press **Menu**.
2. To scroll through menu options, press  or  key repeatedly.
3. To select a menu, press **Ok** when the desired menu appears on the LCD.
4. Repeat if necessary.

To return to Standby mode from menu

If you press **Back**, the phone returns to the previous screen.

To return to Standby mode, press the  key.



DESCRIPTION

Menu Map



Short Message
Write Message /
Inbox
Outbox / Template
Message Settings
Voice Mail Server
Broadcast Message



Phonebook
Search Entry
Add New Entry
Copy All
Delete
Caller Group
Extra Numbers
Settings



Call Record
Missed Calls
Dialed Calls
Received Calls
Delete Call Log
Call Time
Call Cost
SMS Counter



Settings
Phone
Display
Call
SOS
Speed Dial
Network
Security

Restore Factory
Settings



FM Radio



Games
Puzzle
Robot
UFO
Fruit
Game Settings



Toolbox
Calendar
Alarm
Bluetooth
Calculator



Profiles
General
Meeting
Outdoor
Indoor
Headset
Bluetooth

SETTING UP

Network Services

To use this mobile telephone you must subscribe to a service from a service provider. Different service providers offer different features (at a variety of charges). This may affect the features made available to you through this mobile telephone.

Passwords

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.

Install SIM Card and Battery

Always switch the telephone off and disconnect the charger before removing the battery.

Take care when handling the SIM card. The SIM card and its contacts can be easily damaged by scratches or bending.

SETTING UP

To remove the battery compartment cover, slide the cover in the direction shown and pull it off.



Remove the battery (if battery already inside).

Slide the metal SIM card cover down slightly and then lift up. The SIM card contacts in the phone should now be exposed. Place the SIM card with the gold coloured contacts face down into the SIM card compartment. Place the SIM card cover down and then gently push down and slide upwards until the cover and SIM card are held securely in place. A small click will be audible.

Observe the battery contacts (the gold coloured contacts must face towards the top left) and insert the battery.




Slide the back cover back until it snaps into place.

SETTING UP

Charging the battery

Charging via the Mini USB Port

Plug the charger into a wall socket.

Connect the lead from the charger into the Mini USB port on the bottom of the telephone (pull back the protective flap first). During charging, the battery icon  starts to fill.



Charging via the Charging Unit

Plug the charger into a wall socket.

Connect the lead from the charger into the Mini USB port on the charging unit.

Place the mobile telephone onto the charging unit.




SETTING UP

Note: Only use batteries and chargers supplied with the telephone. The guarantee will be invalid if an unapproved cable is used. Keep the battery contacts clean and free of dirt. Try and avoid removing the battery as this could short circuit the battery.

If the battery is completely discharged, it may take a few seconds before the charging indicator appears on the display or before any calls can be made.


Before the handset is first used, the battery must be charged for a minimum of 4 hours.

Switching On/Off

Press  for 3 seconds or longer to switch the telephone on.

If no SIM card is inserted in the cellular phone, a message that Insert SIM is displayed in the standby mode. In this case, only emergency calls can be made.

If this is the first time the phone has been switched on with the SIM inserted, you will be prompted to enter the time and the date (use the numeric keypad).


Hold down  key for 3 seconds until the power off tone sounds, then the display disappears.

SETTING UP

Note:

Nothing will appear on the LCD when battery power is very low. YOU SHOULD FULLY CHARGE THE PHONE BEFORE USING.

Battery Use

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery power. The more bars displayed, the more power available.



When the battery charge is low, a warning message will be displayed '**CHARGE THE BATTERY**'. The back lighting and certain other functions may stop working. When the battery is too weak for the telephone to operate, the handset will automatically switch off. Battery talk and standby times are subject to change. Replace the battery when the battery power has deteriorated noticeably (requires charging more frequently).

USING THE TELEPHONE

Standby Mode

When the telephone is ready for use and you have not entered any characters, the telephone is in standby mode. You can set the telephone to standby mode by

pressing .

Making a Call

Flip open the cover and dial the number on the keypad.

Press **CLEAR** soft key to delete an incorrect digit.

Press ; the number is automatically dialed.



To end the call, simply press .

USING THE TELEPHONE



Making a Call from the Call Record


You can find numbers dialled, received or missed in the call record.

Press  to enter the call record.

Use  or  to scroll through the lists available.

Press **OK** soft key to select the required list.

Use  or  to scroll through the telephone numbers.



On finding the desired number, press ; the number is automatically dialled.

To end the call, simply press .


Making a Call from the Phone Book


If you have stored numbers in the phone book, you can dial numbers using the phone book.

Press **Name** in standby mode.

Use  or  to scroll through contact names in the phonebook or press the first characters of the name (wait 2-3 seconds to display the research)

USING THE TELEPHONE

On finding the desired name, press ; the number is automatically dialled.



To end the call, simply press .

Making a Call using Quick Dial

If you have stored numbers in the quick dial locations, press either M1, M2 or M3 (dependant on who you wish to ring). The chosen telephone number will be dialled automatically.

Making a Call from the Dialed Numbers List

Press  to display the outgoing call list.

Use  or  to scroll through the list and find the desired number.

Press  again; the number is automatically dialled.


Receiving a Call

When an incoming call is received the telephone rings and the small white LED will flash. If the Caller ID service is activated, the caller's telephone number will be

USING THE TELEPHONE

displayed. If this caller's number is stored in the Phonebook, the associated name will be displayed.

Press  to answer.




To end the call, simply press  or flip the cover closed.


Rejecting a Call

To reject an incoming call, simply press  or the soft key **REJECT**.



Amplification Function

Your phone is equipped with a specialized amplification function designed to fit your needs. During a

conversation you can use the  or  key and the  key on the left side to adjust the receiver volume.

You can also press the  control on the right side of the phone repeatedly to fit the levels to your hearing requirements. The selected level will be displayed on the LCD (up to 5 levels).

USING THE TELEPHONE

When you press the  key in receiver mode during a conversation, the Amplifier indicator on the handset lights on. If you press the  key again, the indicator will go out.

Please note that the phone will retain the current sound levels (Amplify on or Amplify off) automatically.

USING THE TELEPHONE

Options During a Call

You can use a variety of functions during a call by pressing the **OPTION** soft key.

Hold Single: Hold the current call.

End Single: End the current call (same as ).

New Call: Call another number (three-party call).

Phonebook: Search the phonebook.

Message Center: Write or read messages.

Mute: Disable the microphone (mute).



DTMF: Enable the user to dial the extension number.

Handsfree Function

During a call, you can press H-Free to activate handsfree mode, which allows you to speak without holding the phone.

Press H-Held to return to normal mode.


Note: Before putting the handset to your ear, please ensure you have switched the speakerphone off.

To adjust the volume, press the  or  key on the left side of the phone repeatedly.

Writing/Sending/Storing a new message

You can create a text message containing up to 160 alphanumeric characters and send it. To do this, proceed as follows:

1. Press **Menu** in standby mode.
2. Press **Ok** to select **Short Message**.
3. Press **Ok** again to select **Write Message**.
4. Enter the message text (up to 160 characters). Press

the  key to switch among different inputting mode while press **Clear** soft key to edit it. Then press **Options** to confirm, press **Ok** to choose:



Send - Send the message only.

Save and Send - Send the message and save it in Outbox.

Save - Save the message in the Outbox.




Send To Many - Add more recipients for the message.


Send By Group - Add a whole group for the message.

If you have previously selected **Send** or **Save and Send** option, enter the phone number to which you want to send the message by using the keypad, or press **Search** to enter the phonebook in order to choose a desired entry. Press  or  key repeatedly to choose one, then press the **Ok**. Press **Ok** again to confirm and send the message. When the message is being sent, the display shows **Sent OK**, or it shows **Not Sent**.

Inbox

The Inbox stores the messages you have received. You can forward, reply, delete, edit these messages or store the sender's number to your phone or SIM card. When a new short message is received, the LCD display shows **1 New Message**, and you can press **Read** to open it.

1. Press **Menu** in standby mode.
2. Press **Ok** to select **Short Message**.
3. Press  key to select **Inbox**, press **Ok**.
4. Select the desired message by using  or  key.

Unopened messages are marked with . Opened

messages are marked with . Press **Ok**.

5. You can access the following options by pressing

Options:

Reply - To send a reply to the selected message.

Delete - To delete the selected message.

Edit - To edit the selected message.

Forward - To send the received message to another person.

Copy to SIM - To copy this message to SIM card.

Move to SIM - To move this message to SIM card.

Delete Inbox - To delete all the messages in the inbox.





Copy All - To copy all the messages in the inbox to SIM card.

Move All - To move all the messages in the inbox to SIM card.

Use Number - To extract the sender's number and store it to the phone or SIM card.

Outbox

The Outbox stores successfully sent and saved messages.

1. Press **Menu** in standby mode.
2. Press **Ok** to select **Short Message**.
3. Repeatedly press  or  key to select **Outbox**, press **Ok**.
4. Select the desired message by using  or  key, press **Ok**. The display will show the whole message.
5. You can access the following options by pressing

Options:

Send - To send the selected message.

Edit - To edit the selected message.

Delete - To delete the selected message.

Copy to SIM/Phone - To copy this message to SIM card or your phone.

Move to SIM/Phone - To move this message to SIM card or your phone.

Delete Outbox - To delete all the messages in the outbox.





Copy All - To copy all the messages in the outbox to SIM card.

Move All - To move all the messages in the outbox to SIM card.

Use Number - To extract the sender's number and store it to the phone or SIM card.

Template

The template folder stores 9 commonly used expressions. You can also edit them according to your needs.

1. Press **Menu** in standby mode.
2. Press **Ok** to select **Short Message**.
3. Repeatedly press  or  key to select **Template**, press **Ok**.
4. Select the desired expression by using  or  key, press **Options**.



Edit - To edit the selected sentence.

Erase - To erase the selected sentence.

Write Message - To quote the sentence to write message.

Message Settings

You can set various options for Message center number, Message validity, Delivery reports, Reply via same centre and Cell info display.

1. Press **Menu** in standby mode.
2. Press **Ok** to select Short Message.
3. Repeatedly press  or  key to select **Message Settings**, press the **Ok**.

Profile Setting

Up to 4 types, from **Profile 1** to **Profile 4** are available.

Common Setting

Delivery Report

SMS

Reply Path: If you activate this feature, when you reply to messages, your message usage is charged to the recipient's service account instead of yours.

Memory Status

You can check the number of messages stored in the SIM card and the phone. For example, SIM:70.00%, PHONE:20.00%.

Preferred Storage

You can set the short message storage mode. If you select **SIM** option, when you receive a new short message, it will be stored in SIM card by default. When the memory of SIM card is full, new messages will be stored in the phone. Otherwise new messages will be stored in the phone firstly.






PHONE BOOK

The phonebook built in your mobile phone allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the phone number.


Adding Phonebook Entries

You can add phonebook entries by using the menu or in standby mode.

Way 1: by using the menu

1. Press **Menu** in standby mode.
2. Press  key to select **Phone Book**, press **Ok**.
3. Press  key to select **Add New Entry**, press **Ok**.
4. Press  or  key to select an option between **To SIM** or **To Phone**, press **Ok**.
5. Press **Edit** soft key. Enter a name that you want to use, press **Save** soft key. For details please see the Character Map.
6. Press  key to move to number field, enter the appropriate number (up to 40 digits), press **Ok**.
7. After that, press **Yes** to save, then the LCD display shows **Done**. Press **No** to cancel and quit.

Notes:

- In step 5, to switch among different inputting mode, press the  key while entering the text.
- If you make a mistake while entering a number or a name, press **Clear** soft key to delete the last character.

PHONE BOOK

Way 2: in standby mode

1. Enter a phone number while in standby mode and then press **Save**.
2. Complete the storing of the entry by starting from step 4 described in Way 1.

Character Map

To enter a specific alphanumeric character, press one or more times the relevant key for the required character according to the following table: once for the first character, twice for the second and so on.

Key	Characters in the displayed order									
	ABC									
0	(spc)	0								
1	.	,	-	?	!	?	@	:	#	\$ / _ 1) (; *
2	A	B	C	2	Ä	Á	À	Â	Ç	Ä Æ
3	D	E	F	3	É	È	Ê	Ë		
4	G	H	I	4	Ì	Í	Î	Ï	í	
5	J	K	L	5						
6	M	N	O	6	Ñ	Ò	Ó	Ô	Œ	Ö Ø
7	P	Q	R	S	7					
8	T	U	V	8	Ù	Ú	Û	Ü		
9	W	X	Y	Z	9	Ý	Ý			

PHONE BOOK

Key	Characters in the displayed order
	abc
0	(spc) 0
1	. , - ? ! ? @ : # \$ / _ 1) (; *
2	a b c 2 á à â ã ç æ å
3	d e f 3 é è ê ë
4	g h i 4 ì í î ï
5	j k l 5
6	m n o 6 ñ ò ó ô ö ø
7	p q r s 7 ß
8	t u v 8 ù ú û ü
9	w x y z 9 ÿ ý

Searching an Entry in Phonebook



You can search the entries stored in the phonebook by entering the first character of their name (alphabetic search).

1. Press **Menu** in standby mode.
2. Press **▲** key to select **Phone Book**, press **Ok**.
3. Press **Ok** again to select **Search Entry**.
4. Enter the first character of the entry name you want to review, press **Options**. Then press **Ok**. Repeatedly press the **▲** or **▼** key to move to the desired entry.

PHONE BOOK

Using Phonebook Options

You can edit, delete or dial any phonebook number. You can also send a message to the number you select.

1. Find the desired entry in the phonebook.
2. Press **Options** soft key. Then press  or  key to choose the desired option:

Dial - To dial out the selected entry number.

View - To view the detail of the selected entry.

Edit - To edit the selected entry.




Delete - To delete the selected phonebook entry.

Copy - To copy the selected phonebook entry.

Move - To move the selected phonebook entry.

Copying all the Phonebook Entries

You can copy all the phonebook entries between the phone and SIM card.




1. Press **Menu** in standby mode.
2. Press  key to select **Phone Book**, press **Ok**.
3. Repeatedly press  or  key to select **Copy All**, press **Ok**.
4. You can select an option between **From SIM** and **From Phone**, then press **Ok**.
5. Press **Yes** to confirm or press **No** to cancel.

Deleting the Phonebook Entries

You can delete all the phonebook entries stored in the phone or SIM card, you can also delete them one by one.












1. Press **Menu** in standby mode.

PHONE BOOK

2. Press  key to select **Phone Book**, press **Ok**.
3. Repeatedly press  or  key to select **Delete**, press **Ok**.
4. Select **From SIM**, **From Phone** or **One By One**, press **Ok**.
5. If you select **From SIM** or **From Phone**, you need to enter the password. The display shows **Delete all**. Press **Accept** to confirm or press **Cancel** to quit.




Caller Group

You can edit the caller group settings.

1. Press **Menu** in standby mode.
2. Press  key to select **Phone Book**, press **Ok**.
3. Repeatedly press  or  key to select **Caller Group**, press **Ok**.
4. Select **Friends**, **Family**, **VIP**, **Business** or **Others**, press **Ok**.
5. Press **Edit**, you can alter the name of this group. Press  key to highlight the ring type at the right of the  icon, then press **Edit**. Use  or  key to select the ring you want to use with this group, press **Ok**.
6. Press  key to highlight the picture type at the right of the  icon, then press **View**. Use  or  key to select the picture you want to use with this group, press **Ok**.
7. After that, you can also edit the member list, press **Yes** to add or **No** to cancel.

PHONE BOOK

Extra Number

1. Press **Menu** in standby mode.
2. Press  key to select **Phone Book**, press **Ok**.
3. Repeatedly press  or  key to select **Extra Numbers**, press **Ok**.

Owner Number: Enter your own phone number.




Service Dial Number: Display the service dial number.

Please note that just some service provider has this number.

SOS Number: Display the emergency number. If you have locked the SIM card or your phone, after the phone is switched on, the display shows SOS. Press the right soft key to dial out the emergency number.

Settings

You can edit the caller group settings.

1. Press **Menu** in standby mode.
2. Press  key to select **Phone Book**, press **Ok**.
3. Repeatedly press  or  key to select **Settings**, press **Ok**.

Memory Status

You can check the number of phonebook entries stored in the SIM card and the phone. For example, SIM:12/100, Phone:0/100.

Preferred Storage

PHONE BOOK

Select **SIM** or **Phone** and press **Ok** to select the default storage for new phonebook entries.

Name List Filter

SIM Only: In the standby mode, press **Name** to show phonebook entries stored in the SIM card only.

Phone Only: In the standby mode, press **Name** to show phonebook entries stored in the phone only.







Both: In the standby mode, press **Name** to show phonebook entries both in the phone and in the SIM card.

CALL RECORD

Using this function, you can check received calls number, dialed calls number and missed calls number.






Received Calls

Displays phone numbers of calls you have answered.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Repeatedly press  or  key to select **Received Calls**, press **Ok**.
4. Use  or  key to scroll through the list until you find the desired number.
5. Press **Options** to display the following options:
Delete - To delete the selected number.
Save to Phone book - To save this number in the phonebook.
Dial - To dial out the selected number.
Edit - To edit the selected number.
Send SMS - To send a short message to the selected number.

Dialed Calls

Displays phone numbers of calls you have dialled.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Press  key to select **Dialed Calls**, press **Ok**.
4. Use  or  key to scroll through the list until you find the desired number, press **Ok**.

CALL RECORD

5. Press **Options** soft key to display the following options:

Delete - To delete the selected number.

Save to Phone book - To save this number in the phonebook.

Dial - To dial out the selected number.



Edit - To edit the selected number.

Send SMS - To send a short message to the selected number.



Missed Calls

When you have missed calls, the message **x Missed Calls!** appears on the display. For example: **2 Missed Calls!**. Press **Read** to review the details or press **Back** to exit. You can also review missed calls in **Call Record** menu as follows:

1. Press **Menu** in standby mode.

2. Repeatedly press  or  key to select **Call Record**, press **Ok**.

3. Press **Ok** to select **Missed Calls**.

4. Use  or  key to scroll through the list until you find the desired number, press **Ok**.

5. Press **Options** soft key to display the following options:

Delete - To delete the selected number.

Save to Phone book - To save this number in the phonebook.

Dial - To dial out the selected number.







Edit - To edit the selected number.

CALL RECORD

Send SMS - To send a short message to the selected number.







Delete Call Log

You can delete the whole call list.

1. Press **Menu** soft key in standby mode.
2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Repeatedly press  or  key to select **Delete Call Log**, press **Ok**.
4. Press  or  key to select among **Missed Calls**, **Dialed Calls**, **Received Calls** and **Delete All**, press **Ok**. Then press **Yes** to confirm or press **No** to quit.

Call Time

Displays the duration of selected calls including received and dialed.







1. Press **Menu** soft key in standby mode.
2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Repeatedly press  or  key to select **Call Time**, press **Ok**.
4. Press  or  key to scroll through **Last Call Time**, **Total Sent**, **Total Received** and **Reset All Time**. Press **Ok** to clear them or press **Back** to quit.

Call Cost

Displays the call cost.







1. Press **Menu** soft key in standby mode.

CALL RECORD

2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Repeatedly press  or  key to select **Call Cost**, press **Ok**.
4. Press  or  key to select among **Last Call Cost**, **Total Cost**, **Reset Cost**, **Max Cost** and **Price Per Unit**. Press **Ok** to clear them or press **Back** to quit.

SMS Counter



Displays the number of the sent and received messages. You can also clear the message counters.

1. Press **Menu** soft key in standby mode.
2. Repeatedly press  or  key to select **Call Record**, press **Ok**.
3. Repeatedly press  or  key to select **SMS Counter**, press **Ok**.
4. Press  or  key to scroll through **Sent** and **Received**. Press **Reset** to clear them or press **Back** to quit.

HANDSET SETTINGS

Clock Settings

You can set the date, time and time format, you can also select to update the date and time automatically.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press **Ok** again to select **Phone**.
4. Press **Ok** again to select **Time** and **Date**.

Set Time/Date

Sets the date and time.

You need to use the numeric keypad to enter the date and time. The date format is according to the Format you have set.

Note:

You need to enter the time in a 24-hour format.



Set Format

Set the time format, **24** or **12**.

Set the date format, **YYYY/DD/MM**, **DD/MM/YYYY** or **MM/DD /YYYY**.

Schedule Power

You can set the mobile phone to be powered on or powered off automatically on a defined time, up to 4 times can be set.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.

HANDSET SETTINGS

3. Press **Ok** again to select **Phone**.
4. Press **▼** key to select Schedule **Power On/Off**, press **Ok**.
5. Repeatedly press **▲** or **▼** key to select a position, press **Edit**.
6. Press **Edit** again to set the status, select **Enable** or **Disable**, press **Ok**.
7. Press **▼** key to highlight **Power On** or **Power Off**, then press **Edit**. Select **Power On** or **Power Off**, press **Ok**.
8. Press **▼** key to highlight the time, then press **Edit**. Input the time in 24-hour format, press **Ok**.
9. Press **Done** to confirm.



When the time you have set beforehand is up, a prompt message "**Power off?**" will appear. Press **Yes** to power off the mobile phone or press **No** to cancel.

Language

You can change the language used to display the menu messages. There are 12 languages for selection, English, French, Spanish, Danish, Italian, German, Norwegian, Dutch, Hungarian, Russian, Hebrew and Swedish.









1. Press **Menu** in standby mode.
2. Repeatedly press **▲** or **▼** key to select **Settings**, press **Ok**.
3. Press **Ok** again to select **Phone**.
4. Repeatedly press **▲** or **▼** key to select **Language**, press **Ok**.

HANDSET SETTINGS

5. Press  or  key to select the language you want and then press **Ok** to confirm.





Dedicated Key

Using this function, you only need to press one key to enter the desired setting mode directly.



1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press **Ok** again to select **Phone**.
4. Repeatedly press  or  key to select **Dedicated Key**, press **Ok**.
5. Press  or  key to select one from **Up** and **Down**, then press **Edit**.
6. Repeatedly press  or  key to select one from multiple options.
7. After the setting, press **Ok** to confirm and exit.

LCD Backlight

The phone features a backlight LCD that is illuminated whenever you touch a key, place the phone on the charger or remove the phone from the charger. Set the delay time before the display backlight is turned off.






1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press **Ok** again to select **Phone**.
4. Press  or  key to select **LCD Backlight**, press **Ok**.

HANDSET SETTINGS

5. Use  or  key to select an option from **15 Seconds**, **30 Seconds** and **60 Seconds**, then press **Ok** to confirm.






Wallpaper

Using this feature, you can customize the wallpaper according to your taste and needs.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  key to select **Display**, press **Ok**.
4. Press **Ok** to select **Wallpaper**.
5. Use  or  key to select one from **Image 1** to **Image 4**, press **View** to preview it, and then press **Ok** to confirm.

Show Date and Time






The LCD display will show the date and time in standby mode if you have activated this function.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  key to select **Display**, press **Ok**.
4. Press  or  key to select **Show Date and Time**, press **Off** to cancel the date and time display in the standby mode.
5. Press **On** to display the date and time in the standby mode.





HANDSET SETTINGS

Show Owner Number

The LCD display will show the owner number in standby mode if you have activated this function.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  key to select **Display**, press **Ok**.
4. Press  or  key to select **Show Owner Number**, press **Off** to cancel the owner number display in the standby mode.
5. Press **On** to display the owner number in the standby mode.

Call Setup

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Repeatedly press  or  key to select **Call**, press **Ok** for the following settings.

Caller ID

Controls display of your phone number on the recipients phone. Select an option and press **Ok**.

Set By Network: Use default setting by the network.

Hide ID: Never show your number.

Send ID: Always show your number.

Call Waiting

Select an option and press **Ok**. Before using this service, check available services from your service provider.

HANDSET SETTINGS

Activate: Enables the function.

Deactivate: Disables the function.

Query Status: Displays if the service is active or not.

Call Divert

Using this function, you can divert incoming calls to a specified phone number. Select a condition and press **Ok**, then select **Activate**, **Deactivate** or **Query Status**.

Divert All Voice Calls: Diverts all voice calls.

Divert If Unreachable: Diverts incoming calls if the phone is turned off or out of range.

Divert If No Answer: Diverts incoming calls if unanswered.

Divert If Busy: Diverts incoming calls if the line is busy.

Divert All Data Calls: Diverts all data calls.

Cancel All Divert: Cancel all the divert.

Call Barring

Using this network service, you can limit incoming and outgoing calls from your phone.

Note:

To change these settings a password is needed.

Outgoing Calls

Restrict the user to dial out the number.

Incoming Calls: Restrict the user to receive incoming calls.

Cancel All: Cancel all call barring (password needed).

Change Barring PW: Change the barring password.

HANDSET SETTINGS

Auto Redial

If you activate the Auto redial function, when the line does not get through, the phone will auto redial this number after the time you have set in advance if you have not cancelled the call.

1. Press **Menu** in standby mode.
2. Repeatedly press **▲** or **▼** key to select **Settings**, press **Ok**.
3. Press **▲** or **▼** key to select **Call**, press **Ok**.
4. Press **▲** or **▼** key to select **Auto Redial**, press **On** to enable the function or press **Off** to disable it.

Other Settings

1. Press **Menu** in standby mode.
2. Repeatedly press **▲** or **▼** key to select **Settings**, press **OK**.
3. Press **▲** or **▼** key to select **Call**, press **OK**.
4. Press **▲** or **▼** key to select **More**, press **OK**.

Call Time Display: Display the call time.

Call Time Reminder: Remind you at a regular intervals.

SOS Setting





You can specify 6 recipients for SOS calls and one recipient for SOS message.

1. Press **Menu** in standby mode.
2. Repeatedly press **▲** or **▼** key to select **Settings**, press **Ok**.
3. Press **▲** or **▼** key to select **SOS**, press **Ok**.

HANDSET SETTINGS









SOS Number Setting

Using this function, you can set up to 6 SOS numbers.

1. Press **Ok** to choose **SOS Number**.
2. Repeatedly press  or  key to choose one from 6 positions, press **Edit**.
3. Press **Ok** soft key to choose **Assign number**.
Repeatedly press the  or  key to move to the desired entry, press **Ok** soft key, the LCD display shows **Done**.

SOS Message Setting

Message Receiver

1. Press  key to choose **SOS Message**, press **Ok**.
2. 5. Press **Ok** soft key to choose **Receiver**.
3. Repeatedly press  or  key to choose one from 3 message numbers, press **Edit**.
4. Press **Ok** soft key to choose **Assign number**.
Repeatedly press the  or  key to move to the desired entry, press **Ok** soft key, the LCD display shows **Done**.
5. Press  key to choose **SOS Message**, press **Ok**.
6. Press  key to choose **Context**, press **Ok** soft key.
7. Enter the message text (up to 40 characters). To switch among different inputting mode, press the  key while entering. After that, press **Save** soft key, the LCD display shows **Save**, press **Yes** to confirm, **Done** appears.

HANDSET SETTINGS

Use SOS Function





In emergency cases, the user can move the **SOS** switch to **ON** position for help. If the user has preset an **SOS** message and selected the relative SMS receiver, after move the SOS switch to **ON** position (left side), the phone will send the SOS message before entering this SOS list calling. Up to 6 numbers can be preset as SOS list. After entering the **SOS** mode, the phone will dial numbers on this SOS list automatically one by one. If a busy tone is detected or a call is aborted by user, the next number will be dialed **directly**. The phone will dial these numbers until the handset is powered off. In this mode:

If you want to quit the **SOS** mode, move the **SOS** switch to OFF position (right side).






Speed Dial

You can save phone numbers and then dial them easily whenever you want, simply by pressing one of the speed dial keys (**M1~M3**), each number can be up to 30 digits. Each number that you want to use as speed dial number has to be stored in the phonebook.

Storing Speed Dial Numbers

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Repeatedly press  or  key to select **Speed Dial**, press **Ok**.

HANDSET SETTINGS










4. Press  key to select **Set Number**, press **Ok**.
5. Use  or  key to select the desired position **M1~M3**, press **Options**.
6. Press **Ok**, then repeatedly press  or  key to select a phonebook entry, press **Ok** again to confirm.

Dialing Speed Dial Numbers

After the setting, you can press one of the speed dial keys (**M1~M3**) to dial out the corresponding number.

Using Speed Dial Options

After you have set a number allocated for a speed dial key, you can enter the corresponding options.





1. Press **Menu** soft key in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Repeatedly press  or  key to select **Speed Dial**, press **Ok**.
4. Press  key to select **Set Number**, press **Ok**.
5. Use  or  key to select the desired position **M1~M3**, press **Options**.
6. Press  or  key to choose an option you need:
Edit: Change the speed dial number.
Delete: Delete the speed dial number.

Network Setup

This function allows you to choose a network when you are using an international roaming service whether by manual or by automatic selection. However, a roaming network is available to choose when your network

HANDSET SETTINGS

provider has an agreement on roaming service with the roaming provider.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  or  key to select **Network**, press **Ok**.

Network Selection

New Search: Start a new search.





Select Network: Search the network.

Selection Mode: **Automatic** or **Manual**, press **Change** to modify.

Preferred Networks

Select **CMCC 46000**, **46002** or **41004**.

Security Settings

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  or  key to select Security, press **Ok**.

SIM Lock

Press **On/Off** and press **Ok** to enable/disable the SIM lock.

Phone Lock

Press **On/Off** and press **Ok** to enable/disable the phone lock.

Note:

HANDSET SETTINGS

You need to input the current phone lock password to change this setting. The default password is 1122.

Fixed Dial

You can restrict calls to certain numbers saved on the SIM card. The numbers in the fixed dial list are protected by PIN2 code.

Mode: Press **On/Off** and press **Ok**. Enter PIN2 and press **Ok** to confirm.

Fixed Dial List: You can add, edit and delete fixed numbers. Enter PIN2 and press **Ok** to confirm.

Barred Dial

You can set certain numbers to be barred dialing out. Please note that some SIM card does not support this function.

Change Password

PIN: Changes PIN code.

PIN2: Changes PIN2.

Phone Lock Password: Changes the phone lock password.





You should enter the current phone password before entering a new one (the default one is **1122**).

Restore Factory

If you choose to reset the handset to restore the initial settings, all the user selectable features are restored to the factory defaults:

1. Press **Menu** in standby mode.







HANDSET SETTINGS

2. Repeatedly press  or  key to select **Settings**, press **Ok**.
3. Press  or  key to select **Restore Factory**, press **Ok**.
4. You will be asked to enter the current Phone Code (the default code is **1122**). Use the numeric keypad to enter the code and press **Ok**.
5. Press **Yes** to confirm the reset. If the password you have entered is correct, the LCD display shows **Done**, otherwise you will be indicated to enter it again.

PROFILES

Profiles

There are 6 kinds of profiles available. You can select desired profile and make relative detail setting.





1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Profiles**, press **Ok**.
3. Use  or  key to choose among **General**, **Meeting**, **Outdoor**, **Indoor**, **Headset** and **Bluetooth**, then press **Options**.
4. Press  or  key to select an option from **Activate** and **Customize**. If you select **Customize**, you can set the Ringing tone, Message tone, Ringing volume, Key tone volume, Alarm tone, Power On, Power Off ring, Alert type and Ring type according to your necessary and preferences.

TOOLS

The phone provides various functions such as Calendar, Alarm, Bluetooth and Calculator.







Calendar

Using this feature, you can review the calendar and move to the desired date quickly.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Toolbox**, press **Ok**.
3. Press **Ok** to select **Calendar**. The current month is displayed with current date highlighted in a blue background. To display the next or previous month, repeatedly press  or  key.
4. Move to a date by pressing **Options**. Then press **Ok** to choose **Jump To Date**.
5. Press **Ok** again, enter the date in the format as directed, press **Ok**.
6. Press **Done** to jump to the date you have set.

Alarm

You can set an alarm to occur once or once a week on the same day at the same time. Up to 5 alarms are available.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Toolbox**, press **Ok**.
3. Press  or  key to select **Alarm**, press **Ok**.
4. Repeatedly press  or  key to select an option among 5 positions, press **Edit**.

TOOLS

5. Press **Edit** to complete the following settings.

Alarm status: Off/On

Alarm time

Repeat: Once/Everyday/Days

Days of the week

Audio Options: Tone/FM Radio

Snooze time: Default, 1~10

Alert type: Vibra and Ring/Ring/Vibration Only



6. After all the setting, press **Done**, then press **Yes** to confirm.

When the alarm sound, press **Stop** to cancel it or press **Snooze** to let it ring again.

Bluetooth

Using this function, you can connect wirelessly to other bluetooth compatible devices such as headsets.

1. Press **Menu** in standby mode.

2. Repeatedly press  or  key to select **Toolbox**, press **Ok**.

3. Repeatedly press  or  key to select **Bluetooth**, press **Ok** for the following settings.

Power On/Off

Press On or Off to enable/disable bluetooth.

Inquiry Audio Device

Searches for available bluetooth audio devices.

My Device

Lists saved devices and enables you to add new devices.

Select the device from the list and press **Option**.

Active Device

The device currently connected with your phone.

TOOLS

Setting

Visibility: Makes your phone visible/invisible to other devices.

Change Device Name: Modifies the name your phone should appear with for other bluetooth devices.

Authentication





Audio Path: Selects audio path between Phone and BT Headset.


About



Lists the device information such as name, address, etc.

Calculator

Using this function, you can perform simple calculations such as addition, subtraction, multiplication and division.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Toolbox**, press **Ok**.
3. Repeatedly press  or  key to select **Calculator**, press **Ok**.
4. Enter the first number using the numeric keypad.

Press  key to enter decimal points if necessary.

5. Press  or  key repeatedly to choose the required arithmetic symbol as it appears.
+(Addition), -(subtraction), X(multiplication), /(division).
6. Enter the second number using the numeric keypad.
7. To get the result, press **Ok**.

Note:

To erase any mistake or clear the display, press **Clear**.

FM RADIO

Before using this feature, remember to insert the headset first.

1. Press **Menu** in standby mode.
2. Repeatedly press **▲** or **▼** key to select **FM Radio**, press **Ok**.
3. Press **Options** soft key, select one from the following options:

Activate: Turns the radio on.

Channel List: Press keys 1-9 to quick select a preset channel while the radio is playing.

Manual Input: Sets channel manually and save it.

Preset Auto Search: Searches all the available channels automatically.





Settings: Sets the background play and loud speaker.

You can also press **▲** or **▼** key to search the channel and use **V+** or **V-** key to adjust the volume.



GAME

There are four games available for entertainment, Puzzle, Robot, UFO and Fruit.

1. Press **Menu** in standby mode.
2. Repeatedly press  or  key to select **Games**, press **Ok**.
3. Press  or  key to select one from 4 different games, press **Ok**.

To adjust game settings, enter the **Game Settings** menu.

FEATURE LIST

- Fit for 850/900/1800/1900MHz public mobile communication network
- 2 inches large LCD display with 176X220 and 262K colour
- HAC hearing aid function
- FM Radio function
- Bluetooth compatible
- Large keypad
- Phonebook with up to 100 entries in phone
- Received call list with up to 20 entries
- Missed call list with up to 20 entries
- Numbers in call list can be called back/added to phonebook/deleted/edited
- Dialed call list with up to 20 entries
- Up to 200 short messages
- 10 ring melodies with 7 volume levels adjustable in Profiles menu
- Amplification control up to 35 dbm
- Tone control up to 10 dbm
- More safety & Easier operation
- Display with even better readability
- Hands-free speakerphone
- Up to 6 emergency numbers
- The emergency numbers are dialled automatically after one press of a key
- Send an emergency SMS message to emergency numbers
- Alarm tone & Message alert tone selectable
- Keypad volume adjustable in Profiles menu (7 levels)
- 6 Profiles selectable

FEATURE LIST

- Audio volume adjustable (7 levels)
- Call duration display
- Date & Time setting
- Phone code protection
- 11 languages selectable
- LCD backlight time selectable
- Games
- Calculator
- Calendar
- Call waiting
- Call diverting
- Call barring
- Flashlight function
- New call LED

TROUBLESHOOTING

Telephone cannot be switched on.

- Check battery is inserted and check that it is inserted correctly.

Nothing appears on the display.

- Check the handset is switched on.
- Check the battery and SIM are inserted correctly.

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM.

No signal icon is displayed.

- There is no network connection. Move around to try and get to an area where there may be coverage.
- Contact your service provider.

Message to say that a function is not possible

- Your service provider might not provide the function in question or you may need to subscribe to that service.
Contact the service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed.

- Ensure the SIM is inserted correctly.

The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours.

TROUBLESHOOTING

- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Try a new battery.

Failure to link to the network

- The signal is too weak, or there may be some radio interference.
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

Cannot make a Call.

- Is the SIM card registered to the network?
- Is the bar outgoing calls feature enabled?
- There may be a problem with the network, call your service provider.
- Check the service provider number, local area number or NMC number (see Handset Settings).

Cannot answer a call.

- Is the bar incoming calls feature enabled?
- Is the call diverting function enabled?

The keys appear to be locked.

- Power the phone off and then on.

Caller Number is not displayed.

- Ensure you have subscribed to the Caller ID service. Contact your service provider.
- The caller may have withheld their details.

TROUBLESHOOTING

- Let the phone ring a few times as there may be a delay in receiving the Caller ID information.

Any problems not referred to above

- Check through the User Guide.
- Power off and then on again. Check to see if the problem persists.

SAFETY INFORMATION

General

Only use the power supply included with the product. Only use the approved rechargeable battery supplied. Do not open the handset (except to replace the handset batteries) or base. Contact the helpline for all repairs. Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals. If you are sure you are not going to use the telephone for over a month, remove the battery.

Cleaning

Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight. Always ensure there is a free flow of air over the surfaces of the telephone. Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms. Do not expose your product to fire or other hazardous conditions. The telephone is designed for working within a temperature range of -20°C to 60°C.

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

SAFETY INFORMATION

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the device at a refuelling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation.

BACK-UP COPIES

Remember to make back-up copies or keep a written record of all-important information.

CHARGING

Do not use the telephone during charging



To prevent possible hearing damage, do not listen at high volume levels for long periods.

HEARING AID INFORMATION

Some phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

NETWORK SERVICES

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services. Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of one year. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF AWARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATION: Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 3. The telephone does not operate if the line current is lower than 18 mA.

The declaration of conformity may be consulted at www.geemarc.com.



GUARANTEE

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at

www.geemarc.com

Telephone 01707 384438

Or fax 01707 832529



UGCL8400BT_En_v1.6

geemarc™ United Kingdom
Telecom SA

geemarc™ FRANCE
Telecom SA

geemarc™ Deutschland
Telecom SA

5 Swallow Court
Swallowfields
Welwyn Garden City
Hertfordshire, AL7 1SB
For product support:
01707 384438
www.geemarc.com

Parc de l'Etoile
2, rue Galilée BP20061
59791 Grande Synthe CEDEX
Tél. service après vente :
03 28 58 75 99
www.geemarc.com

Siemensstrasse 10,
53121 Bonn
Deutschland
Tel: +49(0)228/ 74 87 09 0
Fax: +49(0)228/ 74 87 09 20
www.geemarc.com