

AMPLIDECT™ COMBI 295

QUICK START USER GUIDE

En

!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

Congratulations on purchasing your Geemarc AMPLIDECT COMBI 295 telephone. This telephone offers all the advantages of cordless technology (compliant with Digitally Enhanced Cordless Telecommunications-DECT standard) together with an easy to see big button keypad, ideal for those who with visual impairment. This telephone is hearing aid compatible. It is important that you read the instructions below in order to use your Geemarc telephone to its full potential.

CAUTION: Use only the battery pack provided. There may be a risk of explosion if a wrong type of battery is used for the parent unit. Do not subject the battery pack to extreme high or low temperatures, or low air pressure at high altitude during use, storage or transportation. Disposal of the battery pack into fire or a hot oven, or mechanically crushing or cutting or the battery can result in an explosion. Subjecting the battery pack to an extremely high temperature environment, or extremely low air pressure can result in an explosion, or leakage of flammable liquid or gas.

Normal operating temperature for the product(e.g.0°C~40°C).

Use only the adapters and battery pack listed below.

Power adapter information	
Manufacturer	Vtech Telecommunications Limited Address : 23/F, Tai Ping, Industrial Centre Block 1,57 Ting Kok Road Tai Po, Hong Kong
Model	VT05EEU06045(EU),VT05EUK06045(UK)
Input	100-240V 50/60Hz;
Output	DC6V 0.45A, 2.7W adapter
Average active efficiency	>73.8%
No load power consumption	0.09W
Rechargeable Battery Pack	
Manufacturer	Corun.
Model	Ni-MH AAA500x2. 2.4V, 500mAh.

PACKAGE CONTENTS

1 Telephone base, 1 Corded handset, 1 cordless handset, 2 Power adapter, 1 Charger, 1 Telephone line cord, 1 NiMh Battery pack, 1 Quick user guide.


INSTALLATION

Connecting the telephone

Connect the telephone line cord to the telephone line socket (A) and to the telephone wall socket (B).

Connect the lead from the power adapter to the small round socket on the base (C), then plug-in the power adapter to a mains outlet socket (D).

Note: Only use the power adapters supplied with the phone.

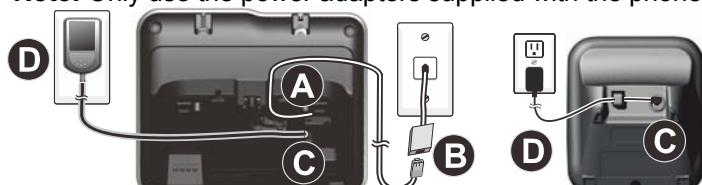

Connect the battery pack


Remove handset battery cover. Connect the short lead from the battery pack into the socket inside the battery compartment. Carefully fit the battery pack as shown. Align the battery cover flat against the battery compartment, and then slide it towards the center of the handset until it clicks into place.



Charge the batteries


Charge the batteries for at least 16 hours when charging for the first time.

Wall Mounting

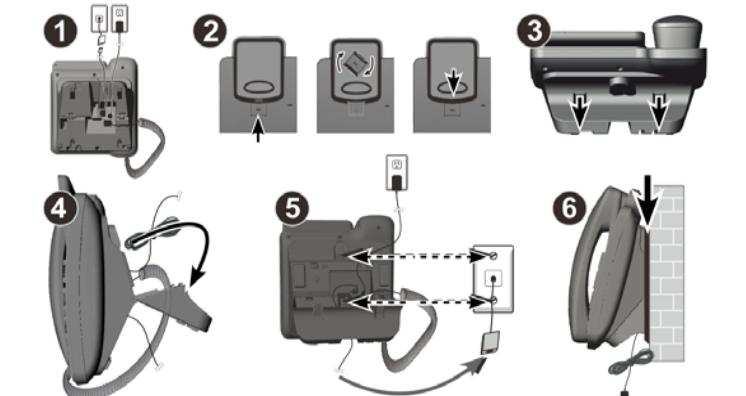

OVERVIEW

Telephone base

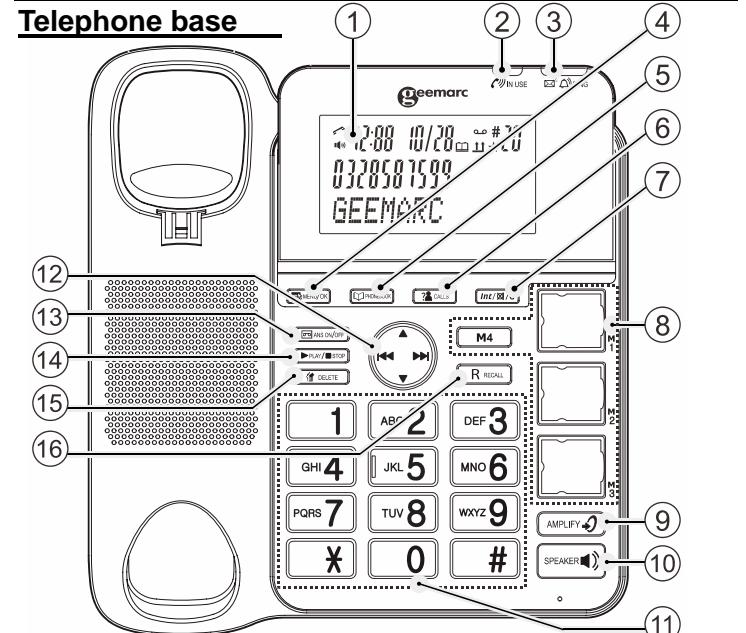

1- LCD DISPLAY

2- IN USE () : On during a call.

3- RING light ()

Flashes when there is an incoming call. On when the answering machine is switched on. Flashes when there are new memos or messages left on the answering machine.

4- MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

In Redial list/Call list: Press to store the number into Phonebook.

5- PHONEBOOK ()

In Idle: Press to access the phonebook.

6- CALLS (CALL LIST) ()

In Idle mode: Press to access the call list.

7- INT/MUTE/CLEAR (/C)

In main menu mode: Press to go back to idle screen.

In sub-menu mode: Press to go back to previous level.

In sub-menu mode: Press and hold to go back to idle screen.

In editing / predialing mode: Press to clear a character/digit.

In editing / predialing mode: Press and hold to delete all the character /digits

During a call: Press to mute / unmute the microphone.

In ringing: Press to silence the base ringer.

In idle mode: Press to intercom another system handset.

8- MEMORY KEYS (3 PHOTO SPEED DIAL KEYS; 1 MEMORY KEY - M4)

In idle mode: Dial your phone number and Press and hold the memory key until to hear a beep.

To use: Press to dial a number stored in the memory key.

9- VOLUME BOOST ()

During a call: Press to activate / deactivate the VOLUME BOOST function.

10- SPEAKERPHONE ()

In Idle mode or Phonebook / Call list / Redial list view mode: Press to make a call with speakerphone.

11- ALPHANUMERIC KEYPAD, STAR (*), HASH (#)

In predial or editing mode: Press to insert a digit.

0 key in predial or editing mode: Press and hold to insert a pause.

12- NAVIGATION KEYS

UP ()

In menu mode: Press to scroll up the menu items.

In Phonebook list / Redial list / Call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call or TAM message playback: Press to increase the volume.

REPEAT/OGM ()

In Idle mode: Press and hold to record OGM.

Press to playback OGM.

In TAM message playback mode: Press to go back to previous message.

MEMO/SKIP FORWARD ()

In Idle mode: Press and hold to record a memo.

In TAM message playback mode: Press to skip to next message.

DOWN/REDIAL LIST ()

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In Phonebook list / Redial list / Call list view mode: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call or TAM message playback: Press to decrease the volume.

13-ANS ON/OFF ()

In Idle: Press to switch the answering machine ON or OFF.

14. PLAY/STOP (/■)

In idle mode: Press to playback messages.

During TAM message playback: Press to stop playing messages.

15. DELETE ()

In TAM message playback mode: Press to delete the current TAM message playback.


In idle mode: Press and hold to delete all old messages.

16. RECALL ()

During a call: Press to activate Recall for use with Telephone Network Services such as Call Waiting.

During message playback: Press to call back the caller if the caller's number is available

Handset

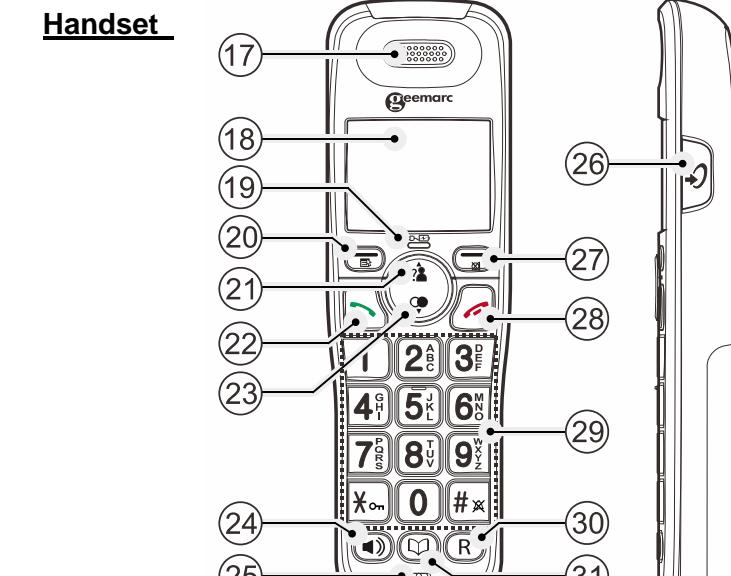

17- EARPIECE

18. LCD DISPLAY

19. CHARGE LIGHT ()

ON when the handset is charging.

20. MENU/OK ()

In idle mode: Press to access the main menu.

In sub-menu mode: Press to confirm the selection.

During a call: Press to access Intercom / Phonebook / Redial list / Call list.

21. UP/CALL LIST ()

In idle mode: Press to access the call list.

In menu mode: Press to scroll up the menu items.

In phonebook list / redial list / call list: Press to scroll up the list.

In editing mode: Press to move the cursor one character to the left.

During a call: Press to increase the listening volume.

During ringing: Press to increase the ringer volume.

22. TALK ON ()

In idle / pre-dial mode: Press to make a call in earpiece mode.

In phonebook / redial list / call list: Press to make a call to the selected entry in the list in earpiece mode.

During ringing: Press to answer a call in earpiece mode.

23. DOWN/REDIAL LIST ()

In idle mode: Press to access the redial list.

In menu mode: Press to scroll down the menu items.

In phonebook list / redial list / call list: Press to scroll down the list.

In editing mode: Press to move the cursor one character to the right.

During a call: Press to decrease the listening volume.

During ringing: Press to decrease the ringer volume.

24. SPEAKERPHONE ()

In idle / pre-dial mode: Press to make a call in speakerphone mode. Press again to switch to earpiece mode.

In phonebook list / redial list / call list: Press to make a call to the selected entry in the list in speakerphone mode. Press again to switch to earpiece mode.

During ringing: Press to answer a call in speakerphone mode. Press again to switch to earpiece mode.

25. MICROPHONE

26. VOLUME BOOST (→)

During a call: Press to switch on VOLUME BOOST.
Press again to deactivate VOLUME BOOST

27. CANCEL/MUTE (☒)

In main menu mode: Press to go back to idle screen.
In sub-menu mode: Press to go back to previous menu.

In sub-menu mode: Press and hold to go back to idle screen.

In editing / pre-dial mode: Press to delete a character / digit.

In editing / pre-dial mode: Press and hold to delete all the characters / digits.

During a call: Press to mute/resume the microphone.

During ringing: Press to silence the handset ringer.

In idle mode: Press to call (intercom) another handset.

28. TALK OFF (📞)

During a call: Press to end a call and go back to idle screen.

In menu / editing mode: Press to go back to previous menu.

In menu /editing mode: Press and hold to go back to idle screen.

In idle mode: Press and hold to power off the handset.

Press and hold to power on when it is off.

29. ALPHANUMERIC KEYPAD, STAR (☒), HASH (#☒)

In predial or editing mode: Press to insert a digit /character /☒/#.

☒ key in idle mode: Press and hold to enable or disable the keypad lock.

#☒ key in idle mode: Press and hold to turn on/off the ringer.

0 key in idle / pre-dial mode / number editing mode:

Press and hold to insert a pause.

30. R

During a call: Press to answer a new call if you are subscribed to Call Waiting service from your network service provider.

31. PHONEBOOK (📋)

In idle mode: Press to access the phonebook.

The phone settings are always set in the same manner:

Press **Menu/OK** button to open the main menu. Then use the **▼▲** buttons to select an entry and confirm it by pressing the **Menu/OK** button.

The factory preset PIN code is **0000**

Example:

Set the language on the base

Press **Menu / OK**, then select **▼▲**language, press **Menu / OK**, then select **▼▲**desired language and then press **Menu / OK** to confirm.

Set the language on the handset

Press **Menu / OK**, then select **▼▲**HS settings, press **Menu / OK**, then select **▼▲**language, press **Menu / OK**, then select **▼▲**desired language and then press **Menu / OK** to confirm.

MENU SETTING

Base

PHONEBOOK

►VIEW►ADD►EDIT►DELETE►DELETE ALL►PB STATUS

CALL LOG : ►MISSED ►RECEIVED ►DIALLED

DATE & TIME : ►TIME FORMAT ►SET CLOCK

LANGUAGE : ►ENGLISH ►DEUTSCH ►FRANÇAIS

►ITALIANO ►NEDERLANDS...

SETTINGS

►RING SETUP ►DELETE HS ►DIAL MODE ►FLASH TIME

►KEY TONE ►CHANGE PIN ►BS DEFAULT

REGISTRATION

ANS. MACHINE

►MSG PLAYBACK ►DELETE ALL ►MEMO ►TAM ON/OFF
►TAM SETTINGS (ANSWER MODE, OGM SETTINGS, ANSWER DELAY, RECORD TIME, TAM LANGUAGE, BS SCREENING, REMOTE ACC, COMPRESSION, CHANGE PIN, TAM DEFAULT)

Handset

PHONEBOOK

►VIEW LIST
under an entry: ►ADD ►VIEW ►EDIT ►DELETE
►DELETE ALL ►PB STATUS ►FASTDIAL

CALL LIST

►VIEW LIST
under an entry: ►ADD TO PB ►DELETE ►DELETE ALL
►DETAILS ►CATEGORY

BS SETTINGS

►BS RINGER ►RING VOLUME ►DELETEHS
►DIAL MODE ►FLASH TIME ►CHANGE PIN

HS SETTINGS

►RING SETUP ►TONE SETUP ►SELECT BASE
►LANGUAGE ►RENAME HS ►HS DISPLAY ►AUTO ANSWER

DIRECT MEM : ►M1-M2-M3-M4

DATE & TIME

►DATE FORMAT ►TIME FORMAT ►SET TIME ►SET DATE

ALARM : ►ON ►OFF

REGISTRATION : ►BASE 1, 2, 3 or 4

DEFAULT : ►PIN? ----

ANS. MACHINE

►MSG PLAYBACK ►DELETE ALL ►MEMO ►TAM ON/OFF
►TAM SETTINGS (ANSWER MODE, TAM LANGUAGE, OGM SETTINGS, ANSWER DELAY, RECORD TIME, COMPRESSION, BS SCREENING, REMOTE ACC, CHANGE PIN)

REGISTRATION & DE-REGISTRATION

Note: Handset and telephone base are pre-registered.

A further 3 handsets can be registered to the base station (4 in total including the handset supplied).

In the case of re-registration, the PIN code is **0000**.

Registration a handset

On Handset: Press **Menu/OK** select **▼▲**REGISTRATION, Press **Menu/OK** select **▼▲**BASE(1-4), Press **Menu/OK** enter PIN.

At the same time on **Base**: Press **Menu/OK**, select **▼▲**REGISTRATION, press **Menu/OK** to see PLEASE WAIT (If the registration is successful, there will be a confirmation beep).

De-Registration

On **Base**: Press **Menu/OK**, select **▼▲**SETTINGS, press **Menu/OK**, select **▼▲**DELETE HS, press **Menu/OK** enter PIN, press **Menu/OK**, select **▼▲**one of the handsets that you want to de-register, press **Menu/OK** to confirm.

INTERCOM

Internal Call

Base: Press **INT/☒/CLEAR** (*Int/☒/C*), select **▼▲**HS 1 - 5, press **Menu/OK** to connect.

Handset: Press **C/MUTE** (☒), Enter the desired handset number on keypad.

Base is "7"

Call All Handsets

Base: Press **INT/☒/CLEAR** (*Int/☒/C*), select **▼▲**ALL HANDSETS, press **Menu/OK** to connect.

Handset: Press **C/MUTE** (☒), Enter "9" on keypad.

Transfer an External Call

Base: Press **Menu/OK**, select **▼▲**handset number, press **☒** or **☒** on handset after connection end the call on the base.

Handset: Press **Menu/OK**, select **▼▲**INTERCOM, Press **Menu/OK**,

Enter the desired handset number on the keypad. After connection, end the call on the handset.

Conference Call

Handset: Press **Menu/OK**, select **▼▲**INTERCOM, Press **Menu/OK**,

Enter the desired handset number on keypad.

After connection press and hold **☒** until CONFERENCE is shown.

ANSWERING FUNCTION

The AMPLIDECT COMBI 295 includes a telephone answering machine (TAM) to record messages (when it is on) on unanswered calls. It can store up to 59 messages (total recording time available is 15 minutes). As well as recording incoming messages, you can record memos for other users of your phone.

Press **☒** **ANS ON/OFF** to switch the answering machine ON or OFF

REMOTE OPERATIONS

You can access the TAM remotely from another tone-dialling phone to switch the TAM on and off and to access messages.

1. Place a call from a tone-dialing phone.
2. When the answering machine answers the call and starts playing OGM, press **☒**.
3. Enter the 4-digit Remote Access PIN (factory default PIN is **0000**). Refer to the main user guide on how to set up your own remote access PIN.
4. Press the following keys to carry out your desired function.

A	Functions
While message is not playing	While message is playing
2	Delete the current message playback
4	Repeat playing the current message from the beginning. Press twice to skip backward to the previous message.
5	Play the message
6	Skip forward to play the next message
7	Turn on the answering machine
8	Stop the current message playback
9	Turn off the answering machine
*	Enter the 4-digit remote access PIN

NOTE:

When the TAM memory is full (and answer mode is in ANS & RECORD), the answer mode will automatically change to ANSWER ONLY mode.

The TAM will automatically revert to ANS & RECORD mode, once some messages are deleted.

It is not possible to delete new (unplayed) messages.

MAINTENANCE

Clean the surface of the housing with a soft, fluff-free cloth. Do not use any cleaning agents or solvents.

GUARANTEE

From the moment your Geemarc AMPLIDECT COMBI 295 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT : YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only.

DECLARATIONS:

UKCA Directives

Geemarc Telecom SA hereby declares that this AMPLIDECT COMBI 295 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

The UKCA declaration of conformity may be consulted at www.geemarc.com

RF power | < 250mW

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as hazardous voltage according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To switch off the apparatus, disconnect the power adaptor.

When installing the apparatus, ensure that the mains power socket is readily accessible.

Telephone connection:

Voltages present on the telecommunication network are classified TNV-3 (Telecommunication Network Voltage) according to the EN62368-1 standard.

 
Recycling Directives

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin. Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip.
- Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at www.geemarc.com

E-mail : help@geemarc.com telephone 01707 387602
lines are open from 10:00-12:00 then 13:00-14:30 Mon. to Fri.

Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe, France.

Made for Geemarc Telecom S.A. in China

QUGAMPLIDECTCOMBI295_En_A3_V1.9