

**geemarc™** CL8700  
Hear the Difference

**Mobile Phone with SOS  
emergency key**



**English**

# CONTENTS

!!! Please refer to our website: [www.geemarc.com](http://www.geemarc.com) for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

<b>CONTENTS</b> .....	<b>1</b>
<b>INTRODUCTION</b> .....	<b>4</b>
Unpacking the Telephone.....	5
<b>DESCRIPTION</b> .....	<b>6</b>
General Description .....	6
LCD Screen Description .....	11
Menu Navigation .....	13
Menu Map.....	13
Network Services & Password .....	15
<b>SETTING UP, Install SIM Card,</b>	
<b>Battery and micro SD card</b> .....	<b>16</b>
Charging the Battery .....	17
Switching On/Off & Battery Use .....	18
<b>USING THE TELEPHONE, Standby Mode, Making a</b>	
<b>Call</b> .....	<b>19</b>
Making a Call from the Call Record & Phone Book....	20
Making a Call using Quick Dial .....	20
Making a Call using Dialed Numbers List.....	20
Receiving a Call, Rejecting a Call, Switch Off Alerts ..	21
Options During a Call.....	21
Receiving Volume .....	22
Ringer Volume .....	22
Call Timer.....	22

# CONTENTS

<b>SMS</b> .....	<b>23</b>
Send a Text Message .....	23
Receiving a Text Message .....	23
Reviewing Stored Text Messages (Inbox) .....	23
Sent Messages .....	24
Draftbox .....	24
Delete SMS.....	24
Text Message Settings.....	25
Broadcast Messages .....	26
<b>VOICEMAIL</b> .....	<b>27</b>
Voicemail Number Setting.....	27
Listen to Voicemail .....	27
<b>PHONEBOOK</b> .....	<b>28</b>
Create a Phone Book Entry .....	28
Create a Phone Book Entry from Standby .....	29
View Phone Book Entries.....	29
Options within Phone Book contact .....	30
Options within Phone Book.....	30
Create a Picture Phone Book Entry .....	30
Dial a Picture Phone Book Entry.....	31
Storing or Dialing a Speed Dial Number.....	31
<b>CALL RECORD</b> .....	<b>32</b>
Display Missed Calls.....	32
Display Dialed Calls .....	32
Display Received Calls .....	33
Delete Call Logs.....	33
Call Settings.....	34

# CONTENTS

<b>HANDSET SETTINGS</b> .....	<b>36</b>
Phone Settings, Led setting, M1/M2 numbers .....	<b>36</b>
<b>I.C.E</b> .....	<b>36</b>
Torch, Flight mode .....	<b>37</b>
Profiles, Call Settings.....	<b>37</b>
Speed dial .....	<b>37</b>
Display .....	<b>38</b>
Security Settings .....	<b>38</b>
Connections.....	<b>39</b>
<b>SOS</b> .....	<b>40</b>
SOS Function, SOS mode setting.....	<b>40</b>
SOS Number Settings.....	<b>40</b>
SOS Text Message .....	<b>41</b>
SOS Message Record .....	<b>41</b>
SOS actively obtains the local location .....	<b>41</b>
<b>ADVANCED SETTINGS</b> .....	<b>43</b>
Tools .....	<b>43</b>
Multimedia .....	<b>44</b>
File Manager.....	<b>44</b>
<b>TROUBLESHOOTING</b> .....	<b>45</b>
<b>SAFETY INFORMATION</b> .....	<b>48</b>
<b>HEARING AID INFORMATION</b> .....	<b>51</b>
<b>NETWORK SERVICES</b> .....	<b>52</b>
<b>GUARANTEE</b> .....	<b>53</b>
<b>RECYCLING DIRECTIVES</b> .....	<b>54</b>

# INTRODUCTION

Congratulations on purchasing your Geemarc CL8700 telephone 4G. This telephone is hearing aid compatible. It offers many functions such as an alarm, calendar, camera, video, SMS text messaging, a phone book and picture phone book, human voice options with talking keypad, a speakerphone and speed dial buttons. It has an emergency function in which five numbers can be programmed as emergency contacts. In case of emergency these contacts will be called and SMS messages sent with the press of just one button.

The font size on the colour LCD display is large and the buttons on the keypad are easy to see and use. This mobile telephone has a loud ringer and strong vibrating setting. There is adjustable receiving volume control reaching up to 40dB with boost key. All these features add up to make this a highly suitable telephone for the elderly, hard of hearing or sight people and anyone who simply wants to keep in touch with a great degree of ease.

Its is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:

**CL8700**

# INTRODUCTION

## Unpacking the Telephone

When unpacking the telephone, you should find the following in the box:

- 1 CL8700 mobile telephone handset 4G
- 1 Desktop charging unit
- 1 cable USB/ type C
- 1 Mains power adaptor
- 1 x Li-Polymer rechargeable battery
- 1 User Guide



For product support and help visit our website at  
**[www.geemarc.com](http://www.geemarc.com)**

E-mail : **[help@geemarc.com](mailto:help@geemarc.com)**

Telephone : **01707 387602**  
lines are open from

**10:00-12:00** then **13:00-14:30** Mon to Fri

 
Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe,  
France.

# DESCRIPTION

## General Description


---

### Handset Description (front)

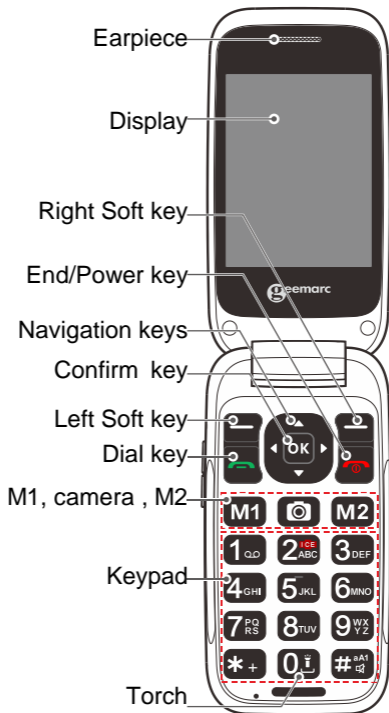

# DESCRIPTION


 
## Handset Description (Rear)

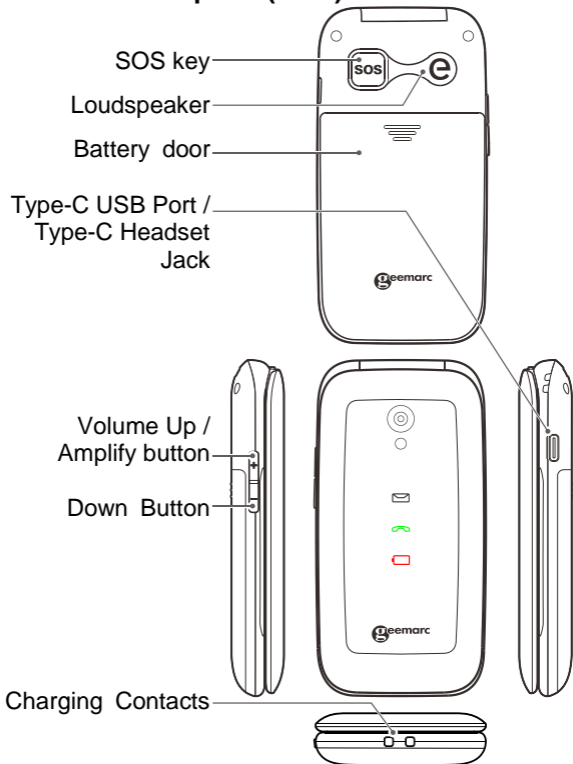




# DESCRIPTION

  Charging Contacts

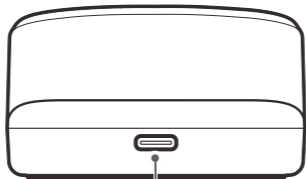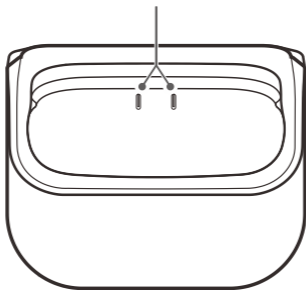






Type-C USB port




# DESCRIPTION

  	<p><b>One touch dialing keys</b></p> <p>A telephone number can be assigned to each of these buttons. To dial the number all you have to do is press the button once and the number will be dialed automatically</p> <p>This is a dedicated key in Standby. It provides access to the Camera function in stand by mode.</p>
	<p><b>Power key/On-hook key</b></p> <p>Long press to power the telephone on and off. End a call. Cancel current process and return to standby.</p>
	<p><b>Navigation Button</b></p> <p><b>Up Key</b> Scroll up through lists and menu options. This is a dedicated key in Standby. It can be set up in Handset Settings or Recorder function in stand by mode.</p> <p><b>Down Key</b> Scroll down through lists and menu options. This is a dedicated key in Standby. It can be set up in Handset Settings or Dual SIM function in stand by mode.</p> <p><b>Right Key</b> This is a dedicated key in Standby. It can be set up in Handset Settings or Profile function in stand by mode.</p> <p><b>Left Key</b> This is a dedicated key in Standby. It can be set up in Handset Settings or Write SMS function in stand by mode.</p>
	<p><b>Call Key</b></p> <p>Make a call after dialling the number. Receive a call. Access at the outgoing call list</p>

# DESCRIPTION

	<p><b>Left/Right key</b> These are softkeys i.e. they take on different functions depending on the menu displayed. The current function is always displayed by the text above the key.</p>
	<p><b>Asterisk key</b> Press this key to insert one or more symbols while composing a message or editing a phonebook entry name. Then use the navigation keys to move to the symbols you want to insert.</p>
	<p><b>Hash Key</b> Press to switch between different input modes while composing a text message or editing a contact name. In standby mode, if you press and hold this key, you set your phone in Silence mode, if you press and hold again, you are in shaker mode, if you press and hold again, you come back in normal mode.</p>
	<p><b>0 / Torch Key</b> In standby, press and hold for a few seconds and the torch will shine steadily. Press and hold once more to turn it off.</p>
	<p><b>Volume Up and Down Key</b> Use this key to increase ringer volume when you access <b>Profiles</b> menu or when receiving an incoming call. Increase the earpiece / speakerphone volume during a call. There are 9 volume levels available. Start the <b>amplifier</b> function after level 6.</p> <p><b>Volume Down Key</b> Use key to decrease the ringer volume when you access <b>Profiles</b> menu or when receiving an incoming call. Decrease the earpiece / speakerphone volume during a call.</p>

# DESCRIPTION

<b>Front Cover</b> 	When there are unread text messages, the white light is on.
<b>Front Cover</b> 	When there is a missed call, the green light is on.
<b>Front Cover</b> 	When the voltage is low, the red light flashes at an interval of 2.5 seconds, when charging, the red light flashes at an interval of 1 second, and when it is fully charged, it displays blue.

## LCD Screen Description

---

The LCD screen is split into three distinct areas:










**The icon area.** This is found at the top of the screen. This displays the various system icons which help you to use the telephone.

**The main area.** This is found across the centre of the screen. It displays the following:

- number being dialled
- caller ID information
- phonebook
- menu information
- in standby mode current time, date and service provider name


**The soft key area.** This is found at the bottom of the screen.

# DESCRIPTION

	<b>Signal Strength icon</b> This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength. There is one of these icons per SIM.
	<b>Alarm icon</b> The alarm has been set to ring at a specified time.
	<b>Battery Status icon</b> This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.
<b>R</b>	<b>Roaming icon</b> A roaming call is taking place i.e.international call – outgoing or incoming.
	<b>SMS icon</b> A new SMS (text message) has been received.
	<b>Mute icon</b> The microphone is temporarily muted during the conversation.
	<b>Silent icon</b> The telephone is in silent mode. There will be no call alert.
	<b>Headset icon</b> The headset is plugged in
	<b>Missed Call</b>
	<b>Shaker icon</b> The telephone is in shaker mode

# DESCRIPTION

## Menu Navigation

The **MENU** soft key or central square key is used to activate the menu. The **BACK** soft key is used to go back a level in the menu system. Press  to deactivate the menu and return to standby mode from any menu.

The ▼ and ▲ keys are used to scroll through the menu.

- ▲ move backward through the menu
- ▼ move forward through the menu

Sometimes < and > are used to navigate through sub menus.

The **OK** soft key is used to confirm/ select an action or choice on a screen.

The central square key is used to go to Menu or to confirm / select an action or choice on a screen.

## Menu Map

<b>Contacts</b>	Photo contacts Normal Phonebook
<b>Message</b>	Write Message Inbox Outbox Drafts Sentbox Broadcast Message Voice mail server
<b>Call logs</b>	Missed calls Dialed calls Received calls Rejected calls Delete all

# DESCRIPTION

	Call timers Data service counter
<b>SOS</b>	Mode SOS number Set call center SOS SMS Set outgoing voice
<b>Settings</b>	Phone Settings LED Setting M1/M2 memories I.C.E Torch Flight mode Profiles Call settings Speed dial Display Security Connections
<b>Tools</b>	Bluetooth Clock Calendar Calculator Services
<b>Internet</b>	Dorado Opera Mini Set as default
<b>Multimedia</b>	Image Camera Make a video

# DESCRIPTION

	Video FM radio Audio Recorder
<b>My files</b>	Phone Memory card

## Network Services

---

To use this mobile telephone you must subscribe to a service from a service provider. Different service providers offer different features (at a variety of charges). This may effect the features made available to you through this mobile telephone.

## Passwords

---

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code help to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.



 
# SETTING UP

## Install SIM Card and Battery

Always switch the telephone off and disconnect the charger before removing the battery.


Take care when handling the SIM card. The SIM card and its contacts can be easily damaged by scratches or bending.

To remove the battery compartment cover, slide the cover in the direction shown and pull it off.



Remove the battery (if battery already inside).

 Slide a SIM with the gold contacts face down under the silver SIM holder as shown below.

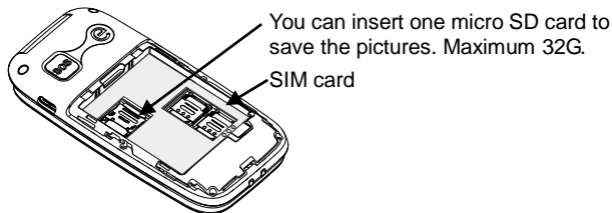

You can insert 2 SIM cards into this telephone. There are many reasons to do this, however, one important reason is that if you use two SIMS from different providers you will probably get better network coverage. However, just using one will be fine too!


Observe the battery contacts (the gold coloured contacts must face towards the bottom right) and insert the battery.


Place the battery cover into position and slide up the cover.

# SETTING UP
 
## Charging the Battery

### Charging via the Type-C Port

Plug the charger into a wall socket. Connect the lead from the charger into the Type-C port on the side of the telephone. During charging, the battery icon  starts to fill.

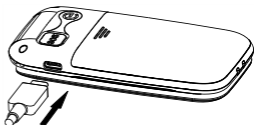


### Charging via the Charging Unit

Plug the charger into a wall socket.

Connect the lead from the charger into the Type-C port on the charging unit.

Place the mobile telephone onto the charging unit.

 **Note:** Only use batteries and chargers supplied with the telephone. The guarantee will be invalid if an unapproved cable is used. Keep the battery contacts clean and free of dirt. Try and avoid removing the battery as this could short circuit the battery.




If the battery is completely discharged, it may take a few seconds before the charging indicator appears on the display or before any calls can be made.

**Before the handset is first used, the battery must be charged for a minimum of 3 hours.**


# SETTING UP

## Switching On/Off

---

Press  for 3 seconds or longer to switch the telephone on.


If no SIM card has been inserted, **No SIM card** will be displayed. Only emergency calls can be made until the SIM has been inserted.

Press  again for 3 seconds to switch the telephone off.

At the first starting, your phone will to enter the date and the hour.

## Battery Use

---

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery power. The more bars displayed, the more power available.




When the battery charge is low, a warning message will be displayed. The back lighting and certain other functions may stop working. When the battery is too weak for the telephone to operate, the handset will automatically switch off.

Battery talk and standby times are subject to change. Replace the battery when the battery power has deteriorated noticeably (requires charging more frequently).

# USING THE TELEPHONE

## Standby Mode


When the telephone is ready for use and you have not entered any characters, the telephone is in standby mode. You can set the telephone to standby mode by pressing .

## Making a Call

Flip open the cover and dial the number on the keypad.

Press **Delete** soft key to delete an incorrect digit

Press , the number is automatically dialed



To end the call simply press .

To place an international call you need to press **+** before the country code. Simply, press **\*** key twice. Some foreign telephone networks have extension lines that cannot be dialed as dial-through, but need to be entered by the keypad. To dial these directly, press **\*** quickly three times in a row after the telephone number. The **p** character will appear and then you can enter the extension.

# USING THE TELEPHONE



## Making a Call from the Call Record

You can find numbers dialed, received or missed in the call record.

1. Menu → Call logs → Dialed calls → Select the telephone number required
2. On finding the desired number, press , the number is automatically dialed
3. To end the call simply press  .

## Making a Call from the Phone Book

If you have stored numbers in the phone book, you can dial numbers using the phone book.

1. Menu → Contacts → Photo contacts or Normal Phonebook → Select the telephone number required
2. On finding the desired number, press , the number is automatically dialed
3. To end the call simply press  .


## Making a Call using Quick Dial

If you have stored numbers in the quick dial locations, press either M1 or M2 (dependant on who you wish to ring). The chosen telephone number will be dialed automatically.

## Making a Call from the Dialed Numbers List

Press  to display the dialed calls list


Use ▼ or ▲ to scroll through the list and find the desired number

Press  again, the number is automatically dialed

# USING THE TELEPHONE


## Receiving a Call

When an incoming call is received the telephone, the caller's telephone number will be displayed. If this caller's number is stored in the Phonebook, the associated name will displayed



Press  to answer or flip the cover opened

To end the call simply press  or flip the cover closed

## Rejecting a Call

To reject an incoming call, simply press  or soft key **REJECT**

## Switch Off Alerts

You can switch off all of the alerts for an incoming call in press and hold  until to have  on the display or only vibrations in press& hold again the key until to have the shaker icon on the display.

Press and hold again this key to come-back in normal mode.

## Options During a Call

You can use a variety of functions during a call by pressing the **OPTION** soft key. You get the option to do the following:

- Connect to BT headset
- Hold
- Recording started
- Mute
- Contacts
- Call logs
- Messages

Call diverting", "multiparty calls", "call hold" and "call waiting" function need network support, so please contact your network provider.

# USING THE TELEPHONE

## Receiving Volume

---

During a conversation, the **V+** and **V-** buttons found on the right side, adjust the ear piece volume level, there are 9 volume levels. start the amplifier function after level 7. will give a boost with the maximum volume attainable being 40dB.

## Hands free Function

You can turn on the speakerphone built into the telephone during a call, simply press the right soft key. In this mode there is no need to hold the handset. You will hear the third party through the speaker and the microphone will pick up your voice.

**Note:** Before putting the handset to your ear, please ensure you have switched the speakerphone off.

## Ringer Volume

---

When the phone rings with an incoming call, you can adjust the ringer volume by pressing **V+** or **V-**. This will override the ringer volume setting in the profile currently being used.

## Call Timer

---

Your handset automatically times the duration of every external call. The time is shown during the call and for a few seconds after the call has ended.

## Send a Text Message

---

A text message using this telephone can contain up to 160 characters. This figure includes spaces.

1. Menu → Message → Write Message or press directly on the left navigator key
2. Enter the first characters of the contact or press **OPTION**, select **Add recipient**, select the contact in the list, press **OK** key then **OPTIONS** and **OK**  
If you just the phone number, press # key and select 123 then **OK**, now you can enter the phone number.  
After to write your text, press again # key and select Abc then press **OK**.
3. Press down arrow and write your text message (See text entry in Phonebook Chapter)
4. Select **Options** → **Send**

## Receiving a Text Message

---

On receiving a text, an alert tone will be audible. **1 NEW MESSAGE** will be displayed on the LCD.

1. Press **READ** soft key followed by Central square key to display the message

## Reviewing Stored Text Messages(Inbox)

---

1. Menu → Message → Inbox
2. Scroll to the message you wish to review
3. Press the central square key to view
4. Press **OPTIONS** soft key to see all the options available that can be performed on this selected text message or **OK** key to reply directly
5. These options include **Delete**, **Write message**, **Forward**, **Call**, **Move**, **Add to contacts and Details**



## Sent Messages

---

The outbox stores successfully sent and saved messages (if the phone is set up to save outbound text messages in Message Settings).

1. Menu → Message → Sentbox
2. Scroll to the message you wish to review
3. Press **OK** key to view
4. Press **OPTIONS** soft key to see all the options available that can be performed on this selected text message
5. These options include **Forward, Delete, Calls, move and Details**

You can press on the key OK to answer directly.

## Draftbox

---

The draft box stores messages that you have saved but not sent yet. You now get the chance to send the message, resume editing or delete.

1. Menu → Message → Drafts
2. Scroll to the message you wish to review
3. Press **OK** key to view
4. Press **OPTIONS** soft key to see all the options available that can be performed on this selected text message
5. These options include **Add recipient, Send, Add and Save as draft.**

## Delete SMS

---

You can delete messages in the Inbox, Outbox, Draftbox or Sent Message.

1. Menu → Message → Select either Inbox, Drafts, Outbox or Sentbox → Options → Delete All → Press OK key

## Text Message Settings

---

Service Centres distribute SMS messages. Your mobile telephone must have the telephone number for the service centre programmed into memory. Generally, this will have already been set up by your service provider.

Menu → Message → Options → Settings

There are many settings options:

### **SIM SMS center**

Set up the location of the SMS center

### **SMS validity period**

You can stipulate how long an attempt at delivering a message should be

### **Status Report**

Every time a text is sent you will get a message to say it has been sent successfully (or not).

### **Reply Path**

If you activate this feature, when you reply to a message, the cost of sending it is charged to the recipient's account instead of your own.

### **Save Sent Messages**

You have 3 chooses, **Prompt user**, **Save** or **don't save**

### **Preferred Storage**

If you select **SIM PREFERRED**, when you receive a new message it will be stored on the SIM card by default. When the SIM card memory is full new messages will stored in the phone.

### **Export SMS**

### **Auto signature**

## Memory Status

A useful option is to request to see how much memory is occupied and how much is free on both the SIM card and the telephone e.g, **SIM1** 17/30, **SIM2** 2/30, **Phone** 5/200.

## Broadcast Messages

---

This telephone supports the broadcast messages i.e. information services from your service provider.

Menu → Messages → Broadcast Messages → OK → Options → Settings → OK

You can choose if you activate the function or no.

You can select options such as choose to receive these messages, the language of broadcast together with channel setting.

# VOICEMAIL

## Voicemail Number Setting

The voicemail function allows you to listen to any voicemail messages people may have left for you.

The voice mailbox is a network service to which you may need to subscribe. Contact your service provider if in doubt.

If your service provider does give you access to voice mail, the telephone number used to access the voice mail system will normally be set up on your telephone. If it is not, when you receive a message for the first time you will be prompted to enter the name and number settings to access your provider's Voicemail system.

## Listen to Voicemail

If you have missed a call, you will receive a message on the phone's display, **1 MISSED CALL**. Press **Details**, you will see a list of all missed calls in the Call Record.

From standby, you can access voicemail by simply pressing and holding **1**. You will be connected to voice mail and can listen to your messages. To use the voicemail system, follow the instructions your voicemail provider gives.

# PHONE BOOK

Telephone numbers and names can be stored in the phone book. This is held both on the SIM and in the phone memory. It allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the telephone number. You can search and recall numbers in order to make a call, send a message or use an entry as an emergency contact. The phone book can contain at least 2000 entries. If you try to add a new entry when all the memory is filled, a warning message will be displayed. You will need to delete an existing entry in order to add the new telephone number. The contacts saved in the SIM card memory are indicated by **1** or **2**. The advantage of saving to SIM means you can transfer the information to another telephone.

## Create a Phone Book Entry

---



1. Menu → Contacts → Normal Phonebook → Options → New and press **OK**
2. Select → SIM or Phone and press **OK**
3. On name, press **OK** and enter the name of your contact Entry using the numeric keypad (see below) and press **OK**
4. Press down arrow and press **OK** to select Mobile
5. Enter a number for the phonebook entry then press **OK**
6. Press **Save** soft key to valid

The numeric keypad also has characters printed on the keys. These characters are used for entering text for the purposes of phonebook entry and modification, SMS text writing and searching for an entry in the phonebook.

Press each key the relevant number of times to get the letter you need e..g. to get the letter J, press the 5 key once, to get the letter S, press the 7 key four times in quick succession.

To move on to the next letter, wait a few seconds and the cursor will appear | after the last letter you entered. You may now enter the next letter. To switch between upper and lower case use the

# PHONE BOOK

 key. You can also switch to numbers using  key. The input mode will be indicated on the right hand side of the name entry field indicated by a pencil.

Press 0 to insert a space.

Press the **CLEAR** soft key to delete the last character typed in while entering a number or a name. Press and hold the **CLEAR** soft key to clear the screen.

## Create a Phone Book Entry from Standby

Enter the number using the numeric keypad (always include the local area code)

1. Options → add to contacts → add to new contact
2. Select either SIM or Phone then press **OK**
3. Press **OK** to select Name and create a name for the Phonebook Entry using the numeric keypad (see above)
4. Press **Save** soft key to valid

If you are saving the contact to the Phone, you get many more options to save extra detail such as:

- Home number
- Unclassified
- Caller Picture
- Default Ringtones

## View Phone Book Entries

1. Menu → Contacts → Normal Phonebook or press **Contact** soft key directly in stand-by mode.
2. Use ▼ and ▲ to scroll through the list until you find the desired contact. Or, you can search for a contact in the phonebook via an alphabetic search. Simply, type the first character of their name and you will be automatically positioned at the correct part of the phonebook

# PHONE BOOK

## Options within Phonebook

---

Within Phonebook contact you can do the following:

1. Menu → Contacts → Normal Phonebook then **OK** or press **Contact** soft key directly in stand-by mode.
2. Use ▼ and ▲ to scroll through the list until you find the desired contact and press OK
3. Press **OPTIONS** soft key
4. Options available to be performed on that contact record are as follows:

**Edit**  
**Delete**  
**Copy**  
**Send vCard**

## Options within Phonebook

---

Within Phonebook Settings you can do the following:

- 1) Create a new contact).
- 2) Write an message
- 3) Call the contact
- 4) Delete or Delete multiple the contacts
- 5) Import / Export the contact
- 6) Send vCard
- 7) Memory Status

## Create a Picture Phone Book Entry


---

You can also create a Phonebook entry with a picture associated with it. This is particularly useful when you receive an incoming call as the photograph will be displayed on the inside screen. Therefore you can see who is calling by simply looking at the photograph of them.

1. Menu → Contacts → Photo contacts → Add → Edit

# PHONE BOOK

Select from album or Take photo

2. Take a photograph of the person that you are adding to the phonebook (press Central Square key). Press OK soft key.
3. Select Name and press OK → Enter a name for the Phonebook and press Save soft key
4. Select number and press OK → enter the Number for the phonebook entry and press Save soft key
5. Select the ring settings for the contact
6. Press  to exit

## Dial a Picture Phone Book Entry

---

Use < and > to move to the desired photo to call.

Press 

## Storing a Speed Dial Number

---

You can assign a speed dial number to a phonebook entry. This means you can dial a number very easily whenever you want simply by pressing the associated number.

1. Menu → Settings → speed dial
2. Select either from 3 to 9
3. Press Ok and add the telephone number required or press Contacts and select your contact then **OK**
4. Press OK to save

## Dialling a Speed Dial Number

---

Press and hold the desired key (from 3 to 9) to dial out the corresponding number.

Information about all calls is stored on this telephone in the Call Record. These calls include:

- Missed calls
- Calls dialled
- Calls received



# CALL RECORD

## Display Missed Calls

---

When you have a missed call, a message **n MISSED CALLS** will appear on the display e.g. **3 MISSED CALLS**. Press **Details** soft key to review the details or press **Exit** to exit. You can also review missed calls via the menu as follows:

1. Menu → Call logs → Missed calls
2. Use ▼ and ▲ to scroll through the list until you find the desired contact
3. Press the soft key **OPTIONS**, the following will be available to perform on that call record entry:

**Details**  
**Call**  
**Write message**  
**Add to contacts**  
**Add to blacklist**  
**Delete**  
**Delete All**

## Display Dialed Calls

---

1. Menu → Call logs → Dialed calls
2. Use ▼ and ▲ to scroll through the list until you find the desired contact
3. Press the soft key **OPTIONS**, the following will be available to perform on that call record entry:

**Details**  
**Call**  
**Write message**  
**Add to contacts**  
**Add to blacklist**  
**Delete**  
**Delete All**

# CALL RECORD

## Display Received Calls

---

1. Menu → Call logs → Received Calls
2. Use ▼ and ▲ to scroll through the list until you find the desired contact
3. Press the soft key **OPTIONS**, the following will be available to perform on that call record entry:

**Details**

**Call**

**Write message**

**Add to contacts**

**Add to blacklist**

**Delete**

**Delete All**

## Delete Call Logs

---

1. Menu → Call logs → Delete All
2. Select either Missed call, Dialed calls, Received Calls or rejected calls to set to zero → Press option and select delete all then **OK**  
or directly Delete all and valid by pressing **OK**

# CALL RECORD

## Call Settings

---

Within Call Settings there is SIM Call Settings and Advance Settings.

You can access SIM Call Settings as follows:

**Menu → Settings → Call Settings**

There are many settings available:

### Dual SIM

Set the setting to use one or 2 SIM.

**Flip to answer :** when the function is activated, just open the flap to answer

**Call Divert:** Incoming calls can be diverted to a specified telephone number (voicemail number generally). There are 5 options available with this function:

- **Divert all voice Calls:** Call divert is applied to all incoming calls
- **If Busy:** Call divert is applied to all incoming calls if your line is busy
- **If No Answer:** Call divert is applied to all incoming calls if you do not answer the call
- **Divert if Unreachable:** Call divert is applied to all incoming calls if your phone is switched off or you are not in a service area
- **Cancel all divers**

**Call waiting:** This can be activated or deactivated. Please check that this service is available from your service provider. You can **INTERROGATE** to find out if your service provider offers this service.

**Call Barred:** Incoming and outgoing calls to and from your phone can be limited. There are 4 options available with this function:

# CALL RECORD

- **All outgoing Calls :** No outgoing calls can be made
- **All Incoming Calls:** No incoming calls can be received
- **ISD calling**
- **Cancel all barring**

**Hide ID:** - You can choose whether this is set by network, hidden or shown

## Others

**Call Time Reminder:** - customise if you want a reminder of how long you have been on the phone

**Auto Redial:** If this setting is activated, when you make a call but cannot get through as the other line is engaged, your telephone will automatically redial this number after a certain amount of time (decided by you). This will take place provided you have not cancelled the call.

## Vibration when connected

# HANDSET SETTINGS

## Phone Settings

---

Within Phone Settings you can adjust the following functions:

**Time and date:** Set the time and date, Time format (12hr or 24hr), Date format (DDMMYYYY or MMDDYYYY or YYYYMMDD) and update time settings.

**Language:** There are 16 languages available to display the menu i.e. English, French, Spanish, Dutch and German etc.

**Shortcut settings :** You can set the phone so as you only need to press one navigation key to enter the desired menu on the telephone or set the right soft key menu.

### Auto Power On or Off

**Browser selection :** you can set the internet network.

Restore factory setting : You can undo all the changes you have made to the telephone settings and restore to the factory settings. The default password is **1234**.

## LED Setting

---

You can select to activate or no the LED on the cover of your phone and you have the possibility also to set the night mode.

## M1/M2 Number

---

You can dial a number very easily whenever you want simply by pressing either M1 or M2.

Menu → Settings → M1/M2 Number → Select either M1 or M2, enter the phone number and press SAVE soft key to valid.

## I.C.E In Case of Emergency

---

You can add 4 Names and Numbers of people who could be contacted in times of Emergency.

# HANDSET SETTINGS

Menu → Settings → ICE → Contacts

You can input all the phone owner's information e.g.name, address, disease, allergy, blood group, doctor

Menu → Settings → ICE → Owner Info

## TORCH

---

You can activate the torch or not.

## Flight mode

---

Select Activate to activate the flight mode. Select Off to stop the flight mode.

## Profiles

---

There are 5 types of profile available: Normal

You can make changes to the detail of the profile selected. A profile is made up of the following settings:

**Ring settings:** SIM call ring- SIM message ring.

**Adjust volume:** Message ringtone- Alarm & calendar ringtone - power ringtone

**Ring type:** SIM call alert- SIM message alert- Alarm & calendar remind

**Other alert rings:** Battery low alert - Power ringtone - Phone number - Dial tone - Flip tone - Flip on tone.

## Call setting

---

See item call settings page 34.

## Speed dial

---

See p31 item storing a speed dial key.

# HANDSET SETTINGS

## Display

---

You can modify your display in this menu with the different functions:

**Animation effect:** you can select the animation when your phone power on or power off

**Wallpaper settings:** you can select your wallpaper or choose an picture

**Contrast:** With the key <- and -> you can adjust your contrast

**Backlight:** you can set the time of the display backlight from 5sec to always on.

**Keypad backlight time:**you can select the time of the keypad backlight on (from 5sec to 20sec, night mode, off)

## Security Settings

---

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

### Pin:

The PIN code is supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use.

When you select Pin, the phone will ask you your pin code at every start

**Modify pin2:** it is to change your PIN code.

The PIN2 code is required to access certain services.

**Phone locked :** At the start, you have the possibility to add one phone password if the function is activate. By default the phone password is **1234**.

**Modify the cellphone password :**

By default the pin code is 1234, you can personalisate the pin code with this function.

# HANDSET SETTINGS

**Privacy :**

You have the possibility to locked the functions that you want in the list of choose

**Fixed dialing number :** You have access at your voicemail number and at the dialing mode

**Own number:** you have the possibility to enter your phone number for the SIM 1 or 2

**Blacklist:**you have the possibility to activate or deactivate the function in blacklist setting.

-In Blacklist, enter the indesirable phone numbers

## **Connections**

---

Enter the Data account information.



# SOS

## SOS Function

---

In an emergency, you can press the **SOS** button for help during 3 seconds.

If you have preset an SOS text message and set the **SMS RECEIVER** (generally another mobile phone), once you press the **SOS** button, the phone will send the SOS text message to the receiver.

Up to 5 numbers can be preset on the **SOS number**. The phone will dial numbers on this SOS list automatically one by one. If a busy tone is detected or a call is aborted by user, the next number will be dialled immediately. The phone will dial these numbers 3 times maximum if no answer or no validation by pressing one key.

If you want to quit the SOS mode press **SOS** button again 3 seconds.

**Note:** When SOS is switched ON, you cannot turn the telephone OFF. You must switch the SOS mode OFF before turning the phone off.

## Mode Setting

---

choose whether your SOS message will go out to phone numbers you select (see Set SOS Number below). You can configure up to 5 phone numbers. You can alternatively set a call centre number which will be contacted, or you can turn this function OFF.

## SOS Number Settings

---

You can set up to 5 SOS numbers or set a number for a call center.

1. Menu → SOS → SOS number **or** Set Call center (depending on whom you would like to call at a time of emergency).
2. Menu → SOS → SOS Number → select your Option → Either add from Phonebook or Enter Number

# SOS

## SOS Text Message

---

You can enter the SOS text message. This will be sent to mobile phones on your list.

Menu → SOS → SOS SMS → Content → Type an informative text message (you have the possibility to modify this message)  
→ OK

## SOS Message Record

---

Record an informative message that will assist your helpers in time of emergency e.g. "This is Jane Smith calling, I have hurt myself. Please come to my house and help me."

Menu → SOS → Set outgoing voice MSG → Custom → Record.  
Recite your message clearly → Press Stop on completion (the message can be up to 20 seconds long)

 
## SOS actively obtains the local location

---

- 1.SOS number contact edits content: **location** or **119** Sent to this phone.
- 2.When the phone receives the location request information of the emergency contact, it automatically replies to the SOS plus location information.

# SOS

Lennon Studios, 109 Cambridge court L7 7AG, Liverpool, UK.

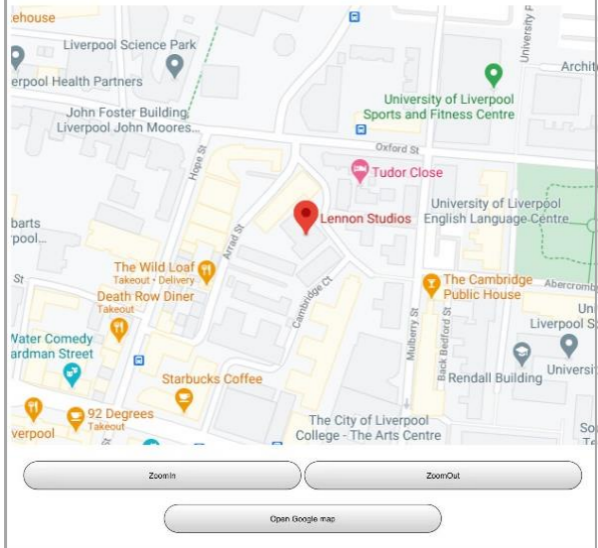

# ADVANCED FUNCTIONS

## Tools

---

There are many useful functions within organizer.

### Bluetooth

CL8700 supports bluetooth. Other bluetooth devices can be searched for and likewise the CL8700 can be found. Bluetooth password is 0000. You can connect with a bluetooth headset or perhaps with another phone. This would enable file transfer via bluetooth.e.g. Photo transfer, MP3 and MP4.

You can also stop the bluetooth function so that other devices will not find it.

### Clock

#### Alarm

An alarm can also be set to sound at specific times if required. The alarm can be set to go off only once or repeatedly on a weekly schedule. Five different alarm times can be set up. Press any key to stop the alarm sound. The alarm will keep ringing every 5 minutes until you actually turn the alarm setting to Off or if you press on the softkey **OFF**.

The alarm still works when the telephone is switched off.

Ensure the phone ringing tones are not set to silent, otherwise you will not hear the alarm!

#### World Clock

Look at a map of the world, find the city required and see what the time is.

#### Calendar

You can review the calendar, move to a certain date quickly and add events (with an alarm) if required.

# ADVANCED FUNCTIONS

## Calculator –

Press **Up** (▲), **Down** (▼), right (▶) or left (◀) to move cyclically through the mathematical functions: + - x /(÷)

Press **OK** key to get the result.

## SIM services

This function allows you to save all contacts on your network operator

## Multimedia

---

There is superb multimedia options available on the CL8700.

There is a Image, Camera, Make a video, Video, Audio Player, Sound Recorder and FM Radio.

## File Manager

---

All the files used in the many applications on the phone can be found within My files. There is a folder for each of the following:

Alarm/ Audio/ Ebook/ Filearray/ Others / Photos  
Videos/ Vcard

You can do standard file manipulation for each of the files within the folder e.g. New folder, Delete, Details, Edit, Search, Sort, Mark and Memory status.

You can connect your handset to your computer to access this information by selecting **UDisk** from the handset screen and confirming with the **OK** software key.

# TROUBLESHOOTING

## **Telephone cannot be switched on**

- Check battery is inserted and check that it is inserted correctly

## **Nothing appears on the display**

- Check the handset is switched on
- Check the battery and SIM are inserted correctly

## **Display is locked when the telephone is switched on**

- Enter the PUK to unlock the SIM

## **No signal icon is displayed**

- There is no network connection. Move around to try and get to an area where there may be coverage
- Contact your service provider

## **Message to say that a function is not possible**

- Your service provider might not provide the function in question or you may need to subscribe to that service. Contact the service provider.

## **No display during the charging process**

- The battery charge is very low. Wait a few minutes.

## **“Insert Sim” or “Limited Service” message is displayed**

- Ensure the SIM is inserted correctly

## **The battery is discharged quickly or cannot be charged at all.**

- Charge the battery for 4 hours

# TROUBLESHOOTING

- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Try a new battery

## Unable to Charge the phone

- Check the adaptor connections
- If temperature is below  $-10^{\circ}\text{C}$  or higher than  $55^{\circ}\text{C}$  move to a place without such extremes of temperature
- Try a new battery

## Failure to link to the network

- The signal is too weak, or there may be some radio interference
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

## Cannot make a Call

- Check that mobile fees have been paid
- Check that the SIM card is valid
- Check if fixed dialling is set
- Ensure you have pressed the green dial button
- Is the SIM card registered to the network
- Is the bar outgoing calls feature enabled
- There may be a problem with the network, call your service provider
- Check the service provider number, local area number or NMC number (see Handset Settings)

# TROUBLESHOOTING

## **Cannot answer a call:**

- Check that mobile fees have been paid
- Check that the SIM card is valid
- Check if fixed dialling is set
- Is the bar incoming calls feature enabled
- Is the call diverting function enabled

## **The keys appear to be locked**

- Power the phone off and then on

## **Caller Number is not displayed**

- Ensure you have subscribed to the Caller ID service. Contact your service provider
- The caller may have withheld their details
- Let the phone ring a few times as there may be a delay in receiving the Caller ID information

## **Any problems not referred to above**

- Check through the User Guide
- Power off and then on again. Check to see if the problem persists



# SAFETY INFORMATION

## General

Only use the power supply included with the product.

Only use the approved rechargeable battery supplied.

Do not open the handset (except to replace the handset batteries or SIM) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals.

If you are sure you are not going to use the telephone for over a month, remove the battery

## Cleaning

Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

## Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions.

The telephone is designed for working within a temperature range of -10°C to 55°C.

# SAFETY INFORMATION

## Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

### *SWITCH ON SAFELY*

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

### *ROAD SAFETY COMES FIRST*

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

### *INTERFERENCE*

All wireless devices may be susceptible to interference. This could affect performance.

### *SWITCH OFF IN HOSPITALS*

Follow any restrictions. Switch the device off near medical equipment.

### *SWITCH OFF IN AIRCRAFT*

Follow any restrictions. Wireless devices can cause interference in aircraft.

### *SWITCH OFF WHEN REFUELLING*

Do not use the device at a refuelling point. Do not use near fuel or chemicals.

### *SWITCH OFF NEAR BLASTING*

Follow any restrictions. Do not use the device where blasting is in progress.

# SAFETY INFORMATION

## *USE SENSIBLY*

Use only in the normal position as explained in the product documentation.

## *BACK-UP COPIES*

Remember to make back-up copies or keep a written record of all-important information.

## *CHARGING*

Do not use the telephone during charging.

# HEARING AID INFORMATION

Some phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

# NETWORK SERVICES

To use the phone, you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

# GUARANTEE

From the moment your Geemarc product CL8700 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at **[www.geemarc.com](http://www.geemarc.com)**. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

**IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF AWARRANTY CLAIM.**

**The guarantee applies to the United Kingdom only**

**DECLARATION:** Geemarc Telecom SA hereby declares that this CL8700 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE and 2012/65/UE.

*The UKCA declaration of conformity may be consulted at **[www.geemarc.com](http://www.geemarc.com)***

**Electrical connection :** The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

# RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

SAR Test:

Head : 1.055 W/kg

Body : 1.284 W/kg

LIMBS : 1.358 W/kg



For product support and help visit our website at

**[www.geemarc.com](http://www.geemarc.com)**

Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe,  
France

E-mail : **[help@geemarc.com](mailto:help@geemarc.com)**

Telephone : **01707 387602**

lines are open from **10:00-12:00** then **13:00-14:30** Mon to Fri

Made for Geemarc Telecom S.A. in China





UGCL8700\_En\_v1.4



Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe, France

E-mail: [help@geemarc.com](mailto:help@geemarc.com)

Telephone: 01707 387602 (lines are open  
from 10:00-12:00 then 13:00-14:30 Mon. to Fri.)

[www.geemarc.com](http://www.geemarc.com)