

4G Phone with SOS Emergency Call

English



NOTE:

This phone can be used by people with mild to moderate hearing loss. The headset volume can be adjusted, to make it louder (up to 40dB). On first use, set the handset volume to minimum, then gradually increase it to a level that is comfortable.

Contents

Please refer to our website: www.geemarc.com for an up-to-date user guide, as there may be important updates and changes you need to be aware of!

Contents	1
Before Use	5
- Congratulations	5
- Safety Precautions	6
- Setting Up	7
• Check the contents of the box	7
• Choosing a location	7
• Battery and Adapter installation	7
- Connecting the Telephone	8
- Wall mounting	9
- Location of controls	10
- Keys description	11
- Display (LCD)	12
Settings	14
- Phone settings	14
• Time and Date	14
• Language settings	14
• Restore factory setting	15
- Call settings	15
• Voicemail (mobile network service provider)	15
• Divert Call	15
• Call waiting	15
• Call barred	16
• Reply SMS after reject	16
• Call time reminder	16
- Display	16
• Contrast	16
• Backlight Auto Off time Setting	16

- Security	17
• Pin	17
• Blacklist	17
- Network Connection	17
• Network selection	17
• Network type	17
• Volte	17
• Access point name (APN)	17
- Version	18
- Led indicator	18
- Low battery warning to SMS	18
- Boost setting	18
• Tone Control	18
• Boost lock	19
- Auto Answer mode	19
- Update software	19
- Short key, Silence mode	19
Profiles	20
- Ring settings	20
- Adjust ringtone volume	21
- Other alert rings	21
Using the telephone	22
- Outgoing call	22
- Incoming call & answering a call	23
- Dial from Contacts	23
- Speed dial	23
- Photo key dialing	24
- Dialing a Number from the Redial List	24
- Dialing a Number from the Missed Calls List	24
- Dialing a Number from the Received Call List	24
- Muting the Microphone	24

Contents

- Using the handset volume boost	25
- Using your Phone with hearing aids	25
- Hands-free (Speakerphone)	25
- Tone Response	25
Phonebook	26
- Contacts.....	26
- Create a Phone Book Entry.....	26
- View Contacts Entries.....	27
- Options within Contacts	27
- Store number in Speed dial or Photo key.....	28
SMS	29
- Message (SMS).....	29
- Send a Text Message.....	29
- Receiving a Text Message	30
- Reviewing Stored Text Messages (Inbox).....	30
- Sentbox.....	30
- Drafts	31
- Delete one or Delete all SMS	31
- Templates	31
- Broadcast Messages	32
- SMS Settings	32
- Messages Capacity	32
Call Record	33
- Missed Calls (Call logs)	33
- Display Missed Calls.....	33
- Display Outgoing Calls	34
- Display Received Calls	34
- Delete All	34
- Call duration.....	34

Application	35
- Application	35
• Alarm.....	35
• Timer.....	36
• Bluetooth®	36
- Record your own ringtone or voice name	37
SOS	38
- SOS Remote Bracelet	38
- Using the SOS Function in an Emergency	38
- SOS call type selection.....	38
- SOS Emergency Contact Number Settings.....	39
- SOS Message Record	39
- SOS Text Message.....	39
- Set Alarm volume	40
- Pairing a new SOS remote	40
- Battery replacement.....	40
- Operating Range	40
Technical specifications	41
Features	42
Troubleshooting	43
Safety Information	45
Hearing Aid Compatibility	47
Network services	48
Guarantee	49
Recycling Directives.....	50

Before Use

Congratulations

Congratulations on purchasing our product.

Please read this manual carefully to learn all about the features available and how your telephone works. This will help you get the best use of your new phone.



Safety Precautions

To prevent any risk of electrical shock and injury, please follow these basic safety precautions before using the phone:

1. Carefully read and observe the instructions in this manual.
2. The phone can be adjusted to loud sound levels through the handset earpiece. It is important to instruct all users of the phone's correct operation. Adjust the volume control to its minimum level (LOW) when not in use, and alert other users that hearing damage can potentially result from misuse.
3. Unplug the phone before cleaning. Then use a damp cloth to wipe it. Do not use liquid or aerosol cleaners.
4. Do not place objects on the line cord as this may damage it.
5. Do not use this phone in wet surroundings or environments where there is a risk of explosion.
6. Refer servicing to qualified service personnel only.
7. Use only the power supply provided.
8. Install the telephone where no one will step or trip on the line cord.
9. Do not overload mains electrical wall outlets sockets or extension cords as this can increase the risk of fire or electrical shock.
10. Never push any objects through the slots in the telephone. They can touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
11. Never spill liquid of any kind on the telephone.

Before Use

Setting Up

CHECK THE CONTENTS OF THE BOX

Box should contain:

- Handset with handset curly cord and phone base.
- 3.7V, 900mAh Li-polymer rechargeable battery.
- User's manual.
- Wrist-worm SOS remote bracelet for emergency call, with battery CR2025.
- Power adapter (5V DC 2.0A, 10W).
- Type A to type C USB cable (length 1.8m).
- Wall mount bracket.

NOTE: To function, the phone requires a Nano sized SIM card. This is not supplied but is available from network providers and retail outlets.

CHOOSE A LOCATION

The unit should be placed in an area where it is easy to see the visual display and visual ringer.

To reduce the risk of knocking the phone or tripping over cables, choose a location that is out of the way of normal daily activities.

BATTERY AND ADAPTER INSTALLATION

To be able to use all the features, e.g., hands-free and amplification, it is essential that the phone is powered by the supplied power supply.

Make sure the telephone is disconnected from the mains electrical outlet socket before fitting or replacing the battery.

Unclip the battery compartment door with a small flathead screw driver in the hole.

Connect the rechargeable battery plug to the battery socket in the open battery compartment. Pay attention to the correct polarity.


Only use the rechargeable battery provided with the phone.

Close the battery compartment cover.

NOTE: Battery low alert: If the battery is low, the phone will emit a loud **BEEP**, and show “**battery low**” in the display. It will also send an SMS to a stored phone number. Plug in the supplied USB Type C power adapter into the phone for charging.

Connecting the telephone

- Connect the handset curly cord (RJ9 plug) to the handset and telephone (1).
- Carefully insert your **Nano size SIM card** to SIM slot at the rear of the base (2).
- Unclip the battery compartment door with a suitable sized flathead screw driver in the hole.
Connect the rechargeable battery plug to the battery socket (3).
- NOTE :** *The battery is required so that the ring continues to function in the event of a mains power supply failure.*
- Snap the battery door back in place.
- Connect the USB cable (type A plug) to the adapter (4).
- Connect the adapter cord (type C plug) to the telephone (5).
- Connect the adapter to your mains electrical wall outlet socket(*) (6).

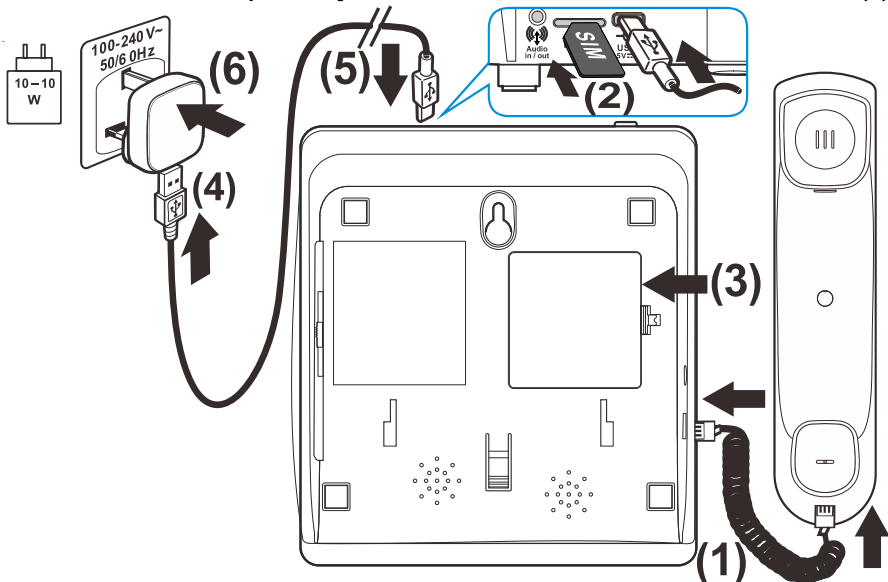


- Press and hold the POWER(MUTE) ON/OFF key , the phone will turn ON.

(*) Classified "hazardous voltage" according to EN62368-1 standard.

IMPORTANT NOTE: *The rechargeable battery provides power back-up in case of mains power failure. The USB type C power adaptor should be plugged in and connected to the phone at all times.*

Wall mounting

The telephone can also be wall-mounted with the supplied wall mount bracket. Two suitable screws and raw plugs (not supplied) are required to fix the wall-mount bracket securely to a wall.

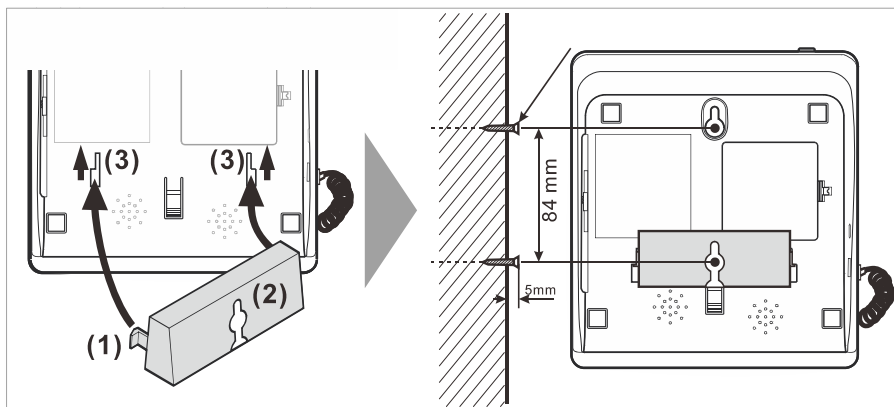


Feed the guide tabs (1) on the wall-mounting bracket (2) in the slots (3) on the rear side of the telephone. Slide the wall bracket (2) 10mm upwards until it audibly snaps into place.


Warning: Ensure that there are no cables or pipes etc. under the surface of the wall where you want to drill the holes.

Drill two holes whose distance **84mm** in vertical, insert the screws and allow them to project **5mm** from the wall.

Position the telephone on the bracket, fit the screws in the slots and slide the telephone downwards a little.

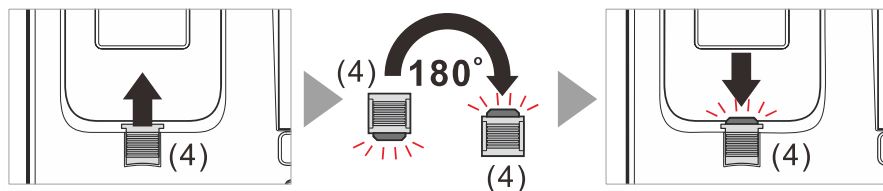



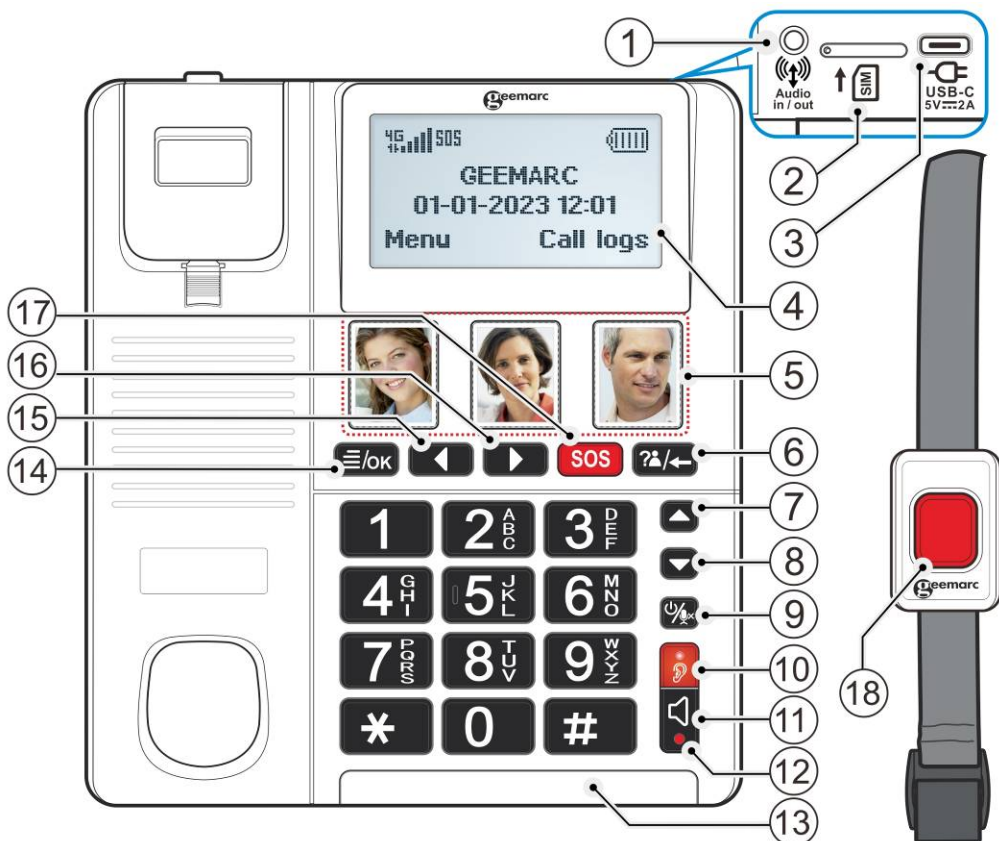








Turn the receiver hook (4) in the receiver cradle **180°** so that the receiver can be hooked in.





1. Audio In/Out (Ø3.5mm) CTIA To connect a <u>voice to text</u>	10. Receiver +40 dB Boost button
2. Nano SIM card slot	11. Handsfree
3. DC IN (type-C)	12. Handsfree mode indicator
4. LCD screen	13. Incoming ring indicator/new call
5. Photo keys (x3)	14. Menu / OK button
6. Call log / Backspace / Delete	15. Left / Contacts
7. Up / Adjust Volume setting	16. Right / Write SMS
8. Down / Adjust Volume setting	17. SOS button
9. Power (mute) on/off	18. Emergency call unit

Keys Description


	<p>The 3 pictures keys are used as one-touch speed dial keys.</p>
	<p>Press this key to enter in the MENU settings. Press this key to access to the EDIT function when you are in Phonebook contact. Press this key to access at the DELETE or DELETE ALL function when you are positioned on CID number. Press OK to confirm your selection. Press OK to start a call when the contact is selected.</p>
	<p>Call logs / Backspace / Delete Call logs list, as described in page 24. When you dial a phone number, press this key to delete the last digit(s).</p>
	<p>Left / Right keys, short cut in standby mode: Left key: to enter CONTACTS list. Right key: To write an SMS.</p>
	<p>SOS key for emergency dialling.</p>
	<p>Highlight or scroll through the MENU options. Short cut: Adjust handset or speakerphone volume setting (during a call)</p>
	<p>POWER ON / OFF key - Long press to power the telephone on and off. Microphone MUTE key – short press.</p>
	<p>Press this key during a call to activate handset BOOST mode (louder volume). The LED turns ON to inform you that BOOST mode is ON.</p>
	<p>Handsfree / Make / Answer / End a call. Press this key to activate the SPEAKERPHONE during a call, as described in page 25: Hands-free. The LED is ON to inform you that the function is activated.</p>

	Hash key Press to switch between different input modes while composing a text message or editing a contact name. In standby status, Press and Hold to enable / disable silent mode.
	Asterisk key Press this key to insert one or more symbol while composing a message or editing a phonebook entry name. (more detail please see P22: Asterisk key).

NOTE: **Menu (OK)**  key and **Call logs (Back space)**  key also work as soft keys i.e., they take on different functions depending on the menu displayed. The current function is always displayed at the lower left and right corner of the display.





 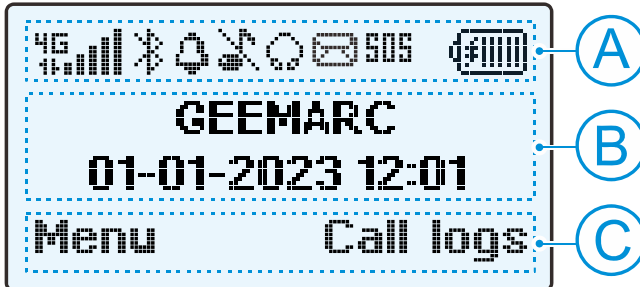













Display (LCD)

The LCD screen has three areas A / B / C :



- A The icon area (status bar).** This is found at the top of the screen. This displays the various system icons which help you to use the telephone.
- B The main area.** This is found across the centre of the screen. It displays the following:
 - number being dialed
 - caller ID information
 - phonebook
 - menu information
 - in standby mode current time, date and service provider name.
- C The soft key area.** This is found at the bottom of the screen.






























Before Use

 Status Bar Icon Identification	
	Signal Strength icon This is always displayed when your telephone is switched on. It shows the current mobile network signal strength. More bars indicate more signal strength. There is one of these icons per SIM. E means the network is 2G.
	VoLTE This indicates the mobile network is 4G (for best call quality). E means that the network is in 2G.
	Alarm icon The alarm has been set to ring at a specified time.
	Battery Status icon This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.
	Roaming icon This indicates an outgoing or incoming international call (roaming).
	SMS icon: A new SMS(text message) has been received.
	Silent icon (press and hold # key to activate / disable) The telephone is in silent mode. There will be no ringer alert to notify an incoming call.
	Headset icon: The headset is plugged in.
	Bluetooth[®] icon: When Bluetooth [®] is ON.
	Ear symbol Indicates the handset volume boost function is ON.
	Missed Call
	During conversation: You are on line.
	SOS is ON
	Use power adaptor only /  Use battery only
	Battery Charging /  Battery full Charged

Phone settings



Time and Date

Time and date is preset and obtained from your mobile network service provider. You can also set it manually, and select the time and date format.

- Press **Menu/OK**  key to display the main menu.
- Press the  key to move to **Settings** →  → **Phone settings** →  → **Time & date**, and press  to select **Set time**.
- Press the  key twice, then enter the correct hour and minutes with the keypad, then press .
- Press the  key to move to **Set date**, Press the  key, then enter the correct day, month and year with the  or  keys and press .
- Press the  key to move to **Time Format**, then press the  key, use  or  keys to select **12** or **24-hour** time format, then press .
- Press the  key to move to **Date Format**, Press  key, use  or  key to select the **Year-Mon-Day** / **Mon-Day-Year** or **Day-Mon-Year** format then press .
- Press the  key to move to **Update time settings**, Press the  key. Use the  or  keys to select **Auto update time** or **Manual update time**, then press .
- Press the  key to confirm.
- Press the  key to exit time and date settings.

NOTE : if you have CID (identification of the number) on your mobile network, on the first call, the date & hour will be set automatically.

Language settings

Menu/OK  → **Settings** →  → **Language settings**

The phone can be set to one of 12 languages: English / French / German / Spanish / Portuguese / Arabic / Dutch / Italian / Hebrew / Russian / Polish / Czech.

Settings

Restore factory setting

Menu/OK  → Settings →  → Restore

It is possible to restore the phone to its factory setting. This requires the password: 1-2-3-4.

Call settings

Menu/OK  → Settings →  → Call Settings

Vicemail (mobile network service provider)

A 'voice mailbox' is an optional service that may be available from your mobile network service provider, to which you may need to subscribe. It allows to listen to voicemail messages that callers may have left for you. Contact your service provider for further details if in doubt.

If your service provider offers a voice mailbox service, the telephone number to access it can be set up from your telephone. If it is not, you may be able to manually input your voicemail number here: From standby, press and hold the '1' dial key to connect to the voicemail service.

Divert Call

Incoming calls can be diverted to a specified telephone number (usually a voicemail number). There are 5 options available with this function:

- **Divert all:** Call divert is applied to all incoming calls.
- **If Busy:** Call divert is applied to all incoming calls if the line is busy (on another call).
- **If No Answer:** Call divert is applied to all incoming calls if you do not answer the call (select time between 5 to 30 seconds).
- **If Unreachable:** Call divert is applied to all incoming calls if your phone is switched off or you are not in a service area.
- **Cancel all diverts.**

Call waiting

This can be set to activated, cancel or check status. Please check whether this service is available from your service provider.

Call barred

There are many settings available:

Call Barring: Incoming and outgoing calls to and from your phone can be limited. There are 4 options available with this function:

- **All outgoing Calls:** No outgoing calls can be made.
- **All incoming Calls:** No incoming calls can be received.
- **Incoming calls when roaming**
ISD (international subscriber dialling) calling : If activated, then all international outgoing calls will be blocked. (Password is **0000**).
- **Dial when INTERNATIONAL roaming :** If activated, then no outgoing calls can be made during roaming, no outgoing (Password is **0000**).
- **Cancel all barring:** Call barring is off.

Reply SMS after reject:

If set to ON, and an incoming call is rejected, the display will show “**1 missed call**” to inform you that you have missed an incoming call. Select **EXIT** then “**Reply**” will be showed. Press **OK** to send a template SMS message to reply.

Call time reminder

If set to **ON**, a regular short ‘beep’ reminds you of how long you have been on the phone call. There are 4 settings: **OFF**, **50**, **55**, **60** seconds, or you can customize the time duration.

Display





Menu/OK  → Settings → Display

Contrast

- Use **Left** () / **Right** () keys to adjust the display contrast, then press **Menu/OK**  to confirm.

Backlight Auto Off time Setting

Backlight auto off time (15s/30s/1min/5min), default is 15 seconds.

- Use **Up** () / **Down** () keys to set the desired time, then press **Menu/OK**  to confirm.
- Press  key to exit.

Settings

Security

Menu/OK  → Settings →  → Security

PIN








This mobile telephone allows you to set up a PIN code to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your **SIM card**. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The **PUK (PIN)** and **PUK2 (PIN2)** codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your mobile network service provider.

Blacklist

This provides the option to reject and blacklist numbers for incoming calls (except SOS numbers).

- **Blacklist** : Select **Blacklist** then **Options**, use  and  keys to select **New** (enter the name and the phone number) or **Import contacts**, then press  to confirm.
- Select your contact in the list, then press  to confirm.
- Select **Mark**, then press  to confirm.
- Select **Options**, then press .
- Press  key to exit.

NOTE: You have the option to delete, delete all, edit an contact or all contacts of the blacklist entries.

Network Connection

Menu/OK  → Settings → OK → Connection

You have the option to set the **DATA Service** and **Data roaming**.

- **Network selection:** you have the option to select your mobile network service provider (network operator).
- **Network type:** you have the option to choose the type of network.
- **VoLTE:** Voice over Long-Term Evolution, set this function for 4G higher call quality.
- **Access point name (APN):** allows you to set up the gateway between a mobile data network and another computer network, often the public Internet.

Version

Menu/OK (≡/ok) → **Settings** → (≡/ok) → **Version**

Hardware and Software version will be showed here. Normally it is for technical service department.

Led indicator

Menu/OK (≡/ok) → **Settings** → (≡/ok) → **Led switch**

This provides the option to switch ON or OFF the LED display visual indication that informs you of a new message or new call.

Low battery warning to SMS

Menu/OK (≡/ok) → **Settings** → (≡/ok) → **Low battery to SMS**

This function provides the option to send two low-battery warning SMS messages to another mobile phone (the SMS message is sent to a phone number stored in this phone - see section **Send a Text Message** on **page 29**). The second message is sent one hour after the first.

A low-battery SMS warning message may occur in the event of a mains power failure, or if the power adapter has become disconnected from the phone. To resolve the issue, check that the power adapter is properly connected to the phone, or wait until the mains power is back on.

Boost setting

Menu/OK (≡/ok) → **Settings** → (≡/ok) → **Boost setting**

The boost setting gives you the option to adjust the tone (audio frequencies) of the handset earpiece. Adjusting the tone may help to make the call sound clearer.

Tone Control:

Menu/OK (≡/ok) → **Settings** → (≡/ok) → **Boost setting** → **ok** → **Tone**

There are 3 tone settings: **Normal**, **Base** and **Treble**.

If you choose **Treble**, the high audio frequencies are boosted (F, S and T sounds may sound clearer), if you choose **Bass**, the low audio frequencies are boosted.

You can change the tone settings during a call using the **Left** (◀) / **Right** (▶) keys. The display shows the tone control setting.

Settings

NOTE : The tone control can only be adjusted when the boost function is ON.

Boost lock

Menu/OK  → Settings →  → Boost setting → ok → Boost

The Boost lock function provides the option to activate the boost and tone settings automatically for every call. This means once you have set the tone to your preference, it is applied to every call automatically.

Auto answer mode

Menu/OK  → Settings →  → Auto on hook → ok → On

Allows the caller, if stored in either the photo memory or a speed dial key, to automatically pick up the line from a distance after several rings in speakerphone mode. You can set the time before the phone automatically answers the call from 3 to 60 seconds after the function is activated.

Update software

Menu/OK  → Settings →  → Update software → ok

Allows you to update the software of your phone.

Other settings

• Short key

A short key gives you direct access to a function:




Up arrow  : **Volume adjustment (Profiles)**

Down arrow  : **Volume adjustment (Profiles)**

Right arrow  : **Write an SMS**

Left arrow  : **Contacts list**

• Silence mode

Press and hold the  key to enable silence mode in standby mode, if silence mode is enabled, the **silence mode** icon  is displayed. Press and hold the  key to disable silence mode.

In the **Menu Profiles**, you can set the different volume levels for alert notifications, ringtones and call volume - for example.

Ring settings

- Incoming ringtone
- Message ringtone
- Talking CID

Adjust volume

- Incoming ringtone
- Message ringtone
- Alarm ringtone
- Speaker volume
- Handset call volume
- Power ringtone
- Talking keypad

Other alert rings




- Battery low alert

Ring settings

You have the option to select a different ringtone for incoming calls, message and Talking CID.




• Incoming ringtone

Menu/OK  → Profiles →  → Ring settings → 
→ Incoming ringtone

Use  and  keys to select your preferred ringtone. There are 10 ringtones to choose from, then press  to confirm.

• Message ringtone

Menu/OK  → Profiles →  → Ring settings → 
→ Message ringtone

Use  and  keys to select your preferred message ringtone. There are 6 to choose from, then press  to confirm.

Profiles



- **Talking keypad**

Menu/OK  → Profiles →  → Ring settings → 
→ Talking CID

When this function is activated, the phone will announce the number of the numeric key you have pressed. For example if you press 3 on the keypad, the phone will announce 'three'.

Also, when you receive a call, the phone will announce the telephone number of the incoming call.

Adjust ringtone volume

Menu/OK  → Profiles →  → Alert Volume



OR use the  short key to access all the different functions below.

You can set the alert level from 0 to 9 :



- **Incoming ringtone:** to set the incoming call ringer volume.
- **Message ringtone:** to set the ringtone volume when you receive a new message.
- **Alarm ringtone:** to set the ringtone volume for the alarm.
- **Speaker volume:** to set the speakerphone volume level.
- **Handset volume:** to set the handset call volume level.
- **Power ringtone:** to set the volume of the animation when you turn the phone on and off.
- **Talking keypad:** to set the volume level of the 'talking keypad'.

NOTE: Use **Left** () / **Right** () keys to set the volume to your preferred level, then press  to confirm.

NOTE: Level 0 sets the volume to OFF.

During a call: Press the  and  keys to change the handset volume, or (in Speakerphone mode) the speaker volume.



Other alert rings.


Menu/OK  → Profiles →  → other alert rings

- **Battery low alert:** when the battery is low, the phone will sound a 'beep' alarm alert during 30 seconds and message every 10 minutes.

Using the telephone

Outgoing call

1. Dial the number using the numeric keypad. The display will show the number as you press each numeric key. If you press an incorrect number, use the  (**Call log / Backspace / Delete**) key to delete it.
 2. Pick up the handset, **OR** for a handsfree speakerphone call, press **SPK** key  (SPK key LED will be ON).
 3. The phone will dial the telephone number you entered in step 1.
- OR**

Pick up the handset **OR** press the **SPK** key , then dial the number you want to call using the numeric keypad.

NOTE:

*When dialing a number, you can put the handset back on to the cradle, or press the **SPK** key  again to end dialing.*

Asterisk key *

While composing a message or editing a contact entry name, press the asterisk key * to insert one or more symbols. Then use the navigation keys to move to the symbols you want to insert.

To edit a telephone number, press the asterisk * key to insert special digits (e.g * / + / **P** (pause) / **W**).

To place an international call you need to press + before the country code. Simply, press * key twice.

Some foreign telephone networks have extension lines that can not be dialled as dial-through, but need to be entered by the keypad. To dial these directly, press * quickly three times in a row after the telephone number. The **p** character will appear and then you can enter the extension.


Hash Key

Press to switch between different input modes (Capital, digit or minuscule) while composing a text message or editing a contact name.

Using the telephone

Incoming call & answering a call

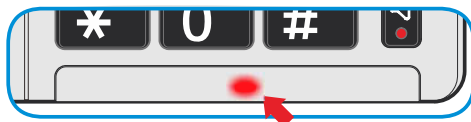


When there is an incoming call, the phone will announce the callers' phone number (if the **Talking CID** is activated). The ringer will sound and the RED visual ring indicator LED will flash.




* Go to **Menu/OK**  → **Profiles** → **Ring Settings** → **Talking CID** to enable **Talking CID** function.

* Go to **Menu/OK**  → **Settings** → **Led switch** to turn the visual ring indicator LED on or off.

To answer a call




1. To answer a call, lift the handset, or to take the call handsfree via the speakerphone, press the **SPK**  key, or press the remote SOS button.
2. To adjust the volume of the call, press the  or  keys.

To end a call

1. To end the call, replace the handset on cradle or press the  again.

Dial from Contacts

Menu/OK  → **Contacts** →  or **left short key**

Use the **Up**  and **Down**  keys to select the desired contact number to call, or enter the first characters of your contact's name. For example, press the key 3 one time for one contact starts by D. Pick up the handset, or for a handsfree speakerphone call, press **SPK** key  (SPK key LED will be ON).

Speed dial

You can assign telephone numbers to keys 2 to 9 on the numeric keypad. This provides a quick and easy way to dial regularly used telephone numbers. E.g., to dial a telephone number that is saved in key 2, press and hold key 2. The phone will then dial the number that is stored in key 2.

To store a speed dial key, go to **page 28 (Store a telephone number in Speed dial)**.

Photo key dialing

You can assign telephone numbers to the Photo dialling keys (**M1-M3**). To make a call, press and hold the Photo key (**NOTE: you do not need to lift the handset from the cradle, or press the speakerphone key**). The phone will dial the number that is stored in Photo keys memory.



To store a telephone number into a Photo dialling key (**M1 - M3**), go to **page 28 (Store number in Speed dial or Photo key)**.

Dialing a Number from the Redial List

(Call logs) → **Outgoing calls** →

Press the or keys to select the number that have been dialed (**Outgoing calls**), then press **SPK** key, or pick up handset.

Dialing a Number from the Missed Calls List

(Call logs) → **Missed calls** →

Press the or keys to show and find your contact, then press **SPK** key, or pick up handset.

Dialing a Number from the Received Call List

(Call logs) → **Received calls** → .

Press the or keys to show and find your contact, then press **SPK** key, or pick up handset.

Muting the Microphone


During a conversation, you can temporarily switch your phone's microphone off. The other party will not be able to hear you.



To mute your microphone, press the key. The microphone is now muted. The message '**Mute**' is shown on the display.

To unmute your microphone, Press the key again. You can resume your conversation with the other caller.

Using the telephone

Using the handset volume boost

You can increase the volume of the handset earpiece to your hearing requirements. To make the callers voice louder, press the volume boost button  - this will amplify the call by 40 decibels.

When the function is activated, a RED light located on the boost button  is lit, and the boost icon  is shown on the display.

CAUTION : Exposure to high (loud) sound levels can damage hearing. Gradually adjust the volume to a level that is comfortable. The handset volume boost function is not intended for people with normal hearing. Always set the volume control to the MINIMUM setting after using the phone.



Using your Phone with hearing aids


This phone is hearing aid compatible (HAC). It can be used with hearing aids that have a telecoil (T-coil) setting or program. To hear the call through your hearing aid, switch (or press) your hearing aid to the **T** position / setting. For best performance, position the handset earpiece close to your hearing aid.

NOTE: Not all hearing aids have a telecoil, or it may not be enabled. Consult your audiologist or hearing care professional for further advice. Also see **hearing aid compatibility** on **page 47**.



Hands-free (Speakerphone)

During a call, you can transfer the callers' voice from the handset earpiece to the speakerphone. This allows hands-free conversation.



To turns on the speakerphone, press the  key during a call, then replace the handset on the cradle. The Red LED  is ON.

To turns off the speakerphone, pick up the handset, to continue the conversation via the handset. The LED  will turns OFF.

Adjusting the Speakerphone Volume


To adjust the speakerphone volume (in speakerphone mode) press the  or  keys to increase or decrease the volume.

Tone Response








When the boost is activated during a call, you can use **Left** () / **Right** () keys to change the tone response (Bass, Normal or Treble).










Contacts

Telephone numbers and names can be stored in Phone book. The information is stored on the SIM and in the phones memory. It allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the telephone number. You can search and recall numbers in order to make a call, send a message, or store an entry for use as an emergency contact.

The phone book can contain at least **500** entries. If you try to add a new entry when the memory is full, a warning message is displayed. You will need to delete an existing entry in order to add a new telephone number. Contacts saved on the SIM card are indicated by the  Saving contacts to the SIM card makes it is easy to transfer the information to another device.

Create a Phone Book Entry

1. **Menu**  **→ Contacts**  **→ Options**  **→ New**
2. **OK**  **→ SIM or Phone**, then press .
3. On **Name**, press , to select **Edit**.
Create a name (15 characters maximum) for the Phonebook Entry using the numeric keypad, then press  to confirm your name.

1	2 ABC	3 DEF
4 GHI	5 JKL	6 MNO
7 PQRS	8 TUV	9 WXYZ
*	0	#
4. Press the  key to select **Number**, then press . Enter a number (20 digits maximum) for the phonebook entry, then press  to confirm your number.
5. Press the  key to select **Default Ringtones**, then press **OK** , select **EDIT** then press . Select a ringtone in select **phone ringtones** from the list of the ringtone available. You can choose to select from sound files or talking name to assign an audio file name for the contact.
6. Press the  key, then press the  key to select **SAVE**, then press  to confirm.

Phonebook

The numeric keypad also has characters (ABC etc.) printed on the keys. These characters are for entering text for phonebook entry names, writing SMS texts, and searching for an entry in the phonebook.

Press each key the relevant number of times to get the letter required. For example, for the letter **J**, press the **5** key once. For get the letter **S**, press the **7** key four times in quick succession.

To select the next letter, pause for a second and the cursor will appear | after the last letter you entered. You may now enter the next letter. Use the **#** key to switch between CAPITAL and lowercase letters. The type of writing is shown on the display. Use the UP arrow key or DOWN arrow keys to select the input mode, then press **≡/ok** to confirm.

To insert an extra space between characters, press **0**.

Press the **CLEAR (Backspace)** **?/←** key to delete the last character typed in (while entering a number or a name). Press and hold the **CLEAR (Backspace)** **?/←** soft key to clear the entire row.

View Contacts Entries

1. **Menu** **≡/ok** → **Contacts** → **Menu** **≡/ok** or press the short key **◀** to access at the contact list.
2. Use **▲** and **▼** to scroll through the list until you find the desired contact, or search for a contact in the phonebook via an alphabetic search. Simply. Type the first character of their name to automatically access the relevant part of the phonebook.

Options within Contacts

1. **Menu** **≡/ok** → **Contacts** → **≡/ok** or press the short key **◀** to access the contact list.
2. Use the **▲** and **▼** keys to scroll through the list until you find the desired contact.
3. Press the **OK** soft key (**≡/ok**).
4. Options available are as follows:
Call (to call the contact)

Details (to check the contact informations)

New (to add a new contact)

Speed dial or Pictures (to add or check an contact in speed dial or pictures key)

Delete (delete one contact in the phonebook)

Delete Multiple (delete all the contact of the phonebook)









Write Message (to write and message)

Copy contact (to copy the contact in the SIM or Phone memory)









Memory status (to inform you on the place available in the different memory)

Store number in Speed dial or Photo key

To store a telephone number in Speed dial or Photo key memory, follow these steps:


1. **Menu/OK**  → **Contacts** →  → **Options soft key**.
2. Select **Speed dial or Pictures**, then press  to enter the option items list: **M1, M2, M3 (3 Photo keys), 2 to 9 (Speed dial keys)**, Use the  and  keys to select either **2 to 9, M1, M2, M3**.
3. Press  → **Edit** → enter the telephone number, then press .
4. Press **Exit** .

NOTE: You can assign a speed dial number to a phonebook entry. This means you can dial a number very easily by pressing the associated number.

1. **Menu/OK**  → **Contacts** →  → **Options soft key** → **Speed dial or Pictures**
2. Select either **2 to 9, OR M1, M2, M3**.
3. Press **OK**  → **Edit** → **Contacts**
4. Use the  and  keys to select your contact.
5. Press , you can see the phone number, if OK, press  to confirm.
6. Press **Exit** .


Message (SMS)

Menu  → Message → Menu 

If you receive an SMS message, an envelope icon  will appear on the display.





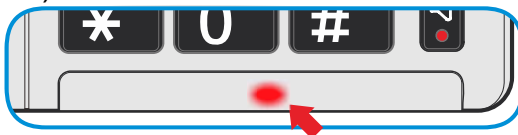










The **New message RED LED** will also flash (locate in the centre of the ringer lens).




NOTE : The envelope icon on the display and the flashing (new message) LED will continue to show until all the new SMS messages are read.



Send a Text Message

A text message (from this phone) can contain up to 160 characters (includes spaces).






1. Menu  → Message →  → Write Message → 
or press the  short key, then select **Write message**.
2. Write your text message (See text entry at **Page 26: Create a Phone Book Entry**).
3.  → Number → Enter Number with the keypad, or press , then use the  key to select **Contacts**, then press the  key.
4. Use the  and  keys to select your contact, then press **Options**, select **Mark** for only one contact or select **Mark all** to select all contacts, then press the  key.
5.  → Send → 

Receiving a Text Message

On receiving a text message, an alert tone will be audible. An envelop icon  and the message '1 New message' will appear on the display.

1. To read the message, press the /ok key to display the message.
2. Press the /ok key to see all the options available for the selected text message.
3. These options include:
Delete, Reply, Forward, Call, Move(to save the message in the SIM or Phone memory), **Add sender to**(to record your contact in your phonebook), **Details**(date & hour of the message)

Reviewing Stored Text Messages (Inbox)





1. **Menu**  → **Message** →  → **Inbox** →  or press the  short key, then select **Inbox**.
2. Scroll to the message you wish to review.
3. Press **Options**  → **View** to view the message.

These functions are also available:

Delete, Reply, Forward, Call, Move(to save the message in the SIM or Phone memory), **Add sender to**(to record your contact in your phonebook), **Details**(date & hour of the message)





Sentbox

The Sentbox stores sent and saved messages.

1. **Menu**  → **Message** → **Sentbox** →  or press the  short key, then select **Outbox**
2. Scroll to the message you wish to review.
3. Press the  key to see all the options for the selected text message.
4. These options include:
View, Delete, Delete All, Forward.






Drafts

The draft box stores messages that you have saved but not yet sent. You can now choose to send the message, resume editing it or delete it.

1. **Menu**  **→ Message → Draft →**  or press the  short key, then select **Drafts**.
2. Scroll to the message you wish to review.
3. Press the  key to see all the options for the selected text message.
4. These options include: **Delete, Delete All** and **Edit**.

Delete one or Delete all SMS






You can delete messages in the **Inbox, Outbox, Drafts** or **Sentbox Messages**.

1. **Menu**  **→ Message** or press the  short key.
2. Select either **Inbox, Drafts, Outbox** or **Sentbox** then **→ OK**.
3. Press the  key, then select **→ Delete** or **Delete All →**  then  to confirm.

Templates



You can access a list of pre-written short messages. (for example: Please call me!).

You can add your own short message to the list as below:

1. **Menu**  **→ Message → Templates →**  or press the  short key, then select **Templates**
2. Scroll down until you see “**Empty**” and then press the  key.
3. Enter your message, then press the  key to save your new message.

Broadcast Messages

This telephone supports broadcast information messages from your mobile network service provider.

Menu  **→ Message** **→**  **→ Broadcast Messages** **→**  **→ Settings** **→ Broadcast message** or **Channel settings** or **Select Languages**

You can select whether to receive these messages, the language of the message and channel setting.

SMS Settings

Mobile Network Service Providers, or their service centres, sometimes send SMS information messages to customers. To receive these messages, this telephone must have the telephone number of the service centre programmed into memory. Usually, this will have already been set up by your Mobile Network Service provider.

There are many options to store the messages on to the SIM card or Phone memory. For other settings, please consult your Mobile Network Service provider.

You can find the information:

Message Center, SMS validity period, Status report, Reply path, Preferred storage.

Message Capacity

You can find the number of Message registered in SIM or Phone memory.

Menu  **→ Message** **→**  **→ Messages capacity** **→** 


SIM 1/50 : 1 message in SIM memory on 50 maximum

Phone 6/200 : 6 messages in Phone memory on 200 maximum

Note: when the number is at the maximum, you should delete the SMS to delivery more place.



Call Record






Missed Calls (Call logs)

If you have missed calls, the **Miss call**  icon and the message '1 Missed Call' will appear on the display. The **New Message/Call RED LED** on the visual ringer will also flash.












Display Missed Calls










To display missed calls, press the soft key **Details** () key to view date, time and phone number of the missed call, or press the soft key **Exit** () to exit. You can also review missed calls via the menu as follows.

1. **Call logs**  → **Missed Calls** → .
2. Use the  and  keys to scroll through the list until you find the desired contact.
3. Press the soft key **Options** () , the following are available for the missed call entry:
Details, Call, Write Message, Add to Contacts,
Add to Blacklist, Delete, Delete All




Display Outgoing Calls

1. Menu  → Call logs  →  → Outgoing Calls → , or press the  key then select Outgoing Calls → .
2. Use the  and  keys to scroll through the list until you find the desired contact.
3. Press the soft key **Options** () , the following options are available for outgoing call entry:
Details, Call, Write Message, Add to Contacts, Add to Blacklist, Delete, Delete All

Display Received Calls

1. Menu  → Call logs  →  → Received Calls → , or press the  key then select Received Calls → .
2. Use the  and  keys to scroll through the list until you find the desired contact.
3. Press the soft key **Options** () , the following options are available for display received calls:
Details, Call, Write Message, Add to Contacts, Save to Phonebook, Add to Blacklist, Delete, Delete All

Delete All

1. Call logs → Delete all →  → Delete all? or press the  key and select Delete all → .
2. Press the  key, all calls stored in the call logs will be deleted.

Call duration

Menu  → Call logs  →  → Call duration

This allow you to check the duration of the last call, including received calls and outgoing calls.























Application


Application

The phone has applications including an alarm, timer and Bluetooth®.




1. Alarm



You can set or add an alarm. Up to 5 alarms are available.



- **Menu**  → **Application** →  → **Alarm** → 
- Press **Menu**  to select **Options** then press **Menu**  to select **ADD**.
- **Alarm 1** is displayed, you can custom the name of the alarm in pressing , Press  to select **EDIT**.
- Use  key to delete an character. Use the keypad to enter your name.
- Press  key to display the hour of your alarm, enter the hour in using the digits of the keypad.
- Press  key to display **Ringtone**, press  to select **Options**, press  then use the  and  keys to select the desired ringtone. Press  to valid.
- Press  key to display **Repeat mode**. press  to select **Options**, press  to select **Edit** then use the  and  keys to select the desired Repeat mode (Once or Daily).
- Press  to valid.
- Press  to select Options then press the digit 2 to save.

When your Alarm is activated, the “**Alarm**” icon  will appear on the display.

2. Timer

Menu  → Application →  → Timer → 

A Countdown timer is available, Press **Options** () → **Start** →  to start the counter.

It is possible to stop or pause the countdown sequence once it is started. Press the soft key  to stop the counter, then press the  key again 2 times to restart.



To make an reset,press  then select **RESET** and press .

3. Bluetooth®

(a) Activate the Bluetooth® mode






Menu  → Application →  → Bluetooth® → 


The phone can be used with a wireless Bluetooth® headset.

To activate the Bluetooth® press  to select **Activate**, one bar is added in the square and the Bluetooth® icon  appears on the display when Bluetooth® is **ON**.



(b) Activate the Bluetooth® mode


Menu  → Application →  → Bluetooth® → 
→ Paired device →  → Add a new device → 
















Put your device in pairing mode then after Select this device and press short key **Pair**  to pair.

Record your own ringtone or voice name

Menu  → Name Recorder → 

User can record your own files (up to 5 max) in the phone memory and assign it for Contacts ring tone.

After you record your files, go to **Contact** then press .

1. Use the  and  keys to select the desired **contact** (doesn't work with the SIM contacts) then press "**Options**" softkey.
2. Press  key to select "**Details**" then press  key.
3. Press "**Options**" softkey, select **EDIT** then press  key.
4. Press  key to select "**Default Ringtones**" then press  key.
5. Select **EDIT** in pressing  key.
6. Press  key to select "**Select from soundfiles**" then press  key.
7. Use  and  key to assign the sound file for your contact then press **Options** softkey, select **OK** then press  key to valid.
8. Press **Options** softkey, select **SAVE** and press  key.
9. Press  to exit.

SOS Remote Bracelet

A waterproof remote SOS bracelet is provided with your CL9000. You can press the red SOS button on the bracelet (or SOS key on the phone) in an emergency.

IMPORTANT: You need to have SOS emergency numbers stored in the phone before you can use the SOS bracelet.



Using the SOS Function in an Emergency

In an emergency, press the RED SOS button on the bracelet, or on the phone **SOS** for **3 seconds** to start the SOS procedure.

Once you press the SOS button, the phone will send your stored **SOS message** to the first emergency contact number stored then the phone will dial the first emergency contact number and play your stored voice message.


It is possible to store up to **5 emergency contact numbers in mode SOS 5 numbers** or **1 in Set call centre**. The phone will dial each number, one by one, automatically. If a contact number is busy (engaged tone detected), or a call is aborted by user, the next number on the list will be dialed. The phone will keep dialing these numbers until the call is answered, and the receiptent presses “0” to accept the call.

Note: To stop the SOS mode, press the **SOS** button on the bracelet, or on the phone again for **3 seconds**.

SOS call type selection

Menu /OK → SOS → /OK → Settings → /OK


 


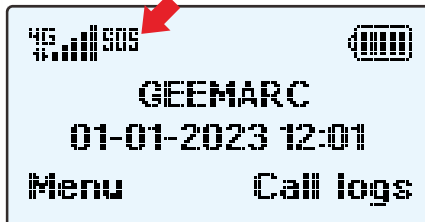

Select the type of SOS call in using the and keys to select “**SOS 5 numbers**” or “**Set call centre**” then press the /OK key to valid.



When SOS is activated, the “**SOS**” icon **SOS** will appear on the display.

SOS Emergency Contact Number Settings





 

You can set up to 5 SOS emergency contact numbers, or set a number for a call centre.

1. **Menu**  **SOS**  **SOS number** **→ Select an SOS number from 1 to 5** **→** Enter the SOS number using the numeric keypad, then confirm by pressing the  key. (Enter an emergency contact number/s that you'd like the phone to call at a time of emergency). **or**
2. **Menu**  **SOS**  **Call center number** **→** Enter the call centre number using the numeric keypad, then confirm by pressing the  key. (if you want to make an SOS call to **Emergency call centre**, you need to activate “**Set call centre**” in **SOS** **→ Mode** **→ Set call centre** **→ OK**).

SOS Message Record

You can record an informative message that will assist your helpers in an emergency e.g. **"This is Jane Smith calling, I have hurt myself. Please come to my house and help me, press 0 to accept the call"**.

NOTE: It is very important you include ‘**press 0 to accept the call**’ in your message.

Menu  **SOS**  **Outgoing voice**  **Personal**  **Recorder**, Press the  key to start the recording. When you finish the recording, press  key to **SAVE** the message (the message can be up to 20 seconds long).


 
 

You can listen to your message in select “**PLAY**”.

If you prefer the factory default message, select “**DEFAULT**” instead of Personal.

Menu  **SOS**  **Outgoing voice**  **Default** 

SOS Text Message

You can enter you own SOS text message. This will be sent to the mobile phone emergency contact number on your list.

 
 
 



Menu  **SOS**  **SOS message**  **Type an informative text message** **→** then press the  key.

You can use  key to delete a character.

Set Alarm volume

You can set the alert level from 0 to 6.

NOTE: Level 0 sets the SOS volume alarm to OFF.

Menu  → SOS →  → Set Alarm Vol →  → Press the  and  keys to change the SOS volume alarm then press the  to confirm your choice.

Pairing a new SOS remote


It is possibility to add one or more additional SOS remote bracelets.

To pair a new one, follow this procedure:

Menu  → SOS →  → Pairing settings →  → Select Add a new one SOS remote → 

Press on the red button of your new one SOS remote.

The screen displays “**Paired successfully**” to confirm that your new SOS remote is paired.

You have the possibility to remove all SOS remotes in select “**Delete all SOS remote**” then press  to confirm.

Battery replacement

If the LED does not light up when the SOS button is pressed, replace the battery as below.

- Remove the 2 screws on the rear side of the SOS remote bracelet using a small, crosstip screwdriver.
- Insert the tip of a small screwdriver in the notch and carefully open the housing.
- Replace the battery CR2025. Only use battery of the same type. Pay attention to the correct polarity.
- Close the housing and replace the 2 screws.

 

NOTE: It is recommended to check the battery on a regular basis.

Operating Range

The operating range between the SOS Remote Bracelet and the phone is **20 to 30 meter**. However, local conditions such as the materials used in building construction and radio interference from electrical appliances may reduce the range.

Technical specifications

TECHNICAL SPECIFICATIONS

Carrier frequency	: 433 MHz (Remote)
Remote Range	: Up to 20~30 meters (open area)
Remote weight	: 30 grams
Operating voltage	: Telephone base:  Shenzen Fangxin Technology Co., LTD Model: FX2B-050xxxU Input: 100-240V AC, 50/60Hz, 0.4A max Output: DC 5V  2.0A, 10W : Rechargeable Li-polymer battery: 3.7V, 900mAh : Remote: 3V Li-metal Battery CR2025
Radio Frequency Power	: <20 dBm

Main feature:

- 4G (LTE-FDD)
- 3G - CDMA: 2100 /1900 / 900 / 850
- 2G - 850 / 900 / 1800 / 1900
- RF 433Mhz SOS remote bracelet
- NANO SIM socket
- 3 x Photo keys
- Talking keypad / caller ID (talking number/user recordable)
- User recordable SOS message
- 500 phone book memory
- 90dB Loud ringer
- User changeable ringtone
- +40dB handset amplification receiver volume with LED indicator button
- Big dot matrix display (128 x 64)
- 12 LCD display languages (English / French / German / Spanish / Portuguese / Arabic / Dutch / Italian / Hebrew / Russian / Polish / Czech)
- 80 call logs (time/day of call)
- 200 SMS messages
- Real time clock (12/24 Hrs. display)
- New call indication: LED and icon
- Caller ID memory call back
- 2-way speakerphone with LED indication
- Last Number Redial
- Ringer indicator (Red LED)
- Hearing aid compatibility (ETS300381 preferred range)
- Bluetooth[®]V5.0 (supports Bluetooth[®] headset)
- Desk top and Wall mountable
- 3.5mm audio in out socket (to connect voice to text)

Troubleshooting

Telephone cannot be switched on

- Check the battery is inserted, and that it is inserted correctly. Check the power adaptor is plugged in.

Nothing appears on the display

- Check the phone is switched on.
- Check the battery and SIM are inserted correctly.
- Check that the power adaptor is plugged in.

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM.

No Service is displayed

- There is no network connection. Move the phone to a location where there is better coverage (stronger signal).
- Contact your mobile network service provider.

Message to say that a function is not possible

- Your mobile network service provider might not provide this function, or you may need to subscribe to that service. Contact your network service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed

- Ensure the SIM card is inserted correctly.


The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours.

Failure to link to the network

- The signal is too weak, or there may be some radio interference.
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your mobile network service provider for a replacement.


Cannot make a Call

- Check that payment is up to date with your mobile network service provider or that you are not out of contract.
- Check that the SIM card is valid.
- Ensure you have pressed the  button.
- Check that the SIM card registered to the network?
- Check if the '**bar outgoing calls**' feature is enabled? (**P16**)
- There may be a problem with the network, call your mobile network service provider.

Cannot answer a call:

- Check that payment is up to date with your mobile network service provider or that you are not out of contract.
- Check that the SIM card is valid.
- Is the bar incoming calls feature enabled? (**P16**)
- Is the call diverting function enabled? (**P15**)

No audible ringer

- Make sure the ringer is not set on low position. (**P20**)
- Make sure that the phone is not in Silence mode . (**P13**)

No handset amplification

- Check if the Amplify key is "On". The red light +40 dB button should be lit. (**P18** and **P24**)

Noise, Static, Interference while using the handset

- Check that you have a correct network in checking the number of barr.
- Move the phone away from others electronic equipment or to a different location.

Caller ID information does not show

- You may need to subscribe or enable this service with your mobile network service provider. The caller may have withheld their details.

Safety information

General

Only use the power supply included with this product.

Only use the approved rechargeable battery supplied.

Do not open the phone, handset, or SOS remote bracelet (except to replace the handset batteries or SIM) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and / or release of toxic fumes and chemicals.

Remove the battery in the phone if you are not going to use it for over a month.

Cleaning

Clean the telephone with a soft cloth. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g., bathrooms.

Do not expose your product to fire or other hazardous conditions.

Unplug your phone from the telephone socket during thunderstorms because it could damage your telephone. Your guarantee does not cover thunderstorm damage.

The telephone is designed for working within a temperature range of 5°C to 45°C.

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch on the telephone or use the SOS remote bracelet in areas where wireless devices are prohibited (for example in hospitals, near medical equipment, or on aircraft) where it may cause interference or danger.

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the device at a refuelling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

Hearing Aid Compatibility

Hearing Aid Compatibility

Some phones are measured for compatibility with hearing aids and cochlear implants. If “**Rated for Hearing Aids**” is printed on the box, the following applies.

People with hearing aids and cochlear implants may hear a buzzing, humming or whining sound when using their hearing instrument near a mobile phone. This is due to electrical interference generated by the mobile phone.

Some hearing instruments are more immune than others to the interference, while mobile phones (and other similar devices), vary in the amount of interference they produce.

The mobile telephone industry has developed ratings for some of their mobile phones, to assist people that use hearing aids and cochlear implants find a mobile phone that is compatible with their hearing instrument. However, not all phones are rated for hearing aid compatibility, but those that are usually have the rating printed on the box, on a leaflet or user guide.

The rating is not a guarantee. A rated mobile phone may not necessarily work well with a hearing instrument, as results depend on the combination of the mobile phone and the immunity of the hearing instrument to interference.

Trying the phone with your hearing instrument on the telecoil (T-coil setting / program) is the best way to find out if it works well.

Network services

You need to use a wireless network service provider in order to make and receive calls, send and receive text messages and use the SOS function of this phone. Many of the features of this phone depend a wireless network to function. These services may not be available on all networks, or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your wireless network service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

Guarantee

From the moment your Geemarc CL9000 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at **www.geemarc.com**. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this CL9000 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014/53/UE.

*The CE and UKCA declarations of conformity may be consulted at **www.geemarc.com**.*

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

SAR Test:

Head : 0.01 W/kg

Body : 1.647 W/kg

LIMBS : 2.977 W/kg

Recycling directives

The WEEE (Waste Electrical and Electronic Equipment) directive ensures that electrical products at the end of their useful life are disposed and recycled in an appropriate way that protects the environment.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Deposit the product in an appropriate WEEE skip (contact your local authority to find out where these are).
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

If you respect these instructions, you ensure human health and environmental protection.



For product support and help visit our website at
www.geemarc.com

E-mail : **help@geemarc.com**

Telephone : **01707 387602**

Lines are open from **10:00-12:00** then **13:00-14:30** Mon. to Fri.

Parc de l'étoile, 2 rue Galilée, 59760 Grande-Synthe, France.

Made for Geemarc Telecom S.A. in China





UGCL9000_En_V1.3

geemarc™
Hear the Difference

Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe, France

E-mail: help@geemarc.com

Telephone: 01707 387602 (lines are open
from 10:00-12:00 then 13:00-14:30 Mon. to Fri.)

www.geemarc.com