

Mobile PhotoPhone with SOS emergency key



English

CONTENTS

!!! Please refer to our website: www.geemarc.com for an up to date user guide, as there may be important updates and changes you need to be aware of !!!

CONTENTS	1
INTRODUCTION	4
Unpacking the Telephone.....	5
DESCRIPTION	6
General Description	6
LCD Screen Description	10
Menu Navigation	12
Menu Map	12
Network Services & Password	14
SETTING UP, Install SIM Card,	
Battery and micro SD card	15
Charging the Battery	16
Switching On/Off & Battery Use	17
USING THE TELEPHONE,	
First use of your mobile	18
Stand-by Mode, Making a Call	18
Making a Call from the Call Record & Phone Book....	19
Making a Call using 4 picture memory keys.....	19
Making a Call using Dialed Numbers List.....	19
Receiving a Call, Rejecting a Call.....	20
Switch Off Alerts	20
Options During a Call.....	20
Receiving Volume, Ringer Volume, Call Timer.....	21

CONTENTS

SMS	22
Send a Text Message	22
Receiving a Text Message	22
Reviewing Stored Text Messages (Inbox)	22
Sent Messages	23
Draft box	23
Delete SMS.....	23
Text Message Settings.....	24
Broadcast Messages	25
VOICEMAIL	26
Voicemail Number Setting.....	26
Listen to Voicemail	26
PHONEBOOK	27
Create a Phone Book Entry	27
View Phone Book Entries.....	28
Options within Phone Book.....	28
Create a Picture Phone Book Entry	29
Set your 4 photo memories by message.....	30
Dial a Picture Phone Book Entry.....	30
Change the picture of one photo key	30
CALL RECORD	31
Display Missed Calls.....	31
Display Dialed Calls	31
Display Received Calls	31
Delete Call Logs.....	32
Call Settings.....	32

CONTENTS

HANDSET SETTINGS	34
Phone Settings, ICE	34
Torch setting.....	35
Flight mode	35
Profiles, Call Settings.....	35
Display	36
Security Settings	36
Network Connections.....	37
SOS	38
SOS Function, SOS mode setting.....	38
SOS Number Settings.....	38
SOS Call centre, SOS Text Message.....	39
SOS Message Record	39
SOS actively obtains the local location	39
ADVANCED SETTINGS	41
Tools	41
Multimedia	42
File Manager	42
TROUBLESHOOTING	43
SAFETY INFORMATION	46
HEARING AID INFORMATION	48
NETWORK SERVICES	49
GUARANTEE	50
RECYCLING DIRECTIVES	51

INTRODUCTION

Congratulations on your purchase of our Geemarc 4G CL8100 mobile telephone. As well as hearing aid compatible, this telephone has many features including: an alarm, calendar, camera, video, SMS text messaging, phone book, a speakerphone and four photo speed-dial keys. It also has an emergency SOS key. By pressing this key for 3 seconds, up to five pre-stored emergency contact numbers are called and an SMS message is sent with the location.

The colour LCD display has a large font size that is easy to read. The key buttons are easy to see and use. The telephone has a loud ringer and a strong vibration setting to alert you to incoming calls and messages. Calls can be made louder (by up to 40 decibels) with the adjustable volume keys. These are some of the features that make this telephone perfect for elderly, hard of hearing or people with sight loss, and anyone who simply wants to keep in touch with an easy-to-use telephone.

To get the best use of this telephone, and to learn about all of its features, it is important you read the instructions that follow.

Please keep this user guide in a safe place for future reference.

This user guide explains how to use the **CL8100** telephone.

INTRODUCTION

Unpacking the Telephone

When you unpack the telephone, you will find the following items in the box:

- 1 CL8100 mobile telephone handset 4G
- 1 Desktop charging unit
- 1 cable USB / USB type C
- 1 charging adaptor
- 1 x Li-Polymer rechargeable battery
- 1 User Guide



For product support and help visit our website at
www.geemarc.com

E-mail : **help@geemarc.com**

Telephone : **01707 387602**

 
lines are open **10:00-12:00** then **13:00-14:30** Mon to Fri

Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe,
France.

DESCRIPTION


General Description

Phone Description (front)

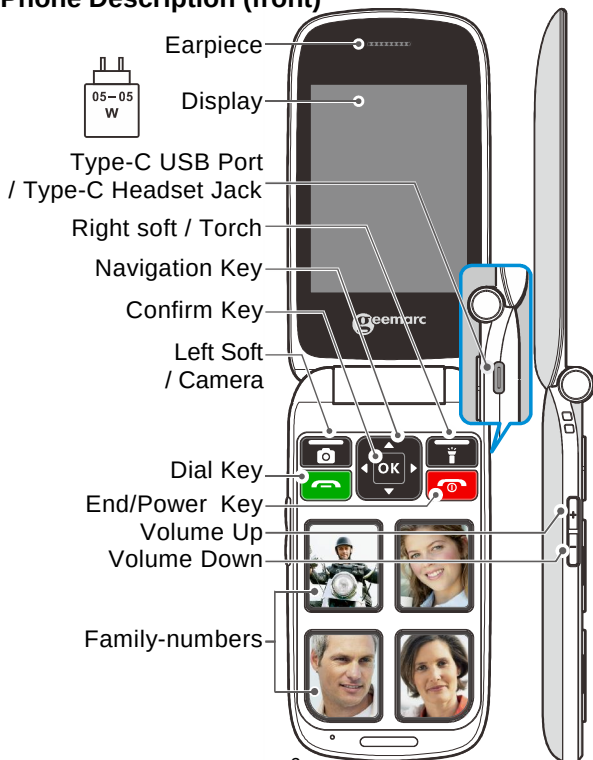


DESCRIPTION

 Phone Description (back)

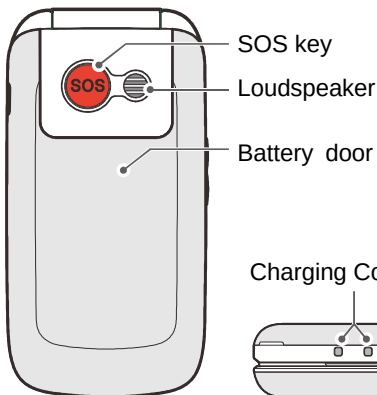

Charging Contacts


 


Charger Base Description



Charging Contacts

  Type-C USB port

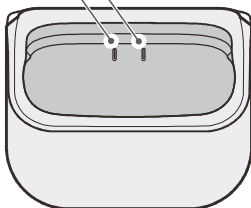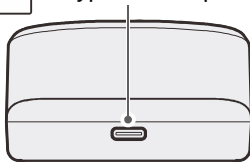

DESCRIPTION



One touch photo dial key

A telephone number can be assigned to each of the 4 photo speed dial keys. To dial a pre-stored number, press the photo key once. The telephone will dial the number automatically.

In standby mode, press the  key for 3 seconds to access the In Case of Emergency (**I.C.E**) function.



Power key / On-hook key

Long press to power the telephone on and off.

Short press to end a call.

Short press to cancel current process and return to standby.



Navigation Button

Up Key

Scroll up through lists and menu options.

This is a dedicated key in Standby. It gives access to the **Alarm** function, or can be set up in Phone Settings to give access to another function.

Down Key

Scroll down through lists and menu options.

This is a dedicated key in Standby. It gives access to the **Call logs** function, or can be set up in Phone Settings to give access to another function.

Right Key

This is a dedicated key in Standby. It gives access to the **Profile** function, or can be set up in Phone Settings to give access to another function.

Left Key

This is a dedicated key in Standby. It gives access to the **Write SMS** function, or can be set up in Phone Settings to give access to another function.

DESCRIPTION

	Call Key Make a call after selecting the contact. Receive a call. Access at the outgoing call list.
	Left / Right key These are soft keys i.e.; they take on different functions depending on the menu displayed. The current function is always displayed by the text above the key. In standby mode, Long press the left key to access the digital camera function. In standby mode, long press the right key to turn the torch on or off.
	Special characters key While composing a message or editing a phonebook entry name, press this key to insert one or more symbols (.? <> for ex). Then use the navigation keys to move to the symbols you want to insert.
	Lower case or Upper-case keys The left key is for lower-case letters. The right key is for upper case (capital) letters.
	Digit key Press this key to insert one or more digits or the symbols W / P / + / * while composing a phone number or editing a phonebook entry number. Then use the navigation keys to move to the symbols you want to insert.

DESCRIPTION



Volume Up and Down Key

Use this key to increase ringer volume when you access **Profiles** menu or when receiving an incoming call. Increase the earpiece / speakerphone volume during a call. There are 9 volume levels available. Start the **amplifier** function after level 5.

Volume Down Key

Use key to decrease the ringer volume when you access **Profiles** menu or when receiving an incoming call. Increase the earpiece / speakerphone volume during a call. There are 9 volume levels available.

LCD Screen Description

The LCD screen is split into three distinct areas:

The icon area. This is at the top of the screen. It shows the various system icons which help you to use the telephone.

The main area. This is across the centre of the screen. It displays the following:

- Number being dialed
- Menu information
- Caller ID information
- In standby mode current time, date and service provider name
- Phonebook

The soft key area. This is at the bottom of the screen.



Signal Strength icon

This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength.



Alarm icon

The alarm has been set to ring at a specified time.

DESCRIPTION

	Battery Status icon This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge.
R	Roaming icon A roaming call is taking place i.e., international call – outgoing or incoming.
	SMS icon A new SMS (text message) has been received.
	Mute mode The microphone is temporarily muted during the conversation.
	Silent mode The telephone is in silent mode. There will be no call alert (ringer switched off). (Select Silent mode in profiles menu)
	Headset icon The headset is plugged in.
	Missed Call
	Vibration mode The telephone is in Vibration mode (select Meeting mode in profiles menu).
	Outdoor mode in profiles menu selected. Indoor mode in profiles menu selected.
	New Voicemail message.
	Fly mode activated
	Torch activated

DESCRIPTION

Menu Navigation

The **MENU** soft key (central square **OK** key) is used to access the menu. The **BACK** soft key is used to go back a level in the menu system. Press  to deactivate the menu and return to standby mode from any menu.

The ▼ and ▲ keys are used to scroll through the menu.

- ▲ move up through the menu
- ▼ move down through the menu

Use the ◀ and ▶ keys to access sub menus.

The **OK** soft key is used to confirm / select an action or confirm a choice on the display screen.

Menu Map

Contacts	Photo contacts Normal Phonebook
Message	Write Message Inbox Outbox Drafts Sent box Broadcast Message Voice mail server
Call logs	Missed calls Dialed calls Received calls Rejected calls Delete all Call timers Data service counter

DESCRIPTION

SOS Setting	Mode setting SOS Number SMS setting Set outgoing voice MSG
Settings	Phone Settings I.C.E Torch Flight mode Profiles Call settings Display Security Connections
Tools	Clock Calendar Calculator
Multimedia	Image Camera Make a video Video FM radio Recorder
My files	Phone Memory card

DESCRIPTION

Network Services

To use this mobile telephone you must subscribe to a mobile network service provider. Different network providers offer different features (with various charges / tariffs). This may affect the availability of features on this mobile telephone.

Passwords

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.


SETTING UP

Install nano SIM Card and Battery

Always switch the telephone OFF and unplug the charger (if connected) before removing the battery.


Take care when handling the nano SIM card, the SIM card and its electrical contacts can be easily damaged by scratches or bending.

To remove the battery compartment cover, place the telephone screen down. In the bottom left corner there is a small opening where you can gently insert your fingernail (or a suitable tool) to lift the battery cover and unclip it.

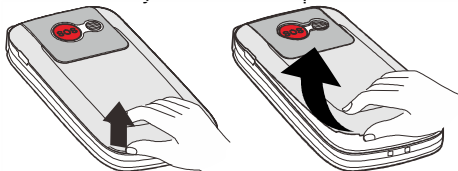

Remove the battery (if battery is already inside).

Slide a nano SIM with the gold contacts face down under the silver SIM holder as shown below.

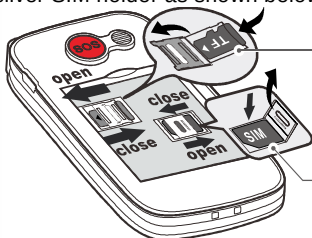

You can insert one micro-SD card to save the pictures. Maximum 32G.

Nano SIM card

Observe the battery contacts (the gold coloured contacts must face towards the bottom right) then insert the battery.

Place the battery cover into position and close the cover. (gently press the cover so that it clips shut).

SETTING UP

Charging the Battery

Charging via the Type-C Port


Plug the supplied charger into an electrical mains wall socket. Connect the lead from the charger into the Type-C port on the right side of the telephone. During charging, the battery icon  will start to fill. This shows charging is in progress.



Charging via the Charging Unit

Plug the supplied charger into an electrical mains wall socket. Connect the lead from the charger into the Type-C port on the charging unit. Place the mobile telephone onto the charging unit.

Note: Only use batteries and chargers supplied with the telephone. The guarantee will be invalid if an unapproved cables and chargers are used. Keep the battery contacts clean and free of dirt.

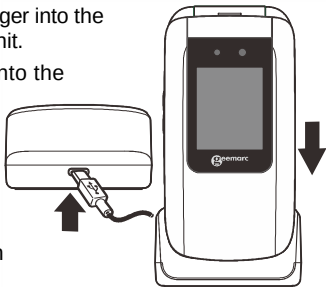

If the battery is completely discharged, it may take a few seconds before the charging indicator appears on the display or before any calls can be made.

Note: Before using the phone for the first time, the battery must first be charged for a minimum of 3 hours.

SETTING UP

Switching On/Off

Press  for 3 seconds or longer to switch the telephone on. If no SIM card is inserted, **NO SIM CARD** will be displayed. Only emergency calls can be made until the SIM is inserted. Press  again for 3 seconds to switch the telephone off.

Battery Use

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery charge. The more bars displayed, the more charge is available, which means the telephone will operate for longer before charging is required.



When the battery charge is low, a warning message is displayed. The display back light and certain other functions may stop working. The telephone will automatically switch off when there is not enough battery charge to power it.

Talk and standby times may vary. Replace the battery with a new one if charging is required more often than normal.

USING THE TELEPHONE

First use of your mobile telephone

Press the  key to turn ON the telephone. The display will ask you to select your language. Use the ▼/▲ keys to select the language, then press the **OK** softkey to confirm.

Then set the time with the  key (allows you to display the numbers) press the key ▼ then set the Date with the  key Press the key ▼ then set the time format (12H or 24H) with the left or right arrow key.

Press the key ▼ then update time setting, then press **OK**, after to select your setting, press the back soft key to exit.

Press the **Done** softkey to confirm the setting.

Enter your *Pin code with  then press **OK**.

Standby Mode

When the mobile phone is ready for use and you have not entered any characters, the telephone is in standby mode.

Press the  key to set the phone into standby mode.

Making a Call

First, flip open the cover, then press a photo-dial key, or choose a contact stored in the phonebook.

To end the call press  or flip the cover closed.

To place an international call, you need to press + during the contact recording, press  before the country code. Press the photo key to access the special functions **P**, **W**, **#** or **X**.

USING THE TELEPHONE

Making a Call from the Call Record

You can find dialled numbers, and received or missed calls in the Call Record.

1. Menu **à** Call logs **à** Dialed calls **à** Select the telephone number required.
2. Press , the number is automatically dialled.
3. To end the call press  or flip the cover closed.

Making a Call from the Phone Book

To call a number you have stored in the Phone Book.

1. Menu **à** Contacts **à** Photo contacts or Normal Phonebook **à** Select the telephone number required.
2. Press , the number you selected is automatically dialled.
3. To end the call press  or flip the cover closed.

Making a Call using Photo Dial keys

If you have stored numbers in the photo dial keys, press one of the 4 photo dial keys to make a call (dependant on who you wish to call). The selected phone number will automatically be dialled in speakerphone mode.

Making a Call from the Dialed Numbers List

Press  to display the dialled calls list.

Use ▼ or ▲ to scroll through the list and find the desired number.

Press  again, the number is automatically dialled.

USING THE TELEPHONE

Receiving a Call

When the telephone receives an incoming call, the caller's telephone number is displayed on the LCD screen. If the caller's number is stored in the Phonebook, the associated name is displayed.

Press  to answer the call, or flip to open the phone.

Press  to end the call, or flip to close the phone.

Rejecting a Call

To reject an incoming call with the phone open press  or press the soft key **SILENT** then **REJECT**

Switch Off Alerts

You can switch off all of the alerts for an incoming call by selecting **Silent** in the profiles, on the display you can find  or only vibrations by selecting **Meeting** in the profiles, you can find the shaker icon  on the display. In profile, select **Normal** to return to normal mode.

Options During a Call

Press the **OPTION** soft key during a call to access a variety of functions, including: :

- Hold
- Recording started
- Mute
- Contacts
- Call logs
- Message

"Call diverting", "multiparty calls", "call hold" and "call waiting" function need network support, so please contact your network service provider.

USING THE TELEPHONE

Receiving Volume

During a call, press the **V+** and **V-** buttons on the right side of the phone to increase or decrease the earpiece volume level. There are 9 volume levels. The amplifier function starts after level 5. This will boost the volume of the call. At maximum volume setting, the call volume is increased to 40 decibels.

Hands free Function (speakerphone)

To turn on the speakerphone during a call, press the right soft key. In speakerphone mode do NOT hold the phone next to your ear. The call is heard through the speakerphone (not the earpiece). Your voice is picked up through the microphone in the telephone over a short distance.

Important Note: *Switching back to earpiece mode - before you put the phone next to your ear, please ensure you have switched OFF the speakerphone by pressing the right softkey **EARPIECE**.*

Ringer Volume

When the phone rings for an incoming call, you can adjust the ring volume by pressing **V+** or **V-** when the clamshell is open or when the handset is in standby mode.

Call Timer

Your handset automatically times the duration of every external or internal call. The time is shown during the call and for a few seconds after the call has ended.

Send a Text Message

A text message can have up to 160 characters (including spaces).

1. Menu **à** Message **à** Write Message or press directly on the left navigation key
2. Enter the first 3 characters of the contact with the   keys or press **OPTIONS**, select **Add recipient**, select the contact in the list, press **OK** key then **OPTIONS** and **OK**. If you have just the phone number, use the key  .
3. Press down arrow and write your text message with the keys   .
4. Select **Options à Send**

Receiving a Text Message

On receiving a text, an alert tone will sound. **1 NEW MESSAGE** will be displayed on the LCD.

1. Press the **READ** soft key followed by the central square (**OK**) key to display the message.

Reviewing Stored Text Messages(Inbox)

1. Menu **à** Message **à** Inbox.
2. Scroll to the message you wish to review.
3. Press the central square (**OK**) key to view.
4. Press **OPTIONS** soft key to see all the options available that can be performed on this selected text message, or **OK** key to reply directly.
5. These options include **Delete**, **Write message**, **Forward**, **Call**, **Move**, **Add to contacts** and **Details**.

You can press directly on the **OK** key to select **Reply**.

Sent Messages

The outbox stores successfully sent and saved messages (if the telephone is set up to save outbound text messages in Message Settings).

1. Menu **à** Message **à** Sentbox
2. Scroll to the message you wish to review
3. Press the central square **OK** key to view
4. Press **OPTIONS** soft key to see all the options available that can be performed on this selected text message
5. These options include **Forward, Delete, Calls, move and Details**

You can press directly on the **OK** key to select **Forward**.

Draftbox

The draft box stores messages that you have saved but not sent yet. You can send the message, edit or delete it.

1. Menu **à** Message **à** Drafts
2. Scroll to the message you wish to review
3. Press the central square key to view
4. Press **OPTIONS** soft key to see all the options available for the selected text message
5. These options include **Add recipient, Send, Add and Save as draft.**

Delete SMS

You can delete messages in the Inbox, Outbox, Draftbox or Sentbox.

1. Menu **à** Message **à** Options **à** Delete All **à** Select either Inbox, Drafts, Outbox or Sentbox **à** Clear then Press **OK** key

Text Message Settings

Service Centres distribute SMS messages. Your mobile telephone must have the telephone number for the service centre programmed into memory. Generally, this will have already been set up by your service provider.

Menu à Message à Options à Settings

There are many settings options:

SIM SMS center

Set up the location of the SMS center

SMS validity period

You can stipulate how long an attempt at delivering a message should be.

Status Report

Every time a text is sent you will receive a message to say whether it has been sent successfully or not.

Reply Path

If you activate this feature, when you reply to a message, the cost of sending it is charged to the recipient's account instead of your own.

Save Sent Messages

You have 3 choices, **Prompt user**, **Save** or **don't save**

Preferred Storage

If you select **SIM PREFERRED**, when you receive a new message it will be stored on the SIM card by default. When the SIM card memory is full new messages will be stored in the telephone.

Export SMS

Auto signature

Message capacity

Menu → Message → Options → Settings → Message capacity

This allows you to see how much memory is used up and how much is free on both the SIM card and the telephone e.g.

SIM 0/40, **Phone** 2/200, **MMS memory** 0/100.

Broadcast Messages

This telephone supports broadcast messages i.e. information services from your network service provider.

Menu → Messages → Broadcast Messages → OK → Options → Settings → OK

You can choose whether or not to receive these broadcast messages. You can also select broadcast language and channel setting.

VOICEMAIL

Voicemail Number Setting

Voicemail allows you to listen to any audio messages callers may have left you.

You may need to subscribe to your network service providers voice box service (if available). Contact your network service provider for details.

If your network service provider has a voicemail service, the telephone number to access the voicemail system will normally be set up on your telephone. If it is not, when you receive a voicemail message for the first time you will be prompted to enter the name and number settings to access your network service provider's voicemail system.

Listen to Voicemail

If you have missed a call, you will receive a message on the phone's display, **1 MISSED CALL**. Press **Details**, you will see a list of all missed calls in the Call logs.

To use the voicemail system, follow the instructions your network service provider gives. Press on the  key to enter the number you want.

PHONE BOOK

Telephone numbers and names can be stored in the phone book. This is held both on the SIM and in the phone's memory. It allows you to store frequently used numbers so that you can easily make a call without having to remember them. You can search and recall numbers in order to make a call, send a message or use an entry as an emergency contact. The phone book can contain up to 500 entries in Phone memory and a number of memories in the SIM card. (this assumes a maximum capacity of 250).

If memory is full, it will not be possible to add a new entry and a warning message is displayed. You will need to delete an existing entry in order to add a new one.

Saving entries to the SIM means you can transfer the information to another telephone.

Create a Phone Book Entry

1. Menu **à** Contacts **à** Normal Phonebook **à** Options **à** New
2. Select **à** SIM or Phone then press **OK**.
3. On Name, press **OK** then enter the name of your contact entry using the   keys then press **OK**.
4. Press down arrow then press **OK** to select Mobile.
5. Enter a number for the phonebook entry with the  key.
6. Press down arrow then press **OK** to select Home number.
7. Enter a number for the phonebook entry with the  key.
8. Press **Save** soft key to confirm.

To switch between upper and lower case use the   keys.

You can also switch to numbers using the  key.

Press  and select  to insert a space.

Use the same key to enter a special character.

Press the **CLEAR** soft key to delete the last character typed in while entering a number or a name. Press and hold the **CLEAR** soft key to clear the screen.

PHONE BOOK

View Phonebook Entries

1. Menu **à** Contacts **à** Normal Phonebook or press **Contact** soft key directly in standby mode.
2. Use **▼** and **▲** to scroll through the list until you find the desired contact, or you can search for a contact in the phonebook via an alphabetic search in place the bar on the icon search in the bottom of the display. Type the first letters of their name with the   keys and it will automatically find the correct part of the phonebook for that letter.

Options within Phonebook

You can edit, delete and copy the contacts in the Phonebook:

1. Menu **à** Contacts **à** Normal Phonebook or press **Contact** soft key directly in stand-by mode.
2. Use **▼** and **▲** to scroll through the list until you find the desired contact then press **OK**.
3. Press **OPTIONS** soft key
4. Options are: **Edit, Delete, Copy, Send vCard**

Options within Phonebook

Within Phonebook Settings you can do the following:

- 1) Create a new contact.
- 2) Write a message
- 3) Call the contact
- 4) Delete or Delete multiple contacts
- 5) Import / Export the contact
- 6) Send vCard
- 7) Check Memory Status

PHONE BOOK

Create a Picture Phone Book Entry

You can also create a Picture Phonebook entry with a contact associated with it. This is particularly useful when you receive an incoming call as the photograph will be displayed on the inside screen. Therefore, you can see who is calling by simply looking at the photograph of them.

1. In Photo contacts list, if a contact is not assigned a picture, press directly on the photo that was taken (see Take Photo below) or Menu **à** Contacts **à** Photo contacts.
2. Select **Add** then **Edit** to modify contact.
3. On modify icon, press **OPTIONS** then **Select from album** or **Take Photo**.
4. Take a photograph of the person that you are adding to the phonebook (press Central Square key). Press **OK** soft key.
5. Select Name then press **OK à Add from phonebook** or **Edit** a name for the Phonebook with the   keys then press **Save** soft key.
6. Select number then press **OK à** enter the Number for the phonebook entry with the  key and press the **Save** soft key.
7. Select the ring settings for the contact.
8. Press  to exit.

PHONE BOOK

Set your 4 Photo Memory keys by SMS

You can program your 4 photo memories remotely by receiving an **SMS**.

From another mobile phone, you need to send the following SMS:

PIC_PHB#name1,number1;name2,number2;name3,number3;name4,number4#

***Note:** Be careful with upper- and lower-case characters and “,” and “;”.*

If you do not want to put a contact for each photo, do not put anything between 2 “;”.

PIC_PHB#name1,number2;name3,number3;name4,number4#

Dial a Photo Memory key

Press a picture memory key, the phone will dial the phone number stored in that memory key automatically in speakerphone mode.

Change the photo on the Photo Memory key

On the middle side of the keys, use the small hole to help remove the transparent plastic part. Change the photo and replace the transparent plastic part on the key.

You can print out your photos from your home printer with the aid of our website – see the CL8100 page

CALL RECORD

Display Missed Calls

When you have a missed call, a missed calls message will appear on the display e.g., **3 MISSED CALLS**. Press the **Details** soft key to review the details of the call, or press **Exit** to exit. You can also review missed calls via the menu as follows:

1. Menu **à** Call logs **à** Missed calls.
2. Use **▼** and **▲** to scroll through the list until you find the desired contact.
3. Press the soft key **OPTIONS**, the following will be available to perform on that call record entry:

Details

Call

Write message

Add to contacts

Add to blacklist

Delete/ Delete All

Display Dialed Calls

1. Menu **à** Call logs **à** Dialed calls
2. Use **▼** and **▲** to scroll through the list until you find the desired contact.
3. Press the soft key **OPTIONS**, the following will be available to perform on that dialed call record entry:

Details

Call

Write message

Add to contacts

Add to blacklist

Delete/ Delete All

Display Received Calls

1. Menu **à** Call logs **à** Received Calls
2. Use **▼** and **▲** to scroll through the list until you find the desired contact.
3. Press the soft key **OPTIONS**, the following will be available to perform on that call record entry:

Details

Call

Write message

Add to contacts

Add to blacklist

Delete/ Delete All

CALL RECORD

Delete Call Logs

1. Menu → Call logs
2. Select either Missed calls, Dialed calls, Received Calls or Rejected calls, to delete all entries Menu → OK → Options then select **Delete all** then **OK** or directly **Delete all** to reset all the call logs then **OK**.

Call Settings

Within Call Settings there is SIM Call Settings and Advance Settings.

You can access SIM Call Settings as follows:

Menu → Settings → Call Settings

There are many settings available:

Flip to Answer: when the function is activated, you can answer the call by opening the flip cover. (set open by default).

Call Divert: Incoming calls can be diverted to a specified telephone number (voicemail number generally). There are 5 options available with this function:

- **Divert all Voice Calls:** Call divert is applied to all incoming calls.
- **If Busy:** Call divert is applied to all incoming calls if your line is busy.
- **If No Answer:** Call divert is applied to all incoming calls if you do not answer the call.
- **Divert if Unreachable:** Call divert is applied to all incoming calls if your phone is switched off or you are not in a service area.
- **Cancel all divers**

CALL RECORD

Call Waiting: This can be activated or deactivated. Please check your network service provider to see if this service is available. You can **INTERROGATE** to find out if your service provider offers this service.

Call Barred: Incoming and outgoing calls to and from your phone can be limited. There are 6 options available with this function:

All outgoing Calls : No outgoing calls can be made.

- **All Incoming Calls:** No incoming calls can be received.
- **Incoming calls when roaming**
- **ISD calling**
- **Dial when INTL roaming**
- **Cancel all barring**

Hide ID: - You can choose whether this is set by network, hidden or shown.

Others

Call Time minute reminder: - Emits a beep when the selected time is reached (50s, 55s, 60s, customisable).

Auto Redial: If this setting is activated, when you make a call but cannot get through as the other line is engaged, your telephone will automatically redial this number after a certain amount of time (decided by you). This will take place provided you have not cancelled the call.

Vibration when connected : When you dial a phone number from the photo memory keys or contact list and the receiver answers, the telephone vibrates once.

HANDSET SETTINGS

Phone Settings

Within Phone Settings you can adjust the following functions:

Menu à Settings à Phone Settings

Time and date: Set the time and date, Time format (12hr or 24hr), Date format (DDMMYYYY or MMDDYYYY or YYYYMMDD) and update time settings.

Language: There are 17 menu languages available i.e. English, French, Spanish, Dutch, German etc.

Shortcut Settings: You can set the telephone so that you only need to press one navigation key to enter the desired menu.

Auto Power On or Off.

Battery optimization: Limits charging to 80% of battery capacity to extend battery lifespan.

Power saving mode : Reduces brightness of the LCD screen to lower energy consumption.

Power management: To check the battery remains.

Restore factory setting: You can undo all the changes you have made to the telephone settings and restore it to the factory settings. The default password is **1234**.

I.C.E In Case of Emergency

You can add 4 Names and Numbers of people who could be contacted in times of Emergency.

Menu à Settings à ICE à Contacts

You can input all the phone owner's information e.g.name, address, disease, allergy, blood group, doctor

Menu à Settings à ICE à Owner Info

HANDSET SETTINGS

Torch Setting

You can choose to turn on the phone screen in white using the LEFT soft key or the phone's (rear) light by pressing OK.

Flight mode

Select Activate to activate the flight mode. Select Off to turn off flight mode. (No possibility to receive or make a call)

Profiles

There are 5 types of profile available:

Normal – Silent – Meeting – Indoor - Outdoor

You can make changes to the detail of the profile selected. A profile is made up of the following settings:

Ring settings: Call ringtone- Message ringtone.

Adjust volume: Message ringtone - Alarm & calendar ringtone - power ringtone.

Ring type: Call alert - Message alert - Alarm & calendar remind.

Other alert rings: Battery low alert - Power ringtone - Phone number - Dial tone - Flap open tone - Flap close tone.

Call setting

See item call settings page 32.

HANDSET SETTINGS

Display

You can modify your display in this menu with different functions:

Animation effect: You can select different animation effects when the telephone is powered on or off.

Wallpaper settings: you can select a wallpaper background or choose a picture.

SubLCD analog clock: Set to ON to display an analog clock on the outside display or OFF for the default digital clock.

Contrast: Use the ◀ and ▶ keys to adjust the display contrast.

Backlight: You can set the display backlight duration from 5 seconds to always on.

Keypad backlight time: You can select the keypad backlight duration from 5 sec to 20 sec, or select night mode (no backlight during the night) and off.

Security Settings

You can set up passwords to help protect your telephone from unauthorized use.

Pin: The PIN code is supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. When you select Pin, the telephone will always request your pin code.

Modify pin2: it is to change your PIN code. The PIN2 code is required to access certain services (Voicemail service for ex).

Phone locked: You have the possibility On first use (during setup) you can add a pin code for the telephone (if the telephone pin code feature is activated). The factory default telephone pin code is **1234**.

Modify the phone locked password: The default pin code is **1234**. You can choose your own pin code with this function.

HANDSET SETTINGS

Privacy: You can lock all telephone functions from the following list (Call logs / Message / Camera / Calendar / U Disk / Audio player and Video player).

Fixed dialling number: is a **service mode of a GSM phone's Subscriber Identity Module (SIM) card**. Numbers are added to the FDN list, and when activated, FDN restricts outgoing calls to only those numbers listed, or to numbers with certain prefixes.

Own number: You can save your phone number in case you're worried you might forget it.

Blacklist: You can blacklist (block) nuisance / unwanted phone numbers.

- In Blacklist, enter the telephone numbers you wish to blacklist.

The Blacklist setting can be activated or deactivated.

Network Connections

In this menu you can modify the telephones network connections. The different options are:

Network account: Select the network.

Data service: Activate or no Mobile Data service function.

Data roaming: Connect to data service.

Network selection: Automatic or manual selection of the network.

Network type: You can select the type of mobile network (4G / 3G / 2G).

VoLTE: VoLTE is a technology that allows you to make calls using the 4G network, it offers superior sound quality and faster connection times.

SOS

SOS Function

In an emergency, press the **SOS** button (for three seconds) for help.

If you have preset an SOS text message and set the **SOS numbers**, when you press the **SOS** button for three seconds, the phone will send the SOS text message to the receiver. After confirmation, it will also send an SMS containing your location details.

Up to 5 numbers can be registered as **SOS numbers**. The telephone will dial each one automatically, one by one. If the line is busy or the SOS call is rejected, the next number in the list is called. **There is a one-minute delay between each call. This is to allow a previously dialed number time to call back.** Each number in the list will be dialed a maximum of 3 times.

If you want to quit the SOS mode press & hold **SOS** button again 3 seconds.

Note: *As long as you are in the SOS mode, you cannot turn the telephone off. You must exit the SOS mode before turning the telephone off.*

Mode Setting

You can turn the SOS function on or off. If it is turned on, pressing and holding the red SOS key for three seconds will make the CL8100 send an SOS text message to your SOS contacts who will then be called one by one as described above.

SOS Number Settings

You can set up to 5 SOS numbers or set a number for a call center.

1. Menu **à** SOS **à** SOS number **à** Either add from Phonebook or Enter Number with the key  then press OK.

SOS Text Message

You can edit the default SOS text message. This message "Help!!!" will be sent to your SOS contacts when SOS mode is activated, (assuming the SOS text message function is activated).

Menu à SOS à SOS SMS à Content à Type your text message (max 50 characters) à OK.

SOS Message Recording

Record an informative emergency message for your SOS contacts e.g. "This is Jane Smith calling, I have hurt myself. Please come in the minute to my house and help me."

Menu à SOS à Set outgoing voice MSG à Custom à Record.
à Select "Record" to start then talk clearly à Select "Stop" on completion (the message can be up to 10 seconds long).

To listen to your recording select "Play". To erase your recording select "Delete". If there is more than one recording, select one from the list with "Select".

Menu à SOS à Set outgoing voice MSG à Default is to select the default SOS recording.

SOS actively obtains the local location

- 1.To obtain the current location of the CL8100, the SOS contact will need to send « **location** » or « **119** » to the CL8100.
- 2.When the CL8100 receives a request for its location from an emergency contact, it will automatically send back a text of its current location.

Note: Only numbers registered as SOS numbers can receive the location of the CL8100 by text message.

Lennon Studios, 109 cambridge court L7 7AG, Liverpool, UK.



ZoomIn

ZoomOut

Open Google map

ADVANCED FUNCTIONS

Applications

There are many useful functions within organizer.

Clock

(1) World clock

In Alarm mode, press the ◀ key to find the city you are looking for and to see what time it is there.

(2) Alarm

An alarm can be set to sound at specific time. It can be set to go off once or repeatedly on a weekly schedule. Three different alarms can be set up. Press  , the alarm will keep ringing every 5 minutes until you actually turn the alarm setting to Off or press on left soft key **Stop**.

The alarm still works when the telephone is switched off.

Note: The alarm will not sound if the telephones ringer is set to silence.

Calendar

You can review the calendar, move to a certain date quickly and add events (with an alarm) if required.

Calculator

Press **Up** (▲), **Down** (▼), right (▶) or left (◀) to move through the mathematical functions: + - x / ÷

Press **OK** key to get the result.

ADVANCED FUNCTIONS

Multimedia

Menu → Multimedia →

There are superb multimedia options available on the CL8100 including photos, video, a sound recorder and FM Radio.

File Manager

The multimedia files used in many of the applications can be found in **My files**. There is a folder for each of the following:

Alarm / Audio / Ebook / File array / Others / Photos / Videos / Vcard

You can do standard file manipulation for each of the files within the folder e.g. New folder, Delete, Details, Edit, Search, Sort, Mark and Memory status.

You can connect the telephone to your desktop or laptop computer to access these files from your device by selecting **UDisk** from the telephone display screen and confirming with the **OK** soft key.

You can find all the information about your telephone on your computer in Explorer then USB drive.

TROUBLESHOOTING

Telephone cannot be switched on

- Check the battery is inserted correctly.
- Press and hold the  key for 10 seconds.

Nothing appears on the display

- Check the telephone is switched on.
- Check the battery and nano SIM are inserted correctly.

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM.

No signal icon is displayed

- There is no network connection. Move around to improve signal reception or go to an area where there is network coverage.
- Contact your service provider.

Message to say that a function is not possible

- Your network service provider may not provide the service or function you require, or you may need to subscribe to it. Contact your network service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed

- Ensure the SIM is inserted correctly.

TROUBLESHOOTING

The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours.
- Place the phone correctly on the charging unit or connect the USB type C cable directly to the CL8100. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Try a new battery.
- Check the adaptor connections.
- If temperature is below -10°C or higher than 55°C move to a location with less extremes of temperature.

Failure to link to the network

- The signal is too weak, or there may be some radio interference.
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

Cannot make a Call

- Check that network service charges / contracts are in credit.
- Check that the SIM card is valid.
- Check if fixed dialing is set.
- Ensure you have pressed the green dial button.
- Is the SIM card registered to the network?
- Is the bar outgoing calls feature enabled?
- There may be a problem with the network, call your service provider.
- Check the service provider number, local area number or NMC number (see Handset Settings).

TROUBLESHOOTING

Cannot answer a call:

- Check that network service charges / contracts are in credit.
- Check that the SIM card is valid.
- Check if fixed dialing is set.
- Is the bar incoming calls feature enabled?
- Is the call diverting function enabled?

The keys appear to be locked

- Reset the telephone by powering it off and then on again.
- Remove the battery, then reinsert it and switch the phone back on.

Caller Number is not displayed

- Ensure you have subscribed to the Caller ID service. Contact your network service provider for confirmation / details.
- The caller may have withheld their details.
- Let the phone ring a few times as there may be a delay in receiving the Caller ID information.

Any problems not referred to above

- Check through the User Guide.
- Reset the telephone by powering it off and then on again to see if the problem persists.

SAFETY INFORMATION

General

Only use the power supply, chargers and cables included with the product.

Only use the approved rechargeable battery supplied.

Do not open the phone (except to replace the batteries, add micro SD card or SIM) or cradle. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and / or the release of toxic chemicals.

If you are sure you are not going to use the telephone for over a month, remove the battery

Cleaning

Clean the telephone with a soft cloth. Keep the cradle and phone charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms.

Do not expose your product to fire or other hazardous conditions. The telephone is designed for working within a temperature range of -10°C to 55°C.

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SAFETY INFORMATION

SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This may affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

Do not use the device at a petrol station. Do not use the device near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation.

BACK-UP COPIES

Remember to make back-up copies or keep a written record of all-important information.

CHARGING

Do not use the telephone during charging.

HEARING AID INFORMATION

HEARING AID INFORMATION

Some phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may hear a buzzing, humming, or whining noise. This is due to radio frequency (RF) interference from the phone. Some hearing devices are more susceptible than others to this interference, and phones also vary in the amount of interference they generate. The mobile phone industry has developed ratings for some of their mobile phones, to assist hearing device users find models that may work better with their hearing devices. Not all phones have been rated however. Phones that are rated have the rating on their box or a label on the box. The ratings are guidelines, not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. The best way to see if your hearing device works well with a particular phone is to try it out and see whether it meets your personal needs.

NETWORK SERVICES

To use the phone, you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

GUARANTEE

From the moment your Geemarc product CL8100 is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this CL8100 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014 / 53 / UE and 2012 / 65 / UE.

The UKCA declaration of conformity may be consulted at www.geemarc.com

Electrical connection : The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN62368-1 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.

SAR Test:

Head : 0.587 W/kg

Body : 1.710 W/kg

LIMBS : 1.710 W/kg



For product support and help visit our website at

www.geemarc.com

E-mail : **help@geemarc.com** Telephone : **01707 387602**
lines are open from **10:00-12:00** then **13:00-14:30** Mon to Fri

Parc de l'Etoile, 2 Rue Galilée, 59760 Grande-Synthe,
France

Made for Geemarc Telecom S.A. in China



UGCL8100_En_V1.0