

CL8350

GSM Telephone with Voice Amplification



English

CONTENTS

CONTENTS	1
INTRODUCTION	5
Unpacking the Telephone	6
DESCRIPTION	7
General Description	7
Menu Navigation	14
SETTING UP	16
Network Services	16
Passwords	16
Install SIM Card and Battery	17
Charging the battery	18
Battery Use	20
Switching On/Off	21
USING THE TELEPHONE	22
Standby Mode	22
Energy Saving Mode	22
Making a Call	22
Making a Call from the Call List	23
Making a Call from the Phone Book	23
Making a Call using Quick Dial	24
Receiving a Call	24
Rejecting a Call	25

CONTENTS

Hands Free	26
End Single Call	26
Start a New Call	27
Phonebook	27
Write an SMS	28
Mute Function	28
DTMF Tones	29
Receiving Volume and Tone	29
Call Timer	29
MESSAGES	30
Send a Text Message	30
Receiving a Text Message (Inbox)	31
Reviewing Stored Text Messages (Inbox)	31
Outbox	32
Templates	32
SMS settings	32
Voicemail Server	33
PHONEBOOK	34
Create a Phonebook Entry	35
Create a Phonebook Entry from Standby	37
View Phonebook Entries	38
Editing and Deleting a Phonebook Entry	39
Copying and Deleting All Phonebook Entries	40
Phonebook Groups	42

CONTENTS

Editing Phonebook Groups Name	43
Phonebook Settings	44
Extra Numbers	45
CALL CENTER	46
View Call Logs	46
Call history	46
Delete Call Logs	47
Call Settings	48
Call waiting	49
Call divert	49
Call barring	49
Advance settings	50
Black list/ auto redial	50
Call time display/ Call time reminder	51
SOS SETTINGS	52
SETTINGS	55
Tone control	55
Boost function	55
Direct number	55
User profiles	57
Wall paper	59
Phone settings	59
Network settings	60

CONTENTS

Security settings	61
Restore factory setting	63
ORGANISER	64
Calendar	64
Calculator	64
Alarm	66
Bluetooth	66
Tasks	67
Stopwatch	68
OPTIONAL ACCESSORIES	69
TROUBLESHOOTING	70
SAFETY INFORMATION	73
HEARING AID INFORMATION	76
NETWORK SERVICES	77
GUARANTEE	78
RECYCLING DIRECTIVES	80

INTRODUCTION

Congratulations on purchasing your Geemarc CL8350 telephone. This telephone is also hearing aid compatible. It offers many functions such as an alarm, a calendar, SMS text messaging, a phone book, handsfree speakerphone, an automatic keylock and speed dial buttons. It has an emergency function in which five numbers can be programmed as emergency contacts and in case of emergency these contacts will be called with the flick of just one switch.

The font size on the LCD display is large and the buttons on the keypad are easy to see and use. This mobile telephone has a loud ringer and speakerphone and strong vibrating setting. All these features add up to make this a highly suitable telephone for the elderly, hard of hearing or sight people and anyone who simply wants to keep in touch with a great degree of ease.

Its is important that you read the instructions below in order to use your Geemarc telephone to its full potential. Keep this user guide in a safe place for future reference.

This guide explains how to use the following telephone:

GSMCL8350

INTRODUCTION

Unpacking the Telephone

When unpacking the telephone, you should find the following in the box:

- 1 CL8350 mobile telephone handset
- 1 Desktop charging unit
- 1 Mains power adaptor
- 1 x Li-ion rechargeable battery
- 1 User Guide



For product support and help visit our website at

www.geemarc.com


Telephone 01707 384438

Or fax 01707 832529


DESCRIPTION

General Description

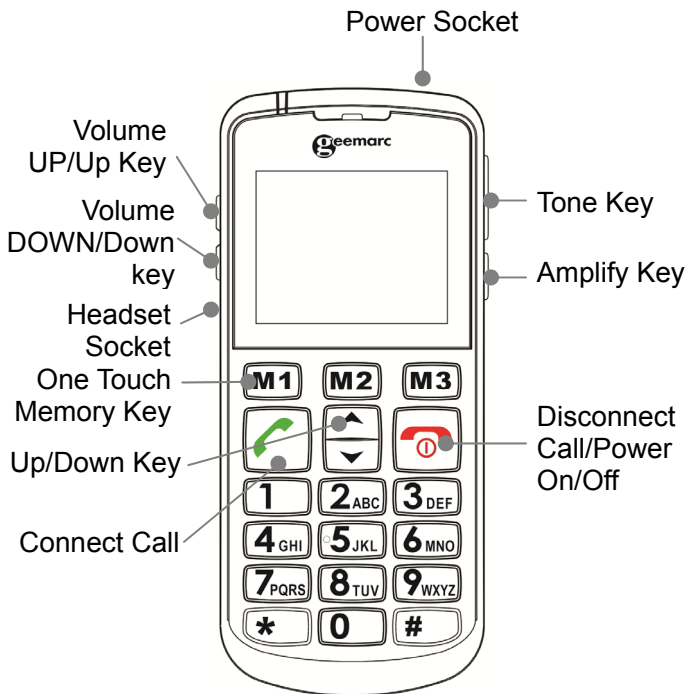

Handset Description (front)



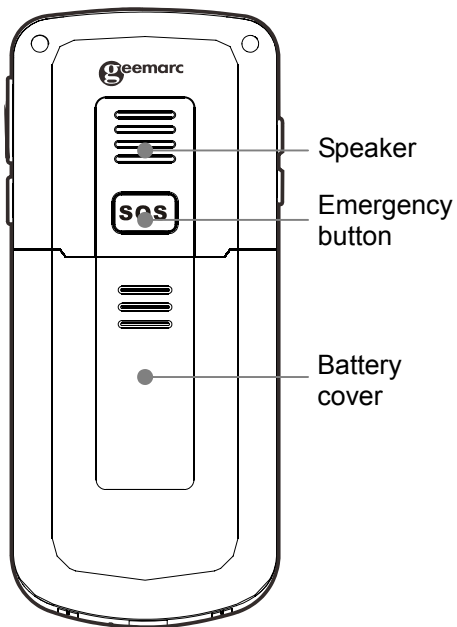


DESCRIPTION








DESCRIPTION

<p>M1 M2 M3</p>	<p>One touch dialing keys/Soft keys</p> <p>A telephone number can be assigned to each of these buttons. To dial the number all you have to do is to press the button once and the number will be dialled automatically</p> <p>M1 and M3 are also softkeys i.e. they take on different functions depending on the menu displayed. The current function is always displayed by the text directly above the key</p>
	<p>Power key/On-hook key</p> <p>Long press to power the telephone on and off End a call Cancel current process</p>
	<p>Navigation Button Up Key</p> <p>Scroll up through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up.</p>

DESCRIPTION

	<p>Increase the earpiece / speakerphone volume during a call.</p> <p>Down Key Scroll down through lists and menu options. Press this key in standby to enter a menu quickly via the shortcut settings you have set up. Decrease the earpiece / speakerphone volume during a call.</p>
	<p>Call Key Make a call after dialling the number Receive a call Enter Caller list</p>
	<p>Hash key In standby, long press(approx 3s) to lock or unlock the keypad When entering text: toggles between case and numbers.</p>
	<p>Mailbox Hold key 1 to connect to voice mailbox</p>

DESCRIPTION

	<p>Asterisk key Press this key to insert one or more symbols while composing a message or editing a phonebook entry name. Then use ▲, ▼, + and - as navigation keys to select the symbols you want to insert.</p>
	<p>Amplify Key Press this key on the right side of the phone during a conversation to amplify the volume.</p>
	<p>Tone Key Press this key on the right side of the phone during a conversation to alter the tone. There is tone control of up to 10dbm</p>
 	<p>Volume Up Key/Navigation Button +/- keys: - In standby: adjusts the volume level of the key tone - Whilst on a call -> adjusts the earpiece or Hands-free volume. This key is also used to scroll through lists of options.</p>

DESCRIPTION

LCD Screen Description

The LCD screen is split into three distinct areas:

The icon area. This is found at the top of the screen. This displays the various system icons which help you to use the telephone.

The main area. This is found across the centre of the screen. It displays the following:

- number being dialled
- caller ID information
- phonebook
- menu information
- in standby mode current time, date and service provider name

The soft key area. This is found at the bottom of the screen.



Signal Strength icon

This is always displayed when your telephone is switched on. It shows the current signal strength. More bars indicate more signal strength.



Alarm icon

Alarm is activated



New Call icon

This indicates that you have missed one or more calls. More calls have been added to the call list

DESCRIPTION



Key Lock icon

This indicates the keys are locked



Battery Status icon

This is always displayed when your telephone is switched on. It shows the level of battery charge. More bars indicate more battery charge



Message icons

A new SMS (text message) has been received

A new service message has been received



Mute icon

Mute is on



Silent icon

The telephone is in silent mode. There will be no call alert



Ring tone icon

The telephone is in ring tone mode. The call alert will be a ring tone



Vibrate icon

The telephone is in vibrate mode. The call alert will be the telephone vibrating



Vibrate followed by ring icon

The telephone is in vibrate followed by

DESCRIPTION

ring mode. The call alert will start with the telephone vibrating followed by the ringing tone



Vibrate and ring icon

The telephone is in vibrate and ring mode. The call alert will be the telephone vibrating together with the ringing tone



Headset icon

The headset is plugged in



Bluetooth icon

Bluetooth is activated

Bluetooth is connected

Menu Navigation

M1 and **M3** are softkeys i.e. they take on different functions depending on the menu displayed on the LCD. The current function is always displayed by the text above the key.

The **MENU** soft key is used to activate the menu.

The **BACK** soft key is used to go back a level in the

menu system. Press  to deactivate the menu and return to standby mode from any menu.

The **▲** and **▼** keys are used to scroll through the menu.

DESCRIPTION

The **OK** soft key is used to confirm/ select an action or choice on a screen.

Normally, the submenus and the options have the shortcut numbers. Input the shortcut number of the submenu in the list, the relevant option will be displayed.

The **+** and **-** keys on the left hand side of the telephone are also used to scroll through options within menus.

SETTING UP

Network Services

To use this mobile telephone you must subscribe to a service from a wireless service provider. Different service providers offer different features (at a variety of charges). This may effect the features made available to you through the mobile telephone.

Passwords

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use.

The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.

SETTING UP

Install SIM Card and Battery


The rechargeable battery pack is supplied with your mobile phone. Insert the battery and valid SIM card before using the phone.

Always switch the telephone off and disconnect the charger before removing/inserting the battery or SIM card. Take care when handling the SIM card. The SIM card and its contacts can be easily damaged by scratches or bending.

To remove the battery compartment cover, press down and slide the cover off completely.


Remove the battery (if battery already inside)

Slide the SIM card with the gold coloured contacts face down into the SIM card holder.

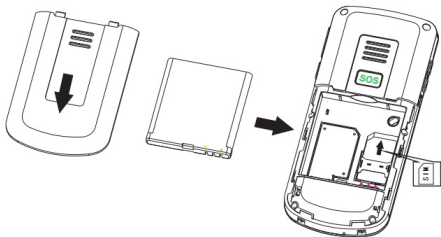

SETTING UP

Observe the battery contacts (the gold coloured contacts must face towards the bottom right).and insert the battery.

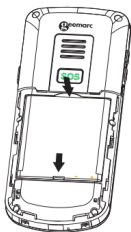

Slide the back cover back into place.

Charging the battery

Charging via the Charging Unit


Plug the charger into a wall socket.

Connect the lead from the charger into the the socket on the back of the charging unit.

Place the mobile telephone onto the charging unit. The battery indicator on the LCD will fill and empty whilst charging.

When the battery is fully charged, the indicator will remain full and stop flickering.

SETTING UP

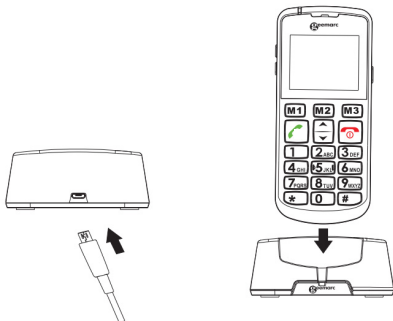

Note: Only use batteries and chargers supplied with the telephone. The guarantee will be invalid if an unapproved cable is used. Keep the battery contacts clean and free of dirt. Try and avoid removing the battery as this could short circuit the battery.

If the battery is completely discharged, it may take a few seconds before the charging indicator appears on the display or before any calls can be made (the telephone may be used during the charging process)

Before the handset can be used, the battery must be charged for a minimum of 4 hours.


After inserting the SIM card and charging the battery, the mobile will search the registered network or any other

SETTING UP

available networks. Once connected, the name of network supplier will show in the middle of the LCD.

Note: If **'emergency call only'** is displayed on the LCD, you are out of range for a network service. However, you can still make emergency calls according to the signal strength.

Battery Use

The  icon is continuously displayed at the top right corner of the LCD display. The icon indicates the level of battery power. The more bars displayed, the more power available.




When the battery charge is low, a warning message will be displayed **'Charge the battery'**. The back lighting and certain other functions may cease to work. When the battery is too weak for the telephone to operate, the handset will automatically switch off.

The battery talk and standby times are subject to change. Replace the battery when its power has deteriorated noticeably.


SETTING UP

Switching On/Off

Press  for 3 seconds or longer to switch the telephone on.

WELCOME will be displayed on the LCD (dependant on settings).


If no SIM card has been inserted, **LIMITED SERVICE** will be displayed. Only emergency calls can be made until the SIM has been inserted.

Press  again for 3 seconds to switch the telephone off. **GOODBYE** will be displayed then the display disappears (dependant on settings).

USING THE TELEPHONE

Standby Mode

When the telephone is ready for use and you have not entered any characters, the telephone is in standby mode. You can set the telephone to standby mode

by pressing .


Energy Saving Mode

Your telephone has an energy saving mode in order to save battery power in the standby mode when no keys are pressed. The display will switch off. Press any button to re-activate standby.

Making a Call

Dial the number on the keypad.

Press **CLEAR** soft key to delete an incorrect digit

Press , the number is automatically dialled

To end the call simply press




To place an international call you need to press a „+“ before the country code, which you get by pressing

USING THE TELEPHONE


the „*“ key twice. Some foreign telephone networks have extension lines that cannot be dialled as dial-through, but need to be entered by the keypad. To dial these directly, press the „*“ key quickly three times in a row after the telephone number. The „p“ character appears and then you can enter the dial extension.


Making a Call from the Call List

You can find numbers dialled, received or missed in the call list.

Press  to access the Call List

Use ▲ and ▼ to scroll through the call list

Press , the number is automatically dialled

To end the call simply press 


Making a Call from the Phone Book

If you have stored numbers in the phone book, you can dial numbers using the phone book.

Press **Names** soft key to activate the Phone book

USING THE TELEPHONE

Use ▲ and ▼ to scroll through the phonebook or type in the first letter of the name required and your search will be filtered to all contacts starting with that letter. If you type the second letter of the contact, your search will be further filtered to all contacts starting with those two letters etc

Press , the number is automatically dialled

To end the call simply press



Making a Call using Quick Dial

If you have stored numbers in the quick dial location, long-press either **M1**, **M2** or **M3** (dependant on who you wish to ring) for 3 seconds. The chosen telephone number will be dialled automatically.

Receiving a Call

When an incoming call is received the telephone rings and/or vibrates. The caller's telephone number will be displayed. If this caller's number is stored on the Phonebook, the associated name will be displayed

USING THE TELEPHONE

Press  to answer


To end the call simply press



An alternative way to answer is press **Answer** to answer.

Rejecting a Call

When an incoming call is received the telephone rings. The caller's telephone number will be displayed. If this caller's number is stored on the Phonebook, the associated name will displayed

To reject an incoming call, simply press  or
SILENT then **REJECT**

Note: if the headset is inserted, you can receive the call with headset. If auto answer function is on, and the headset is inserted, the call will be auto answered after 2 seconds

USING THE TELEPHONE

Hands Free

You can turn on the speakerphone built into the telephone during a call. In this mode there is no need to hold the handset. You will hear the third party through the speaker and the microphone will pick up your voice.

During a call, press **H-FREE** soft key

To switch hands free off, press **H-HELD** soft key

End Single Call

You can end the call if required

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to
select
END SINGLE CALL

Select the **OK** to confirm

USING THE TELEPHONE


Start a New Call

You can make a second call while your initial call is placed on hold (if your service provider allows)

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to
select
NEW CALL

Dial the number on the keypad.

Press , the number is automatically dialed

Phonebook

You can browse the phonebook during a call

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to
select
PHONEBOOK

Use the phonebook as described in the
phonebook chapter

USING THE TELEPHONE

Write an SMS

You can write/edit an SMS during a call

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to
select
MESSAGES

Write or edit an SMS text

Mute Function

If you wish, you can speak privately to someone else in the room with you without your caller overhearing. You will still be able to hear the caller but they cannot hear you during the mute operation.

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to
select
MUTE. This can be toggled on or off.

Select either the **On** or **Off** Soft key to
activate/deactivate the mute

USING THE TELEPHONE



DTMF Tones

During a call, press **OPTION** soft key

Use ▲ and ▼ to scroll through the menu to select **DTMF**

Select either the **On** or **Off** Soft key to activate/deactivate the DTMF tones

Receiving Volume and Tone

During a conversation, the  and  keys on the left or the up and down navigation keys will adjust the ear piece volume level. Alternatively, press the **Boost** key to switch amplify on/off. There are three tone settings: soprano/bass/alt. Base is the default setting. You can toggle between these settings using the **TONE** key on the right hand side of the telephone.

Call Timer

Your handset automatically times the duration of every external call. The time is shown during the call and for a few seconds after the call has ended.

MESSAGES

Send a Text Message

A text message using this telephone can contain up to 160 characters, this includes spaces.

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
MESSAGES

Press **OK** soft key to select

Press **OK** soft key to select **WRITE MESSAGE**

Enter the text message using the numeric keypad
(see Phone book Chapter about entering text
using the numeric keypad)

Press **OPT** soft key. If you wish to insert
templates, name or phone number – now is the
time to do it.

1) Select **SEND TO** followed by **OPT** soft key.
Dial the number or **SEARCH** for required number
using the Phone book

2) Select **SAVE to drafts** followed by **Select**
soft key. Dial the number or **SEARCH** for

MESSAGES

required number using the Phone book. The text is saved in the **OUTBOX**

While you are writing your message, you can press the # key to switch the input method.

Receiving a Text Message (Inbox)

On receiving a text, a ringing tone will be audible (see Profiles Chapter on how to set ring tone). **NEW MESSAGE UNREAD** will be displayed on the LCD.

Press **VIEW** soft key to display the message

Reviewing Stored Text Messages (Inbox)

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select **MESSAGES**

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select **INBOX** (received text messages are stored in the Inbox)

Press **OPTION** soft key to see all the options

MESSAGES

available that can be performed on this selected text message.

These options include **VIEW, REPLY, ADVANCED, CALL SENDER, FORWARD, DELETE, COPY, MOVE TO PHONE, DELETE ALL, COPY ALL, MOVE ALL**

Outbox

You can check the messages you have saved in the outbox. These may be sent or unsent. Options available are View, Resend, Delete, Edit, Delete all Advanced, Copy to phone, Move to phone, Copy all, Move all.

Templates

You can set some common templates for ease of use. You can create a new template or edit or delete existing templates.

SMS settings

SIM card: you have the possibility to set the Validity Period, message type, delivery report, replay path and the voicemail server number.

Save sent message

Memory status

Preferred storage

MESSAGES

Voicemail Server

Any voicemails you may have received are saved on the network. You have to dial the number of the mail box to access your voicemail messages. You can enter the voicemail mail box number via this Voicemail Server option. You could access at your Voice mail server in press and hold the key one for 3 seconds.

PHONEBOOK

Telephone numbers and names can be stored in the phonebook. This is held both on the SIM and in the phone memory. If you are storing the contact details on the phone you can also store other details such as home number, office number, caller ringtone.

Phonebook allows you to store frequently used numbers so that you can easily make a call without having to remember or enter the telephone number. You can search and recall numbers in order to make a call, create a message or use an entry as an emergency contact. The phone book in the phone memory can contain 300 entries. If you try to add a new entry when all the memory is filled, a warning message will be displayed. You will need to delete an existing entry in order to add the new telephone number. The contacts saved in the SIM card memory are indicated by **SIM** (capacity of the SIM storage depends on the SIM itself). The advantage of saving to SIM means you can transfer the information to another telephone (the capacity of the SIM will depend on the SIM being used).

PHONEBOOK

Create a Phonebook Entry

Press **NAMES** soft key to activate the
Phonebook

Press **OPTIONS** and use ▲ and ▼ to scroll
through the menu to select
ADD NEW CONTACT

Press **Select** soft key to select
Option to Save to Sim or
Phone

Enter the name using the numeric keypad

Use ▲ and ▼ to scroll through the menu to
select the next field of information to enter e.g.
NUMBER

Enter the number using the numeric keypad
(always include the local area code)

Press **Options** soft key

Use ▲ and ▼ to scroll through the menu to
select
Save or Cancel

PHONEBOOK

Press **Select** soft key to confirm

If saving the contact to phone, continue through the menu until all relevant information has been entered home number, office number and the caller ringtone. The numeric keypad also has characters printed on the keys. These characters are used for entering text for the purposes of phonebook entry and modification, SMS text writing and when searching for contacts in the phone book.

Press each key the relevant number of times to get the letter you need e.g. to get the letter J, press the 5 key once, to get the letter S, press the 7 key four times in quick succession.

To move on to the next letter, wait a few seconds and the cursor will appear | after the last letter you entered. You may now enter the next letter. To switch between different input modes e.g. upper and lower case and numbers, use the # key.

Press 0 to insert a space.

You can add punctuation and special features by pressing *. Use ▲ and ▼ and + and – or the keys 2/4/6/8 to scroll through the list and press **OK** to select and insert.

PHONEBOOK

Character Map

Key	Characters	Key	Characters
1	.,-?!'@:#\$/_1	6	MNO6
2	ABC2	7	PQRS7
3	DEF3	8	TUV8
4	GHI4	9	WXYZ9
5	JKL5	0	Space 0

Create a Phonebook Entry from Standby

Enter the number using the numeric keypad
(always include the local area code)

Press **OPTIONS** soft key

Use ▲ and ▼ to scroll through the menu to
select **Save to Phonebook**

Press **Select** soft key to select

Use ▲ and ▼ to scroll through the menu to
select memory location, either **TO SIM** or **TO
PHONE**

Press **OK** soft key to select

Enter the name using the numeric keypad

PHONEBOOK

If storing to the phone memory, continue through the menu until all relevant information has been entered home number, office number and Caller ringtone

Press **OPTION** and select **Save**

View Phonebook Entries

This method will place you in the phonebook list as near as possible to your search criteria.

Press **MENU** followed by **PHONEBOOK** soft keys or via the shortcut

Type in the first letter of the name required and your search will be filtered to all contacts starting with that letter. If you type the second letter of the contact, your search will be further filtered to all contacts starting with those two letters etc

PHONEBOOK

Editing and Deleting a Phonebook Entry

Press **MENU** followed by **PHONEBOOK** soft keys or via the shortcut **NAMES**

Type in the first letter of the name required and your search will be filtered to all contacts starting with that letter. If you type the second letter of the contact, your search will be further filtered to all contacts starting with those two letters etc

Press **OPTIONS** soft key

Options available to be performed on that contact record are as follows:

CALL

VIEW

Send text message

EDIT

DELETE – delete the entry

COPY (SIM < --- > Phone)

MOVE (SIM < --- > Phone)

Speed dial: Quick dial setting for the keys 2 to 9

Add to block list: add the phone number at

PHONEBOOK

the block list
Caller groups

Perform the option and then confirm

Copying and Deleting All Phonebook Entries

Press **MENU** followed by **PHONEBOOK** soft keys or via the shortcut **NAMES**

Press **OPTIONS** soft key to select

Use **▲** and **▼** to select **Phonebook settings** and select either:

DELETE ALL CONTACT – delete all entries
(SIM or phone)

COPY CONTACTS – copy all entries (SIM or
phone)

Perform the option and then confirm

Speed dial

There are 8 other speed dial numbers (keys 2-9 on the numeric keypad).

PHONEBOOK

Press soft keys **NAMES** and press **OPTIONS**

Use ▲ and ▼ to scroll through the menu to select
SPEED DIAL

Scroll to Speed Dial

Use ▲ and ▼ to scroll through the menu to select
SET NUMBER

Press **OK** soft key

Use ▲ and ▼ to scroll through the list to select the
quick dial location 2,3,4,5,6,7,8,9,

Press **OK** soft key to select **EDIT**
Choose **From Phonebook** and press **Select**

Use ▲ and ▼ to scroll through the phone book to
find the required telephone number

Press **OK** soft key to confirm

PHONEBOOK

Phonebook Groups

You can place phone book contacts into groups.
These groups can be assigned different ring tones.

Press **MENU** followed by **PHONEBOOK** soft keys or via the shortcut **NAMES**

Press **OPTIONS** and
Use ▲ and ▼ to scroll through the menu to select
CALLER GROUPS

Press **Select** soft key to select and choose **Add new group** then **OK**

Enter Name a group that you wish to add the contact to e.g.FAMILY.
Options - Save
Choose the Caller ringtone for the Group with the keys 4 and 6
After Pressing 2 – Details

Press **OPTIONS** followed by **SAVE** soft key to confirm

Choose the Group and press **OPTIONS** to select

PHONEBOOK

Use ▲ and ▼ to scroll through the menu to select
View MEMBERS

Press **ADD** soft key to select

Use ▲ and ▼ to scroll through the menu to select
OK (if there are no members in this group only the
ADD option is available, you will not have to take
OPTIONS)

Select a contact from the phone book (**from
phone memory**) and add it to the group..

Editing Phonebook Groups Name

Press soft keys **NAMES** and press **OPTIONS**

Use ▲ and ▼ to scroll through the menu to select
CALLER GROUPS

Press **Select** soft key to select

Use ▲ and ▼ to scroll through the menu to select
the type of group you wish to modify e.g.FAMILY

Press **OPTIONS** soft key to select

PHONEBOOK

Press **GROUP SETTINGS** soft key to edit the name

Use the numeric keypad to change the group name or the Caller Ringtone

Press **OPTIONS** followed by **SAVE** soft key to confirm

Phonebook Settings

Press soft keys **NAMES** and press **OPTIONS**

Use ▲ and ▼ to scroll through the menu to select **PHONEBOOK SETTINGS**

Press **SELECT** soft key to select

The following settings are available

- PREFERRED STORAGE** (SIM card, Phone support or both)
- MEMORY STATUS**
 - Owner Number** (4 extra numbers)
 - Copy contacts** (Copied all the contact from SIM card to Phone memory or reverse)

PHONEBOOK

Move contacts (Moved all the contact from SIM card to Phone memory or reverse)

Delete all contacts (Deleted all the contact from SIM card to Phone memory)

Extra Numbers

Press **MENU** followed by **PHONEBOOK** soft keys or via the shortcut **NAMES**

Use **▲** and **▼** to scroll through the menu to select **PHONEBOOK SETTINGS**

Press **SELECT** soft key to select

Select **OWNER NUMBER** and press **OK**
Choose the memory, enter the Name and the phone number and press **OK** to save

CALL CENTER

View Call Logs

Information about all calls is stored on this telephone. These calls include:

Missed calls

Dialled calls

Received calls

Delete call

Up to 20 numbers can be held in each log.

Call History

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
CALL CENTER

Press **OK** soft key to select

Press **OK** soft key to select **CALL HISTORY**

CALL CENTER

Use ▲ and ▼ to scroll through the menu to select either **MISSED CALLS** or **DIALLED CALLS** or **RECEIVED CALLS** or **Delete call logs**

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the list to select a call

Press **Options** soft key to select and choose the functions **View, Call, Send text message, add to block list, edit before call, delete**

Information about the call will be displayed e.g. name, number, date and time

Delete Call Logs

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
CALL CENTER

Press **OK** soft key to select

CALL CENTER

Press **OK** soft key to select **CALL HISTORY**

Use **▲** and **▼** to scroll through the menu to select **DELETE CALL LOGS**

Press **OK** soft key to select

Use **▲** and **▼** to scroll through the menu to select either **MISSED CALLS, DIALLED CALLS** or **RECEIVED CALLS** or delete **ALL CALLS**

Call Settings

There are a number of call settings. You can access the call settings as shown below followed by a description of each call setting available.

Press **MENU** soft key to activate the menu

Use **▲** and **▼** to scroll through the menu to select **CALL CENTER**

Press **OK** soft key to select

CALL CENTER

Use ▲ and ▼ to scroll through the menu to select
CALL SETTINGS

Use ▲ and ▼ to scroll through the menu to select either, **CALL WAITING**, **CALL DIVERT**, **CALL BARRING** and **ADVANCED SETTINGS**

Press **OK** soft key to select

Call Waiting

Call waiting can be activated or deactivated. Please check that this service is available from your service provider. You can **QUERY STATUS** to find out if your service provider offers this service.

Call Divert

Incoming calls can be diverted to a specified telephone number (voicemail number generally). There are 5 options available with this function:

- Divert all voice calls: call divert in all conditions.
- Divert if unreachable: call divert when you cannot be contacted
- Divert if no answer: call divert when there is no answer

CALL CENTER

- Divert if busy: call divert when the line is busy
- Divert all data calls: call divert when it is data calls
- Cancel all divers: cancel all the call divert

Call Barring

Incoming and outgoing calls to and from your phone can be limited. There are 2 options available with this function:

- Bar all outgoing calls
3 options available:
All voice calls
International voice calls
International voice calls except to home
- Bar all incoming calls

You can cancel all barring (the password is required for this). The password by default is 1122.

Advance Settings

- Black list: Set the numbers you don't want to answer in the black list, you can specify up to 20 numbers
- Auto redial: If this setting is activated, when you make a call but cannot get through as the other line is engaged, your telephone will automatically redial this number after a certain amount of time.

CALL CENTER

This will take place provided you have not cancelled the call.

- Call time display: whether to display the call duration.
- Call time reminder: You can estimate the call duration accurately by activating the prompt. There are 3 options, off, one sound and sound periodically.

SOS SETTINGS

Once you have pressed the SOS button at the back of the phone for 2-3 seconds, an alarm will be set off instantly. Meanwhile, the phone will make calls automatically to the predefined emergency contacts one by one. The moment the phone is connected, the alarm will stop immediately, and the conversation can begin.

Once connected, there will be a pre-recorded voice message as follows: "this is emergency call, Please press "0" to make sure."

If "0" is pressed, a conversation can begin. Alternatively it will conclude after 30 seconds and the next number on the list will be dialled until one person press on the key 0.

When your helper presses "0" once connected, it will dial this cycle number after hook off. If he presses another "1" or "2", it will conclude this cal after 30 seconds. After calling, it will send messages to preset emergency contacts one by one (send out the phone position coordinates).

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
SOS SETTINGS

Press **OK** soft key to select

SOS SETTINGS

SOS Settings

SOS mode setting

There are 3 modes:

Set 5 numbers: The SOS function use the 5 SOS numbers to contact the different persons.

Set call center: the SOS function use the call center number for the SOS function

OFF: The SOS function is deactivating.

Set SOS Numbers

A maximum of five SOS numbers can be set.

Press **EDIT** function key and choose **From Phone book** to select one contact else choose **Edit Number** to enter directly the phone number of the contact.

Call center number

Enter the call center phone number and press **OK** to confirm.

Set outgoing voice MSG

You have the possibility to choose to use the emergency message of the Phone or your personal vocal message

Default: If you choose the menu **Select**, the SOS message of the phone is selected.

Play: You can listen the message selected

SOS SETTINGS

User recorded

You have the possibility to:

Select: You select the personal SOS message

Record: function to record one personal SOS message

Play: Function to listen the message

Delete: Function to delete the SOS personal message

Record SOS message

You have the possibility to record one SOS message from 20 seconds maximum.

Press the key **M2** to start the recording, during the recording you can press the key **M2** to have a pause. If you press on the key M1, you continue the recording, M3 to stop the recording and save the new SOS message.

SETTINGS

Tone control

You have the possibility to set your phone with a tonality normal, with more low frequency (more bass) or more high frequency (more treble)

Boost function

You have the possibility to activate or deactivate the boost function automatically when you are on a call

Direct number

Telephone numbers from the phone book can be stored at any of the three quick dial locations (**M1**, **M2** and **M3**). To dial a quick dial telephone number, simply press and hold the required memory button.

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
SETTINGS

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select
DIRECT NUMBER

SETTINGS

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select
M1/M2/M3 SETTING

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the list to select the
quick dial location 1,2 or 3

Press **OK** soft key and select **EDIT** when you are
on the line **phone number** and choose **From
phonebook**

Use ▲ and ▼ to scroll through the phone book to
find the required telephone number

Press **OK** soft key to confirm and press on the soft
key **YES** to confirm the saving

SETTINGS

User profiles

The mobile is supplied with four profiles. Each profile has a number of settings which are configurable. Therefore you can set up a profile for different contexts e.g. outdoor profile would have a louder ring than general, meeting profile will have no ring but will vibrate on receiving a call etc.

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select

Settings - USER PROFILES

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select a profile. Options available are **GENERAL, , SILENT, MEETING, OUTDOOR.**

Press **OPTIONS** soft key to select

Use ▲ and ▼ to scroll through the menu to select either **ACTIVATE** or **CUSTOMIZE**. If you choose **CUSTOMIZE** see below for list of customizable features.

SETTINGS

Incoming call: for Incoming calls (up to 10 melodies available)

Ring tone volume: volume for Ringtone

Message Tone: For the receiving from one SMS

Message volume: Volume level to receive a SMS

Alarm tone: 10 melodies available for the function Alarm

Alarm volume: Volume of the Alarm function

Keypad: 4 possibilities (**Silent**, **Click**, **tone** or **Talking**)

Key tone volume: Volume for the Key tone function.

Power On: animation shown when you switch your mobile telephone on

Power Off: animation shown when you switch your mobile telephone off

System alert: Switch On/Off the tones for Warning, Error, Camp On, Connect

SETTINGS

Alert Type. The options available are Ring Only, Vibrate Only, Vibrate and Ring, Vibrate then ring

Ring Type. The options available are **Beep once** and **Repeat**

Wallpaper

Select from 10 images for standby mode.

Phone settings

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
SETTINGS

Press **OK** soft key to select

Press **OK** soft key to select **PHONE SETUP**

Time and Date

Set Time Zone: Select your city

Set Time/ Date: Set the current date and time using
the numeric keypad.

Schedule Power On/Off

SETTINGS

You can set 4 different time for the phone to switch on or off automatically

Language

You can choose from 12 languages.

Preferred Input Method

You can choose from 6 text input methods.

LED Mode

You have 3 modes for the LED

ON, always activate

Off: always turn off

Night mode: doesn't work the night

LCD backlight

Brightness: You can adjust the illumination level with



TIME: you can specify how long to wait before the screen saver is displayed: 5sec/15 sec/30 sec/1 minute

Network settings

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select

SETTINGS

SETTINGS

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select
NETWORK SETTING

Press **OK** soft key to select

New search: to find the different network accessible

Select network: display the networks found

Selection mode: 2 modes, **Automatic** and **Manual**

Security settings

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
SETTINGS

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select
SECURITY SETTINGS

SETTINGS

Press **OK** soft key to select

This mobile telephone allows you to set up passwords to help protect your telephone from unauthorized use. The PIN and PIN2 codes are supplied with your SIM card. The PIN code helps to protect the SIM card from unauthorized use. The PIN2 code is required to access certain services.

The PUK and PUK2 codes may be supplied with the SIM card. If you enter the PIN code incorrectly three times in succession, the PUK will be required. If the codes are not supplied, contact your service provider.

SIM security

SIM lock

The SIM lock (PIN) can be switched on or off. To switch on, the Code PIN is required.

Change Password

Change the password for the PIN code

Auto keypad lock

You can select between no keypad lock or lock switched on after standing idle for either 5 seconds, 30 seconds, 1 minute or 5 minutes.

SETTINGS

Restore factory setting

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
SETTINGS

Press **OK** soft key to select

Use ▲ and ▼ to scroll through the menu to select
RESTORE FACTORY SETTINGS

Press **OK** soft key to select

If you choose to reset the handset to restore the initial settings, all the user

selectable features are restored to the factory setting



Note: The default password is 1122; please change it to your own personal password as soon as possible.

ORGANIZER



Calendar

You can review the calendar and move to a certain date quickly.

Press the ▼ button down

To move daily/ right and left, press  / .

To move weekly/ up and down, press ▲ / ▼.

To move monthly, press  .

You can check or edit an event scheduled for an appointed date.

- View: check or edit the event.
- View all: look at all scheduled events
- Add event: add new event
- Delete event: delete all/ delete certain events
- Jump to date: skip to the appointed date to check or edit the event
- Go to today: You select directly the date of the day.

Calculator

There is a calculator on the telephone. This is operated via the numeric keypad.


ORGANIZER

Press **MENU** soft key to activate the menu

Use ▲ and ▼ to scroll through the menu to select
ORGANIZER

Press **OK** soft key to select

Press **OK** soft key to select **CALCULATOR**

Enter the first number using the numeric keypad
(use  to insert a decimal point)

▲ is +

▼ is -

 is ×

M1 is =

M2 is ÷

Enter the second number using the numeric keypad

Note: Press **CLEAR** soft key to clear the last digit.
Press and hold **CLEAR** soft key to clear the display completely.

ORGANIZER

Alarm

You can set up to 5 alarms. Each with the following settings:

Press Edit soft key:

- On/Off
- Alarm time
- Alarm Repeat: once, everyday or custom.
- Snooze: choose from 1 to 10 minutes.
- Alert type: ring only, vibration only, ring and vibration,
- When an alarm rings, if you do not switch it off or snooze is on, the alarm will ring again after 4 minutes. This will happen 3 more times and then the alarm will stop.

Bluetooth

This phone can be connected with a Bluetooth device which is in the range of 10m.

- Bluetooth activation: on/off
- Visibility: on/off
- My device: The name of audio device will be displayed after pairing.
- Search audio device: activate Bluetooth and the headset before entering this menu, and then begin to search for audio device. You will be asked to input the password of headset. And then you can use Bluetooth for talking after pairing.

ORGANIZER

Note: the password is different for each factory; please refer to the Bluetooth manual for the detail.

- My name: device name
- Advanced:
- My address: Address of the phone
- Audio path: Leave in the phone or transfer to the audio device about

Tasks

In one tasks, you have the possibility to enter the information (Date/Hour, subject, Alarm (On, Off, 5 min before, 10 min before, 15 min before, 30 min before, custom), Repeat (Once, Every day, custom, weekly, monthly, yearly), priority (Low, high, medium), Details, Status (undone, done)

Check all the tasks saved and edit them as follows:

- View: view the selected task details
- Add: add a new task
- Edit: edit the task
- Delete: delete the task
- Delete overdue: delete the overdue tasks
- Delete all: delete all tasks
- Jump to date: skip to view or edit the designated date of schedule
- View uncompleted: Display all the uncompleted file
- Send vCalendar: send the task out through a message, Bluetooth, or save it to the folder

ORGANIZER

Stopwatch

There are two timing functions:

- Split Timing: Maximum of 20 split timings for each record.
- Lap Timing: Maximum of 20 lap timings for each record
- View records: enter to check the timing record.

To clear the stopwatch, press STOP first, and then press RESET key to clear it.

OPTIONAL ACCESSORIES

Wired headset with microphone and one touch receive call button

- Bluetooth Headset

TROUBLESHOOTING

Telephone cannot be switched on

- Check battery is inserted and check that it is inserted correctly

Nothing appears on the display

- Check the handset is switched on
- Check the battery and SIM are inserted correctly

Display is locked when the telephone is switched on

- Enter the PUK to unlock the SIM

No signal icon is displayed

- There is no network connection. Move around to try and get to an area where there may be coverage
- Contact your service provider

Message to say that a function is not possible

- Your service provider might not provide the function in question or you may need to subscribe to that service. Contact the service provider.

No display during the charging process

- The battery charge is very low. Wait a few minutes.

“Insert Sim” or “Limited Service” message is displayed

- Ensure the SIM is inserted correctly

The battery is discharged quickly or cannot be charged at all.

- Charge the battery for 4 hours

TROUBLESHOOTING

- Place the phone correctly in the charging unit or connect the charging unit properly. Clean the contact surfaces on the mobile phone and charging unit with a soft, dry cloth.
- Try a new battery

Failure to link to the network

- The signal is too weak, or there may be some radio interference
- Is the SIM card installed incorrectly or damaged? If the SIM card is damaged, please ask your service provider for a replacement.

Cannot make a Call

- Is the SIM card registered to the network
- Is the bar outgoing calls feature enabled
- There may be a problem with the network, call your service provider
- Check the service provider number, local area number or NMC number (see Handset Settings)

Cannot answer a call:

- Is the bar incoming calls feature enabled
- Is the call diverting function enabled

The keys appear to be locked

- Power the phone off and then on
- Unlock the keylock

Caller Number is not displayed

- Ensure you have subscribed to the Caller ID service. Contact your service provider

TROUBLESHOOTING

- The caller may have withheld their details
- Let the phone ring a few times as there may be a delay in receiving the Caller ID information

Any problems not referred to above

- Check through the User Guide
- Power off and then on again. Check to see if the problem persists

SAFETY INFORMATION

General

Only use the power supply included with the product.

Only use the approved rechargeable battery supplied.

Do not open the handset (except to replace the handset batteries) or base. Contact the helpline for all repairs.

Never dispose of batteries in a fire. There is a serious risk of explosion and/ or the release of toxic chemicals.

If you are sure you are not going to use the telephone for over a month, remove the battery

Cleaning

Clean the telephone with a soft cloth. Keep the base and handset charging contacts clean. Never use polishes or cleaning agents - they could damage the finish or the electrics inside.

Environmental

Do not expose to direct sunlight.

Always ensure there is a free flow of air over the surfaces of the telephone.

SAFETY INFORMATION

Do not place any part of your product in water and do not use it in damp or humid conditions e.g. bathrooms. Do not expose your product to fire or other hazardous conditions.

The telephone is designed for working within a temperature range of -20°C to 60°C.

Usage

In summary, read these simple guidelines. Not following them may be dangerous or illegal.

SWITCH ON SAFELY

Do not switch the device on when wireless phone use is prohibited or when it may cause interference or danger.

ROAD SAFETY COMES FIRST

Obey all local laws. Always keep your hands free to operate the vehicle while driving. Your first consideration while driving should be road safety.

INTERFERENCE

All wireless devices may be susceptible to interference. This could affect performance.

SWITCH OFF IN HOSPITALS

Follow any restrictions. Switch the device off near medical equipment.

SWITCH OFF IN AIRCRAFT

Follow any restrictions. Wireless devices can cause interference in aircraft.

SWITCH OFF WHEN REFUELLING

SAFETY INFORMATION

Do not use the device at a refueling point. Do not use near fuel or chemicals.

SWITCH OFF NEAR BLASTING

Follow any restrictions. Do not use the device where blasting is in progress.

USE SENSIBLY

Use only in the normal position as explained in the product documentation.

BACK-UP COPIES

Remember to make back-up copies or keep a written record of all-important information.

CHARGING

Do not use the telephone during charging

HEARING AID INFORMATION

Some phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies. When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate. The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box. The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

NETWORK SERVICES

To use the phone you must have service from a wireless service provider. Many of the features in this device depend on features in the wireless network to function. These network services may not be available on all networks or you may have to make specific arrangements with your service provider before you can utilize network services. Your service provider may need to give you additional instructions for their use and explain what charges will apply. Some networks may have limitations that affect how you can use network services. For instance, some networks may not support all language-dependent characters and services.

Your service provider may have requested that certain features be disabled or not activated in your device. If so, they will not appear on your device menu. Your device may also have been specially configured. This configuration may include changes in menu names, menu order and icons. Contact your service provider for more information.

GUARANTEE

From the moment your Geemarc product is purchased, Geemarc guarantee it for the period of two year. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our help line or visit our website at www.geemarc.com. The guarantee does not cover accidents, negligence or breakages to any parts. The product must not be tampered with or taken apart by anyone who is not an authorized Geemarc representative. The Geemarc guarantee in no way limits your legal rights.

IMPORTANT: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF AWARRANTY CLAIM.

Please note: The guarantee applies to the United Kingdom only

DECLARATION: Geemarc Telecom SA hereby declares that this product is in compliance with the essential requirements and other relevant provisions of the Radio and Telecommunications Terminal Equipment Directive 1999/5/EEC and in particular article 3 section 1a, 1b and section 3. The telephone does not operate if the line current is lower than 18 mA.

The declaration of conformity may be consulted at www.geemarc.com



GUARANTEE

Electrical connection: The apparatus is designed to operate from a 230V 50Hz supply only. (Classified as 'hazardous voltage' according to EN60950 standard). The apparatus does not incorporate an integral power on/off switch. To disconnect the power, either switch off supply at the mains power socket or unplug the AC adaptor. When installing the apparatus, ensure that the mains power socket is readily accessible.

RECYCLING DIRECTIVES

The WEEE (Waste Electrical and Electronic Equipment) has been put in place for the products at the end of their useful life are recycled in the best way.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Remove the batteries and deposit them in an appropriate WEEE skip. Deposit the product in an appropriate WEEE skip.

- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

Thus if you respect these instructions you ensure human health and environmental protection.



For product support and help visit our website at

www.geemarc.com

Telephone 01707 384438

Or fax 01707 832529



UGCL8350_En_v1.6

geemarc UNITED KINGDOM

5 Swallow Court
Swallowfields
Welwyn Garden City
Hertfordshire, AL7 1SB
For product support,
01707 384438

www.geemarc.com

geemarc FRANCE

Parc de l'Etoile
2, rue Gallée 59791
GRANDE SYNTHÉ CEDEX
TEL. SERVICE APRES VENTE,
03 28 58 75 99

www.geemarc.com