

4G WIRELESS ADAPTOR MANUAL

INSTRUCTIONS



DIRECTORY

- 1. Overview4
- 2. Installation of your telephone adaptor6
- 3. Telephone adaptor Introduction7
 - 3.1. LED “ON” Status Identification 7
 - 3.2. Port & Button Identification8
- 4. Using your phone with the telephone adaptor9
 - 4.1 Locate your telephone adaptor9
 - 4.2 Using your computer with the telephone Adapter
- 5. Pairing your device by Wi-Fi 10
- 6. Quick settings 12
 - 6.1. Basic Functions12
 - 6.2. Settings13
 - 6.2.1 User settings 13
 - 6.2.2 Internet connection 14
 - 6.2.3 Wireless settings 16
 - 6.2.4 Device placement guidelines 18
 - 6.2.5 Dashboard 19
- 7. Full settings 20
 - 7.1. Internet20
 - 7.1.1 Internet connection 20
 - 7.1.2 Pin management 20
 - 7.1.3 Manual network 21
 - 7.1.4 USSD 21
 - 7.1.5 APN Settings 22
 - 7.1.6 Band Selection 22
 - 7.2. Home Network settings23
 - 7.2.1 DHCP settings 23
 - 7.2.2 Connected devices 24
 - 7.2.3 Network activity 24

7.2.4 Custom firewall rules	25
7.2.5 Port Filter	25
7.2.6 Port forwarding	25
7.3. SMS settings	26
7.3.1 Display the message received	26
7.3.2 Display the message sent	26
7.3.3 Create a new message	27
7.3.4 Display the draft message	27
7.3.5 Settings of the SMS	28
7.4. Wi-Fi settings	29
7.4.1 Wireless settings	29
7.4.2 Wireless security settings	30
7.4.3 Wireless MAC filter	30
7.5. Router management	32
7.5.1 User management	32
7.5.2 Configuration management	32
7.5.3 Software management	33
7.5.4 Reboot CL2100	33
7.5.5 Power off CL2100	33
7.5.6 Time setting	34
8. Troubleshooting	35
9. Guarantee	36
10. UKCA & CE declaration	36
11. WEEE declaration	37
12. Technical specifications	37

OVERVIEW

1. OVERVIEW

This 4G LTE Telephone Adapter has a telephone landline RJ11 socket to allow you to connect a phone for voice calls via a 4G mobile network. It also provides high-speed internet access by Wi-Fi or by the connection LAN of your computer. You can use it anywhere inside your house where a reliable 4G network is available.

Telephone adaptor Information:

- The telephone adaptor is equipped with a 4G ASR communications module and provides 2.4GHz Wi-Fi for voice and data transfer.

LTE-FDD: B1 / 3 / 5 / 7 / 8 / 20 / 28

LTE-TDD: B38

WCDMA: B1 / 5 / 8"

- The telephone adaptor provides a Wi-Fi access point (WAP function).

WAP is a hardware networking device that allows other Wi-Fi devices to connect to a wireless network.

The default Wi-Fi Service Set Identifier (SSID) name is **GEEMARC CL2100 XXXX** (xxxx is the last four digits of the Wi-Fi MAC address (media access control address)).

An SSID (service set identifier) is a sequence of characters that uniquely names a Wi-Fi network.

A MAC address (short for medium access control address or media access control address) is a unique identifier assigned to a network interface controller

The default Wi-Fi password is **GEEMARC**. It is important to change this password for a strong password of your own. Refer to the Web UI management system for details.

- The default IP address of the router is **192.168.1.1**.


- You can log in to the WebUI at **<http://192.168.1.1> WEB UI** to set up and change various parameters including the router Wi-Fi password and Network Name (SSID). The initial login password for the WebUI is **admin**.

Note:

1. The router is powered by a USB type C cable connected to a computer or by an external power adapter (5V/2A).
2. On / OFF button.
3. Use the pinhole reset button to restore the router to factory settings.
4. Clear your browser history before you use the Web UI management system.
5. The telephone adaptor is equipped with a RJ11 telephone port and with two WLAN port.

Installation of your telephone adaptor

2. Installation of your telephone adaptor

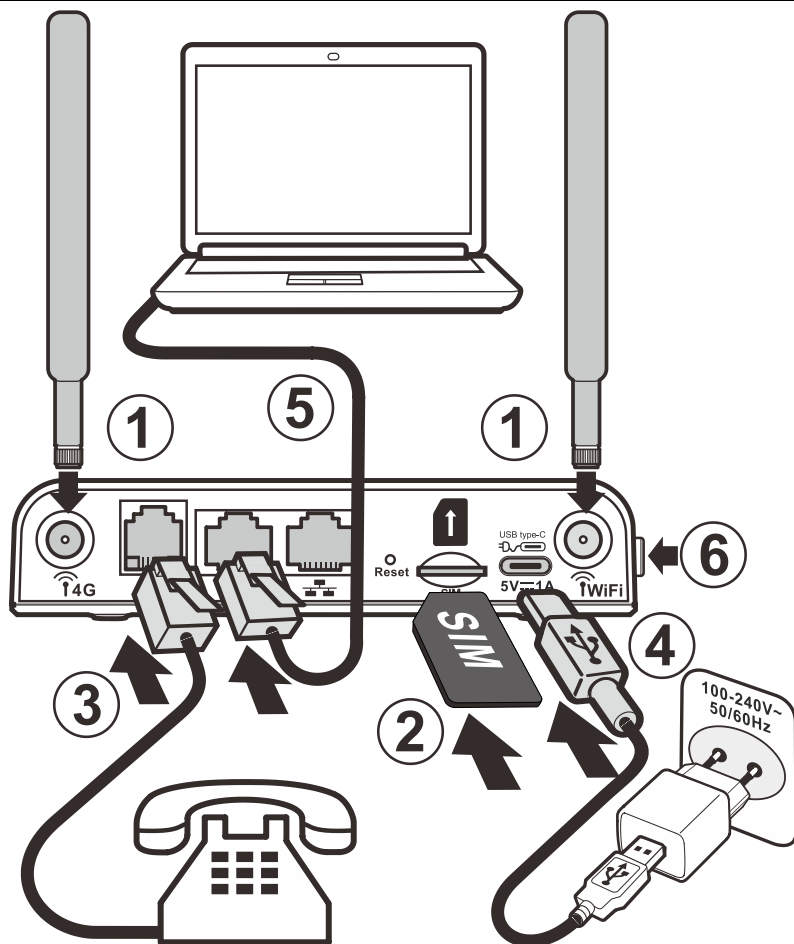

- ① Connect the 2 external 4G / Wi-Fi antennas.
- ② Insert the Nano SIM card.
- ③ Connect your landline (PSTN) phone with RJ11/RJ11 cable.
- ④ Connect the USB cable with your power adaptor. The Adapter is powered by USB-C (5V - 2A, 10W).
- ⑤ You can connect the RJ45 / RJ45 cable between a computer and the router to use internet.

Telephone adaptor introduction


- ⑥ Press and hold the ON/OFF button (1) until the power LED lights on.

3.1 LED “ON” - Status Identification



	LED	Working Status	LED Status
1	Power	Adapter is switched ON with battery charged.	ON
1	Power	Battery charging 1s ON / 1s OFF	Blinks
1	Power	Battery is low 0.5s ON / 0.5s OFF	Blinks
1	Power	Adapter is switch OFF and battery full charged	OFF
2	Wi-Fi	Wi-Fi signal is ready.	ON
3	4G Signal	Adapter is connected to a 4G mobile network (SIM inserted).	ON
4	Telephone	A voice call is in progress.	ON

3.2 Port & Button Identification

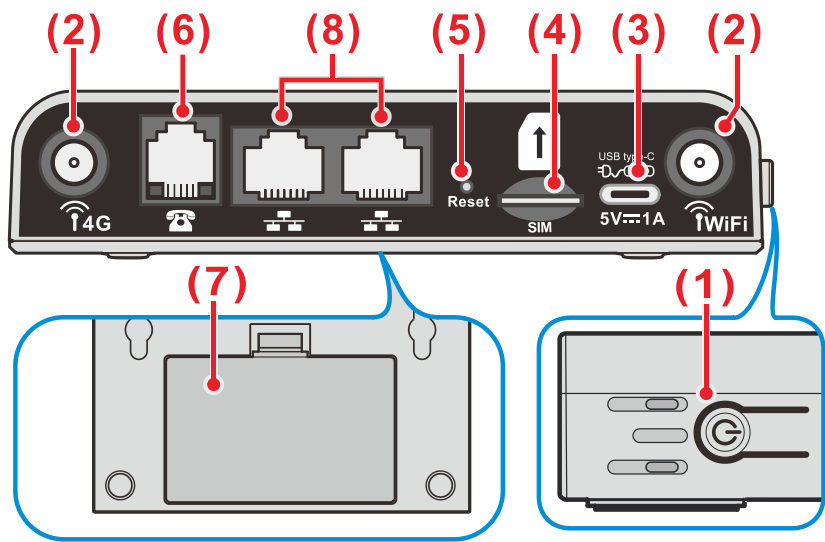

	Port / Button	Feature
1	POWER	Adapter power ON/OFF
2	Antenna Ports	Connects to external 4G / Wi-Fi antennas for better coverage
3	USB-C DC IN	Connect to 5V 2A USB POWER Adaptor
4	SIM Card Slot	Supports Nano SIM Card only
5	Reset	Recessed pin button to restore Adapter to factory settings
6	Telephone Socket	To connect a landline telephone (RJ11)
7	Battery door	Battery compartment
8	LAN/WAN	Connect router with PC via network cable by RJ45 cable.

4.1 Locate your telephone adaptor

Insert a 4G Nano SIM card with Data, with the PIN code deactivated (you will need to use a mobile phone to disabled the PIN code if this is not the case), with Mobile network provider enabled, into the SIM card slot (4). The CL2100 is compatible with all network operators.

Connect your landline phone to the CL2100 with an RJ11 telephone cable.

Use your phone to make and receive calls as normal. The Telephone LED indicator is on when a call is in progress. When your phone rings, answer it as normal.

4.2 Using your computer with the telephone Adapter

You have the possibility to connect by RJ45 / RJ45 cable two devices at your telephone adapter to use the data and navigate on internet.

Connect your computer to the CL2100 with RJ45 / RJ45 cable provided in the box.

LAN/ WLAN LED indicator is on when your device is connected.

Pairing your device by Wi-Fi

5. Pairing your device by Wi-Fi

Your CL2100 allows you to access your network from any location covered by the Wi-Fi network.

However, the strength and range of the wireless signal will vary depending on the actual environment in which your adaptor is located.

Many obstacles can limit the range of the wireless signal, such as concrete or metal structures.

For your safety and optimal Wi-Fi performance, please:


- Do not place the CL2100 where it will be exposed to moisture or excessive heat.
- Locate the adapter away from sources of strong electromagnetic radiation.
- Place the adapter in a location where it can be easily connected to your telephone and an electrical outlet.
- Place the adapter where there is a strong mobile Internet signal.
- Make sure that the cables and power cord are placed safely, out of the reach of children, to avoid tripping or other hazards.

Generally, the adapter is placed flat, such as on a shelf or desk and must be easily accessible.

It can also be mounted on the wall, as shown in the following illustration.

Drill 2 holes in the wall (89 mm apart).

Insert the wall plugs and the screws leaving about 2.5 mm of the screws projecting from the wall. Slide the telephone downwards to secure.

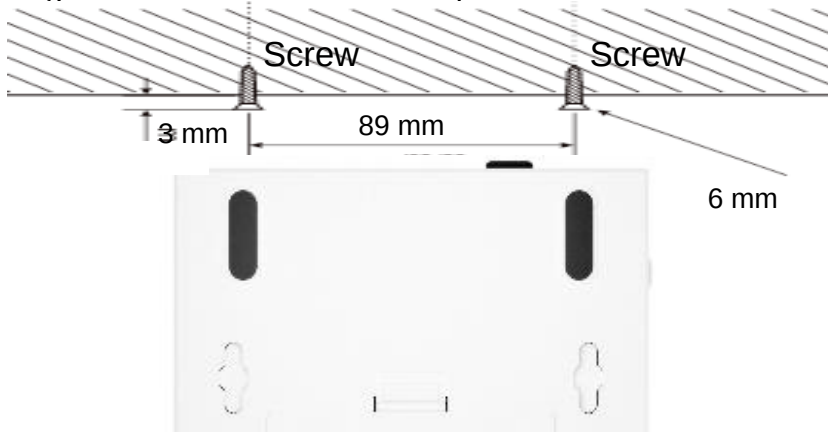

Your Adapter allows you to connect a tablet, mobile phone, computer or other device to the internet with Wi-Fi.

- 1) On your device Wi-Fi settings, search, then select **GEEMARC - CL2100**.
- 2) Enter the default password, which is printed underneath the adapter.

Your device is now connected to the internet (via the Adapter's Wi-Fi).

IMPORTANT: We strongly recommend that you change the default password for added online security – see the main user guide for details.

WiFi Data rates maximum 286.8Mbps@TX and 229.4Mbps@RX.

Wi-Fi 6 2.4GHz, 802.11b/g/n/ax



Quick settings – Basic Functions

The Web User Interface (Web UI) management system allows you to view and configure the status of the router. The Web UI management web pages work with most mainstream browsers such as Internet Explorer 11 and later, Firefox, Chrome, and Safari.

6.1 Basic Functions

1. The computer, mobile phone or tablet is connected to the Wi-Fi hotspot of the CL2100 via Wi-Fi.




The login page is displayed after the user enters **192.168.1.1** in the browser. Write:




You can see this display below.

2. Select your language desired then enter the Username and password is **admin** by default, you will find this information on the bottom of your CL2100.

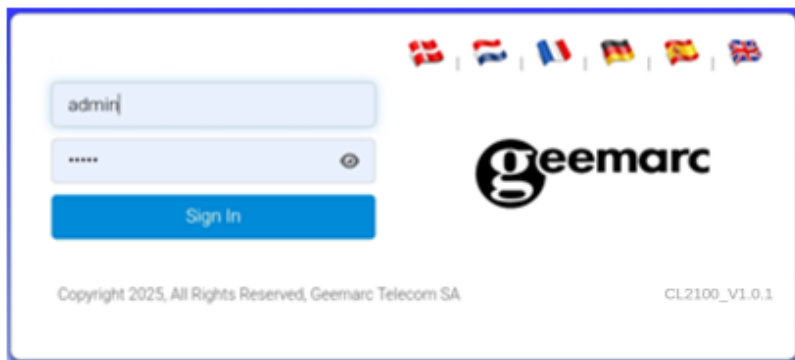

6.2 Settings

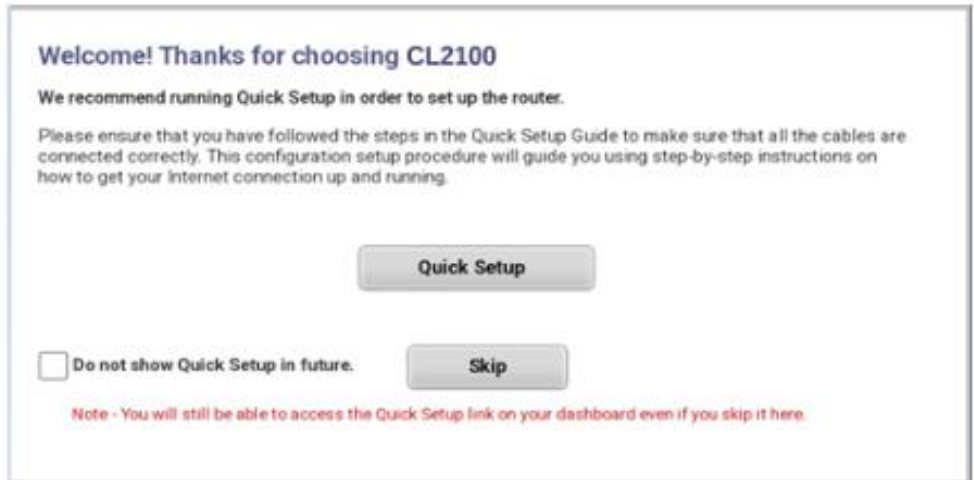

Welcome! Thanks for choosing CL2100

We recommend running Quick Setup in order to set up the router.

Please ensure that you have followed the steps in the Quick Setup Guide to make sure that all the cables are connected correctly. This configuration setup procedure will guide you using step-by-step instructions on how to get your Internet connection up and running.

☐ Do not show Quick Setup in future.

Note - You will still be able to access the Quick Setup link on your dashboard even if you skip it here.

If you wish to modify the settings, press on **Quick setup** else press on **Skip** to keep the setting by default.

The MIFI CL2100 **Quick Setup** tab is designed to assist you in connecting your new MIFI CL2100 to the Internet. This Quick Setup procedure guides you through step-by-step instructions on how to get an Internet connection up and running.

You can press on the square to remove the question at each connection.

6.2.1 User Settings


If you select Quick setup, you can see this first screen

This display, allow you to custom your CL2100 username and Password if you want, press **Next** to valid.

By default, the User name & Password are “**admin**”.

We invite you to change the Password for more security.

Quick settings – Settings

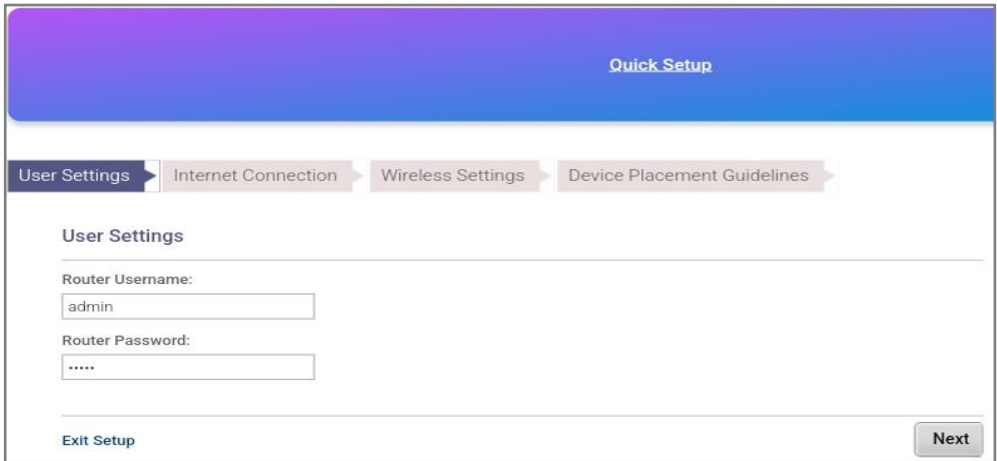

The screenshot shows the 'Quick Setup' interface with a blue header. Below the header, there are four tabs: 'User Settings' (active), 'Internet Connection', 'Wireless Settings', and 'Device Placement Guidelines'. The 'User Settings' tab contains two input fields: 'Router Username' with the value 'admin' and 'Router Password' with masked characters '*****'. At the bottom left is an 'Exit Setup' link, and at the bottom right is a 'Next' button.

6.2.2 Internet connection

This display, allow you to configure your internet connection type, if you want, press **Next** to valid or **Back** to modify a previous setting.

A) 2 types of connections are available:

Disable - No Internet connection. Only the wireless Home Network is active.

Cellular - This is the default mode of connectivity. You can insert your SIM into the router and the wireless clients associated can make use of it for internet connectivity! Also, note that in this mode, the Ethernet port can be used for connecting any LAN side clients. For 3G USB Modem, there is a bunch of ISPs that we support - you can select one of them from a dropdown list. In addition, you can update the CL2100's ISP database by uploading your local ISP settings file.

B) Network mode

You have the possibility to configure the type of network, different possibilities:

4G/3G/2G multimode - All the network mode is enabled.

4G only - Only 4G is enabled.

4G/3G only - Only 4G and 3G is enabled.

3G/2G only - Only 3G and 2G is enabled.

Disable NW settings - All the network is disabled.

C) Preferred Network Mode –

You allow to configure the type of network that we like to use.

D) Preferred LTE Type

2 possibilities:

TD LTE: TDD technique allows for higher throughput in the DL direction compared to the UL direction. This setting is preferable for making and receiving telephone calls.

LTE FDD: The FDD technique theoretically allows for lower latency.

E) Connection mode

2 possibilities to set the connection mode preferred (Auto or manual).

Quick Setup

User Settings > Internet Connection > Wireless Settings > Device Placement Guidelines

Choose the method to be used by the device to connect to the internet

My Internet Connection Is
Cellular

Network Mode
4G/3G

Preferred Network Mode
4G Preferred

Preferred LTE Type
TD-LTE preferred

Connection Mode:
Auto ☐ prohibit automatic dial-up in the roaming status.

Exit Setup Back Next

6.2.3 Wireless settings

This display, allow you to custom your Wifi connection, if you want, press **Next** to valid or **Back** to modify a previous setting.

A) Network name (SSID)

You allow to change the name of your CL2100 on the Wi-Fi network.

B) Network Visibility status

4 possibilities are available: Disabled, WPA2-PSK, WPA-WPA2 mixed and WAPI-PSK.

Disabled -- No wireless security. All traffic may be read by others.

WPA2-PSK -- The Highest Level of Security. Passwords should be at least 8 characters and contain characters besides letters and numbers such as, #, @, % & etc. Only devices that support WPA2-PSK may associate. WPA2 Cipher is AES.

WPA-WPA2 Mixed -- WPA2-PSK or WPA-PSK Security method depending on the device that needed to connect. Passwords should be at least 8 characters and contain characters besides letters and numbers such as, #, @, % & etc. WPA2 Cipher is AES. WPA Cipher is TKIP/ AES.

WEP -- The WEP Security is used if the devices that use the home router do not support WPA or WPA2. WEP security is based on a fixed size password. Older devices only support 5 characters (40 bit) newer devices support 13 characters (104 bit). The 13 characters' security are better than 5 characters.

C) Password

The password by default is XXXXXXXX, you can find this password under the CL2100. We invite you to change the Password for more security.



D) WPA Cipher

WPA Cipher -- An encryption algorithm used to secure the data communication. Temporal Key Integrity Protocol (TKIP) provides per-packet key generation and is based on WEP. The Advanced Encryption Standard (AES) is another very secure encryption option. With the "TKIP and AES" option, the telephone adaptor negotiates the cipher type with the client, and uses AES when available.

Quick Setup

User Settings | Internet Connection | **Wireless Settings** | Device Placement Guidelines

Wireless Network Settings

Network Name (SSID):
GEEMARC-CL2100

Network Visibility Status:
☒ Visible ☐ Invisible

Wireless Security:
WPA2-PSK

Add WPS Client

Password:

☐ Unmask Password

WPA Cipher:
AES (Stronger)

Exit Setup Back Next

6.2.4 Device Placement Guidelines

This display, inform you on the position to place your CL2100 at your home, if you want, press **Next** to valid or **Back** to modify a previous setting.

Quick Setup

User Settings

Internet Connection

Wireless Settings

Device Placement Guidelines

It is recommended that you do not place your wireless router near a Microwave, Home Cordless Phone, a Baby Monitor, Bluetooth devices (such as a headset or a Bluetooth keyboard or a Bluetooth mouse) and any other wireless network devices.

 Microwave

 Bluetooth Devices

 Cordless Phone

 Other Wireless Network Devices

 Baby Monitor


Back

Finish

18

6.2.5 Dashboard

The **Dashboard** page allows you to view basic information including status of the internet connection, router, home network and the number of Connect Devices.

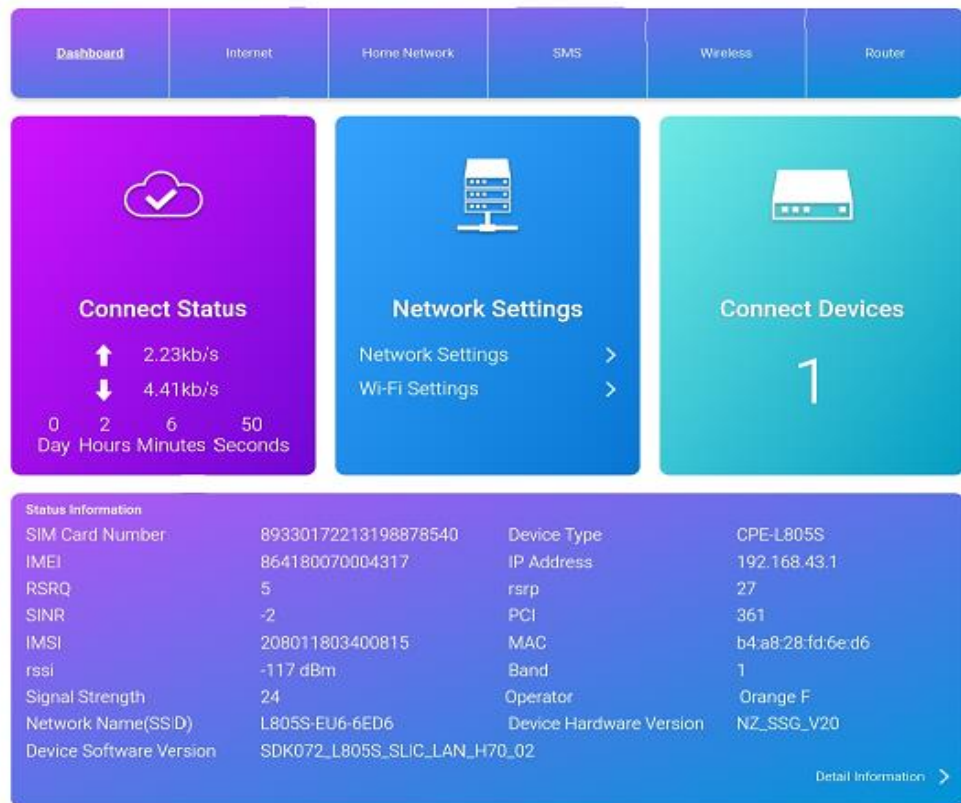

7.1 Internet

The **Internet** page allows you to set the internet connection, PIN management, manual network, USSD, APN Settings then Brand selection.

7.1.1 Internet connection

See chapter 6.2.2 for more information.

DashboardInternetHome NetworkSMSSMSWirelessRouter

Internet ConnectionInternet ConnectionPIN ManagementManual NetworkUSSDAPN SettingsBand Selection

Internet Connection

My Internet Connection is
Cellular

Network Mode
4G/3G

Preferred Network Mode
4G Preferred

Preferred LTE Type
TD-LTE preferred

Connection Mode:
Auto

☐ prohibit automatic dial-up in the roaming status.

Save

7.1.2 Pin management

This menu allows you to set the PIN/ PUK attempts of your SIM card.

DashboardInternetHome NetworkSMSSMSWirelessRouter

Internet ConnectionPIN ManagementManual NetworkUSSDAPN SettingsBand Selection

PIN/PUK Attempts

The number of PIN attempts left: 3
The number of PUK attempts left: 10

Enable PIN

Enable PIN

7.1.3. Manual Network

Dashboard	Internet	Home Network	SMS	Wireless	Router
Internet Connection PIN Managment Manual Network USSD APN Settings Band Selection Manual Network Manual Scan Network Selectable Network: Auto Manually select network when system start ☐ I want to manually select network when system start LTE background scan network time 5 minutes Current Select Network Mode Automatic Mode Save					

7.1.4 USSD

USSD (Unstructured Supplementary Service Data) is a Global System for Mobile Communications (GSM) protocol that is used to send text messages. USSD is similar to Short Message Service (SMS).

Dashboard	Internet	Home Network	SMS	Wireless	Router
Internet Connection PIN Managment Manual Network USSD APN Settings Band Selection USSD Service Please Input USSD Business Number to Dial-Up Dial					

7.1.5 APN Settings

This menu allows you to set the Access point Name information. APN provides all the details that your device needs to connect to mobile data. If you are setting up a new device or putting your SIM card into a device for the first time, your network operator should send you their APN details in a configuration message.

DashboardInternetHome NetworkSMSSMSWirelessRouter

Internet ConnectionPIN ManagementManual NetworkUSSDAPN SettingsBand Selection

APN Settings

APN Manual Setting

Disabled

Save

7.1.6 Band Selection

This menu allows you to set the band selection.

DashboardInternetHome NetworkSMSSMSWirelessRouter

Internet ConnectionPIN ManagementManual NetworkUSSDAPN SettingsBand Selection

Band Selection

Working network mode

4G/3G multiple

Priority mode of work

4G preferred

Frequency band selection mode

auto

Save

7.2 Home Network settings

The **Home Network** page allows you to configure the gateway address and IP address of the router.

NOTE: The number of Wi-Fi devices connected to the CL2100 can limit the speed and capacity of the Wi-Fi connection.

7.2.1 DHCP Settings

The screenshot displays the 'Home Network' settings page with the 'DHCP Settings' tab selected. The interface includes a top navigation bar with tabs for Dashboard, Internet, Home Network, SMS, Wireless, and Router. A left sidebar lists navigation options: DHCP Settings, Connected Devices, Network Activity, Custom Firewall Rules, Port Filter, and Port Forwarding. The main content area is titled 'DHCP Settings' and contains the following configuration fields:

- DHCP Range:** A dropdown menu showing '192.168' followed by input fields for '43' and '1'.
- Router LAN IP:** A text field displaying '192.168.43.1'.
- DHCP Server:** Radio buttons for 'Enabled' (selected) and 'Disabled'.
- DHCP Start Address:** Input fields for '192', '168', '43', and '100'.
- DHCP End Address:** Input fields for '192', '168', '43', and '200'.
- DHCP Lease Time:** A text field with '86400' and a label '(In Seconds)'.
- DNS Configure Switch:** A dropdown menu set to 'Disabled'.
- DNS1 IP Address:** An empty text field.
- DNS2 IP Address:** An empty text field.
- Redirection Function:** Radio buttons for 'Enabled' and 'Disabled' (selected).
- Add Static IP:** A button located at the bottom right of the DHCP settings section.
- Static IP Table:** A table with two columns, 'MAC Address' and 'IP Address'. The table is currently empty, showing 'No entries found.'.
- DHCPV6 Settings:** Radio buttons for 'Stateless Server' (selected) and 'Stateful Server'.
- Save:** A button at the bottom right of the page.

Dynamic Host Configuration Protocol (DHCP) is used to dynamically assign Internet Protocol (IP) addresses to each host on your organization's network. In this DHCP meaning, a host can refer to any device that enables access to a network.

DHCP Range -- Selects the basic IP address range, in which the start and the end DHCP IP addresses range are assigned.

Start DHCP Address and End DHCP Address -- Defines a range of addresses that the DHCP Server uses when assigning addresses to

Full settings – Home Network settings

computers and devices on your Local Area Network. Any addresses that are outside this range are not managed by the DHCP Server; these could, therefore, be used for manually configured devices or devices that cannot use DHCP to obtain network address details automatically.

7.2.2 Connected devices

The Connected Devices screen displays a list of devices that are connected to the network. The Connected Devices screen also allows the user to block access to the Internet to a specific device.

DashboardInternetHome NetworkSMSSMSWirelessRouter

DHCP Settings

Connected Devices

Network Activity

Custom Firewall Rules

Port Filter

Port Forwarding

Connected Devices

Name	Status	IP Address	MAC Address	Connection	Connected time
Redmi-Note-12		192.168.1.200	ea:5f:1e:00:5e:b6	WLAN	0 Hour 14 Minutes 49 Seconds

7.2.3 Network activity

The Network Activity screen displays a list of dialer logs and WIFI client connect and disconnect log.

DashboardInternetHome NetworkSMSSMSWirelessRouter

DHCP Settings

Connected Devices

Network Activity

Custom Firewall Rules

Port Filter

Port Forwarding

Last Login Time: 3/20/2025 14:20:53

Access Logs

PDP Name	CID	Start Time	End Time	IP Type	IPv4 Addr	IPv6 Addr	
PDP1	1	1/1/2014 0:0:16	3/19/2025 10:48:17	IPv4	10.137.3.249	N/A	☐

WiFi Client Access Logs

Client MAC Address	Connect Time	Disconnect Time	
EA:5F:1E:00:5E:B6	3/19/2025 10:56:9	3/19/2025 11:3:12	☐

7.2.4 Custom firewall Rules

Custom Firewall Rules can be used to block the network traffic the using source IP address, source ports, destination IP address, destination ports or any combination of these parameters.

Dashboard

Internet

Home Network

SMS

Wireless

Router

DHCP Settings

Connected Devices

Network Activity

Custom Firewall Rules

Port Filter

Port Forwarding

Custom Firewall Rules

Custom Firewall Rules can be used to block the network traffic the using source IP address, source ports, destination IP address, destination ports or any combination of these parameters.

Add Rule

Rule Name	Enabled	Source IP Address	Source Port	Destination IP Address	Destination Port	Protocol
No entries found.						

7.2.5 Port filter

Dashboard

Internet

Home Network

SMS

Wireless

Router

DHCP Settings

Connected Devices

Network Activity

Custom Firewall Rules

Port Filter

Port Forwarding

Port Filter

Port Filter Mode

Enabled

Disabled

Save

Add Port Filter

Rule Name	Protocol	Trigger Port	Response Port
No entries found.			

7.2.6 Port forwarding

Dashboard

Internet

Home Network

SMS

Wireless

Router

DHCP Settings

Connected Devices

Network Activity

Custom Firewall Rules

Port Filter

Port Forwarding

Port Forwarding

Custom Port Forwarding Rules


Enabled

Disabled

Save

7.3 SMS settings

7.3.1 Display the message received

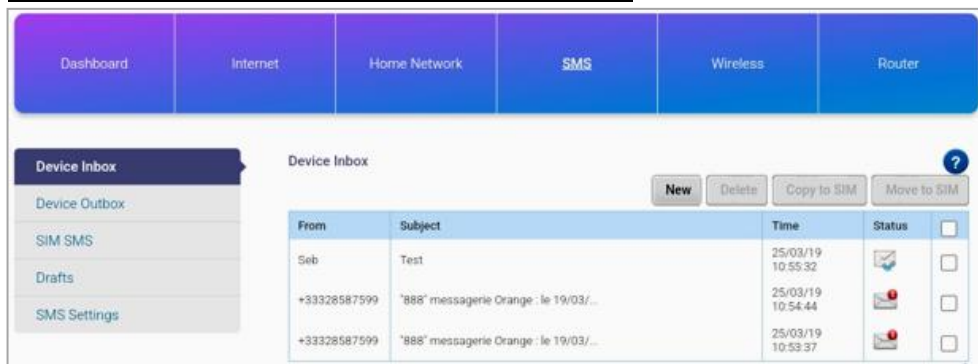

In Device Inbox, you will find all the messages that you have received.

This icon means that the message has not been read.

This icon means that the message has not been read.

Tap on status of your mail to view the message, you have the possibility to reply to your message then select **Send** to send your message.

Select **Save** to save your message in Drafts.

Select **Cancel** to delete the message.

7.3.2 Display the message sent



In Device Outbox, you will find all the messages that you have sent.

This icon means that the message has been sent.


Tap on status of your mail to view the message, you have the possibility

to reply to your message then select **Send** to send your message.
Select **Save** to save your message in Drafts.
Select **Cancel** to delete the message.


7.3.3 Create a new message

Press **New** then enter your contact phone number of your contact then write your message.

Select **Send** to send your message.

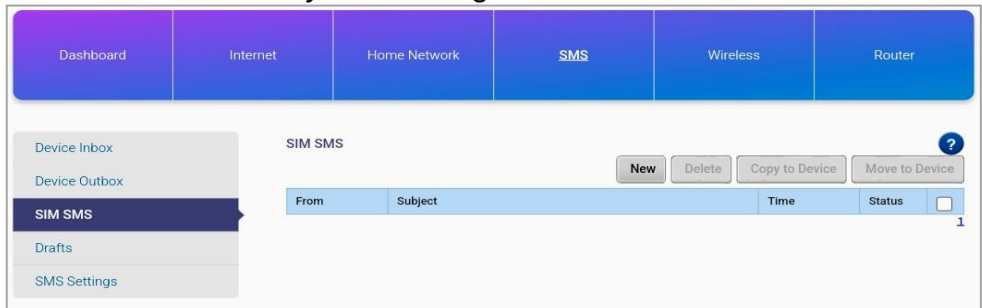

7.3.4 Display the Draft message

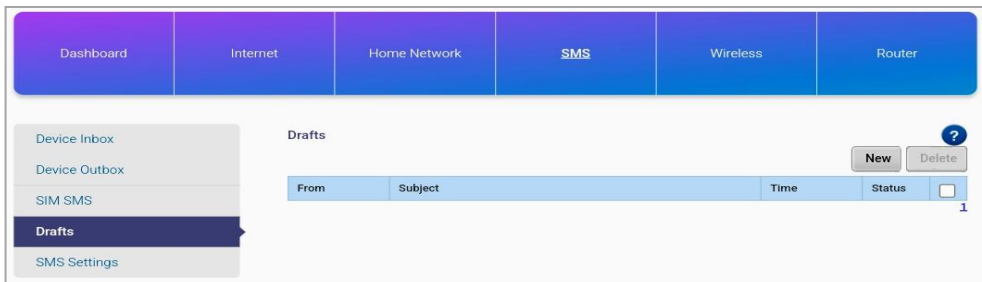

Under Drafts, you will find all the messages that you have in Draft status.

This icon  means that the message has not yet been sent.

Tap on status of your message to view the message, you have the possibility to reply or continue your message then select **send** to send your message.

Select **Save** to save your message in Drafts.

Select **Cancel** to delete the message.

7.3.5 Settings of the SMS

DashboardInternetHome NetworkSMSWirelessRouter

Device InboxDevice OutboxSIM SMSDraftsSMS Settings

SMS Settings?

Delivery Report
☐ Enabled ☒ Disabled

SMS Save Location
Device

SMS Over Mode
SMS Over PS Prefer

Validity
Maximum

Center Number
+33689004000

Save

The SMS settings allow you to configure the message center. When the message center is activated, you can change the number of the message center via which messages will be sent. It is not recommended that you change this, as the wrong message center number will affect the CL2100's SMS function.

7.4 Wi-Fi settings

The **Wireless** page allows you to set the Wi-Fi name and password, hidden Wi-Fi, encryption type, MAC filter modes and firewall.

7.4.1 Wireless setting

The wireless setting section allows user to define the status of the Wi-Fi, to select the 802.11 mode (type de Wi-Fi to use follow the places).

Primary channel allows you to set the channel of your Wi-Fi.

Primary channels are the main 20 MHz frequency bands used for wireless communication, while secondary channels are additional 20 MHz bands paired with primary channels to expand bandwidth to 40 MHz. This expansion increases data throughput and network efficiency.

Band 40 is an LTE operating frequency Band. LTE is designed to work across a number of frequency bands – E-UTRA operating bands- currently ranging from 450 MHz up to 3.8GHz. The available bandwidths are also flexible starting with 1.4 MHz up to 20 MHz with Carrier Aggregation allowing use of wider multiples.

Note: Does not forget to press on save to validate your modification.

Dashboard Internet Home Network SMS **Wireless** Router

Wireless Settings

Wireless Security Settings

Wireless MAC Filters

Wireless Settings

Status:
☒ Enabled ☐ Disabled

802.11 Mode:
 802.11 ax

Primary Channel:
 Automatic

Secondary Channel
 Above

Band40 ACS Switch
☒ Enabled ☐ Disabled

Save

7.4.2 Wireless Security Settings

The Wireless Security section allows users to define the network as well as the security parameters for the wireless home network as required. The factory default setting for security is WPA-WPA2 Mixed mode that allows only the WPA/WPA2 devices to associate with the home router.

You can choose whether or not to make the WiFi visible.

Note: Does not forget to press on save to validate your modification.

DashboardInternetHome NetworkSMSSaveWirelessRouter

Wireless SettingsWireless Security SettingsWireless MAC Filters

Wireless Security Settings

Network Name (SSID):
L805S-EU6-6ED6

Network Visibility Status:
☒ Visible ☐ Invisible

Wireless Security:
WPA2-PSK

Add WPS Client

Password:

☐ Unmask Password

WPA Cipher:
AES (Stronger)

Save

7.4.3 Wireless MAC Filter

DashboardInternetHome NetworkSMSSaveWirelessRouter

Wireless SettingsWireless Security SettingsWireless MAC Filters

Wireless MAC Filters

MAC Filters:
☐ Enabled ☒ Disabled

Save

The MAC address (located under the CL2100) is used to uniquely identify a network device. MAC addresses are used in most network systems, whether wireless (Bluetooth, Wi-Fi, etc.) or wired (Ethernet, ATM, etc.).

The wireless MAC filters screen allows you to enable / disable MAC filters.

Also, you can delete multiple MAC filters selectively from 'Allow' or from 'Deny' list.

Note: *doesn't forget to press on save to validate your modification.*



7.5 Router Management

The **Router** page allows you to view account information, restore factory settings, and restart the device.

7.5.1 User Management

Dashboard

Internet

Home Network

SMS

Wireless

Router

User Management

Configuration Management

Software Upgrade

Reboot Router

Power Off Router

Time Setting

User Management

Add New Account

User Name	Access Level	Action
admin	Standard	Delete

7.5.2 Configuration Management

In pressing **Restore factory settings**, you come back with the factory settings.

Dashboard

Internet

Home Network

SMS

Wireless

Router

User Management

Configuration Management

Software Upgrade

Reboot Router

Power Off Router

Time Setting

Configuration Management


Restore Factory Settings

This option resets the router to the factory defaults. The existing settings will be lost.

Restore Factory Settings


7.5.3 Software Management

In pressing **Update**, you can upload your CL2100 at the last version.

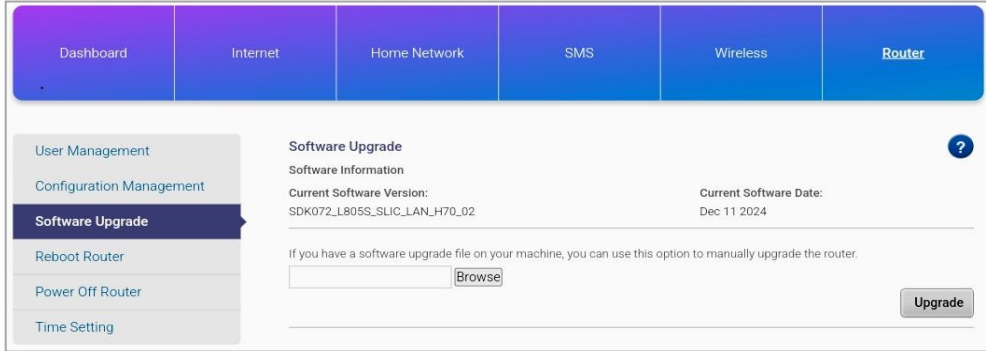


7.5.4 Reboot Router

In pressing the function **Reboot Router**, your CL2100 will restart.

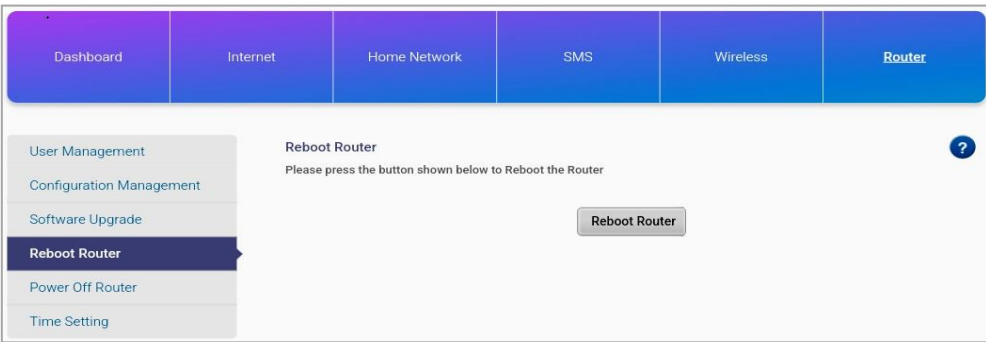

7.5.5 Power off Router

In pressing **Power off Router**, you can turn off your CL2100.

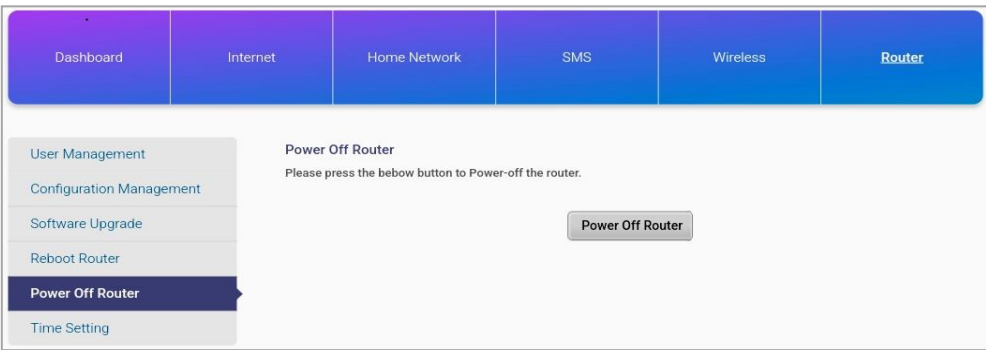

7.5.6 Time Settings

Allows you to set the date & hour of your CL2100.

Dashboard

Internet

Home Network

SMS

Wireless

Router

User Management

Configuration Management

Software Upgrade

Reboot Router

Power Off Router

Time Setting

Time Setting

Year\Month\Day:
2025 / 1 / 10

Hour:Minute:Second(24H):
10 : 10 : 54

NTP Status
☒ Enabled ☐ Disabled

Save Current Time

Troubleshooting

8. Troubleshooting

Problem	
POWER light is OFF (Adapter not working).	• Adapter is not connected to a USB power supply. USB power supply switched off / not working.
Unable to make or receive a call	• Double check the SIM card, and the quality / signal strength of the 4G network signal.
Device (laptop, smartphone etc.) cannot connect to the Adapter via Wi-Fi.	• Verify that your SIM card is properly inserted. • Verify that your SIM card has sufficient credit. • Verify that you have selected the Adapter and that Wi-Fi is enabled on your device. • Check the mains power adapter and cable are properly connected to the USB Type C port. • Verify that the Wi-Fi password is correct (underneath the Adapter).
How do I restore the Adapter to factory setting?	• Push the button in the reset hole with a pin and hold for 3 seconds to restore to factory setting.
What do you do if you forget your Wi-Fi password?	• Use the default password underneath the Adapter (if you have not changed the password). If you have changed the password refer to the main user guide.
If the problem persists	• Download the full user guide from the Geemarc website, or contact your retailer after sales service.
Nothing works	• Double check that you have deactivated the PIN code
4 LED's blink	An update is being installed

NOTE: For the best use of this product, we strongly recommend you download the full user guide from our website at: <https://geemarc.com/uk/user-guides> , then search CL2100.

Guarantee. Declaration

9. Guarantee

From the moment your Geemarc CL2100 product is purchased, Geemarc guarantee it for the period of two years. During this time, all repairs or replacements (at our discretion) are free of charge. Should you experience a problem then contact our Helpline or visit our website at **www.geemarc.com**. The guarantee does not cover accidents, negligence or breakage to any parts. The product must not be tampered with or taken apart by anyone who is not an authorised Geemarc representative.

The Geemarc guarantee in no way limits your legal rights.

Important: YOUR RECEIPT IS PART OF YOUR GUARANTEE AND MUST BE RETAINED AND PRODUCED IN THE EVENT OF A WARRANTY CLAIM.

10. UKCA & CE DECLARATION

Geemarc Telecom SA hereby declares that this CL2100 is in compliance with the essential requirements and other relevant provisions of the Radio Equipment Directive 2014 / 53 / UE.

The CE and UKCA declarations of conformity may be consulted at www.geemarc.com



BATTERY WARNINGS

- **DO NOT** attempt to dismantle.
- **DO NOT** dispose of in fire.
- **DO NOT** swallow.
- Keep away from children.
- **DO NOT** short-circuit the Battery Contact terminals.
- **Caution:** Risk of explosion if battery is replaced incorrectly or if the wrong type of battery is used. Dispose of used batteries according to the instructions.



SAR Test:

Head : 0.01 W/kg

Body : 1.647 W/kg

LIMBS : 2.977 W/kg

11. WEEE declaration

(Waste Electrical and Electronic Equipment) directive ensures that electrical products at the end of their useful life are disposed and recycled in an appropriate way that protects the environment.

When this product is finished with, please do not put it in your domestic waste bin.

Please use one of the following disposal options:

- Deposit the product in an appropriate WEEE skip (contact your local authority to find out where these are).
- Or, hand the old product to the retailer. If you purchase a new one, they should accept it.

If you respect these instructions, you ensure human health and environmental protection.

12. Technical specifications

Operating voltage	: 5V / 2A / 10W
Battery capacity	: 3.7V, 4000mAh Lithium Polymer Battery
Battery operating time	: Up to 10 hours or 40 hours in Stand by



For product support and help visit our website at
www.geemarc.com

Parc de l'étoile, 2 rue Galilée, 59760 Grande-Synthe,
France

E-mail: **help@geemarc.com**

Telephone: **01707 387602**

lines are open from **10:00-12:00** then **13:00-14:30**
Mon. to Fri.

Made for Geemarc Telecom S.A. in China

